



Contents

00 - Technical data	1
1 Technical data	1
1.1 Front wheel brake - FS II	1
1.2 Rear wheel disc brake	2
1.3 Rear wheel drum brake	3
1.4 Specifications	3
45 - Anti-lock brake system	5
1 General information on the anti-lock braking system (ABS)	5
2 Information on repair works on the ABS	6
3 Connect Vehicle diagnostic, testing and information system VAS 5051A /52 and select functions	8
4 Electrical/electronic components and installing locations	9
4.1 ABS Bosch	9
5 Hydraulic unit, servo brake/master cylinder - Bosch ABS assembly overview of assembly	11
5.1 Hydraulic unit connections	13
5.2 Command unit for hydraulic unit - remove and install	13
6 Fault indication via control lights	19
7 ABS system components on the front and rear axles - remove and install	21
7.1 Remove and install the ABS system components from the front axle	21
7.2 Bosch front speed sensor cables - remove and install	22
7.3 ABS system components on rear axle (vehicles with drum brakes) - remove and install	27
7.4 ABS system components on rear axle (vehicles with disc brakes) - remove and install	32
46 - Brakes - mechanism	34
1 Front wheel brake disk - repair	34
1.1 FS II Disc brake cylinder - repair	34
1.2 Brake pads, FS II brake calipers - remove and install	35
1.3 FS II brake caliper - remove and install	37
1.4 Brake disc - remove and install	39
1.5 Brake disk (knocking) - check	40
1.6 Brake disc - check	41
2 Rear wheel drum brake - repair	45
2.1 Rear wheel brake - remove and install	45
2.2 Brake drum - repair	47
2.3 Brake shoes - remove and install	48
3 Rear wheel disc brake - repair	52
3.1 Brake pads - remove and install	54
3.2 Brake caliper - remove and install	57
4 Handbrake - assembly overview	59
4.1 Handbrake lever - remove and install	60
5 Handbrake cable - repair	61
5.1 Handbrake cable (drum brakes) - assembly overview	61
5.2 Handbrake cable (disc brakes) - assembly overview	62
5.3 Handbrake cable (drum brake) - remove and install	62
5.4 Handbrake cable (disc brake) - remove and install	65
5.5 Handbrake (drum brake) - adjust	67
5.6 Handbrake (disc brake) - adjust	68
5.7 Handbrake switch - remove and install	69
6 Brake pedal - assembly overview	71



6.1	Servo brake pedal - separate	71
6.2	Pedal set - remove and install	72
6.3	Brake pedal - remove and install	73
6.4	Brake light sensor F - remove and install	74
47	Brakes - hydraulics	75
1	FS II front brake caliper - repair	75
1.1	Plunger for front brake caliper - remove and install	76
2	Rear brake caliper - repair	78
2.1	Plunger for rear brake caliper - remove and install	79
2.2	Tightness assessment	81
3	Vehicles without braking power adjustment - assembly overview	82
4	Vehicles without braking power adjustment - general overview of assembly	83
4.1	Braking power adjustment - adjust	84
4.2	Braking power adjustment - check	84
5	Bleed the brake system	86
5.1	Bleed the brake system with the filling and bleeding equipment	86
5.2	Brake system, (vehicles with ABS) - bleed when the tank is empty	87
6	Assembly overview: Brake server/brake master cylinder	89
6.1	Flexible vacuum tube.	90
7	Brake cylinder - remove and install	91
7.1	Vehicles with ABS	91
7.2	Vehicles without ABS	93
8	Brake servo - remove and install	96
8.1	Removal	97
8.2	Installation	99
9	Vacuum system - Check	100
9.1	Test instructions	100
9.2	Servo brake vacuum measurement device VAS 6721 - connect	101
9.3	Vacuum generation control	102
9.4	Leak control	102
9.5	Vacuum generation with the manual vacuum pump VAS 6213	104
9.6	Retention valve - check	104