

Contents

1	Overview of engines	1
2	Description of work	3
2.1	Lights, electrical equipment, switches, displays and other driver-operated controls: checking operation	3
2.2	Vehicle keys: checking operation	3
2.3	Windscreen wiper/washer system and headlight washer system: checking jet settings and operation	4
2.4	Windscreen washer system: Checking jet settings, adjusting jets if necessary (vehicles up to model year 2002)	4
2.5	Windscreen washer system: Checking jet settings, adjusting jets if necessary (vehicles from model year 2003 onwards)	4
2.6	Headlight washer system: checking jet settings	5
2.7	Windscreen and headlight washer system: topping up with washer fluid	5
2.8	Wiper blade: checking park position and checking for damage	6
2.9	Electric windows: checking positions	7
2.10	Clock: setting	7
2.11	Air conditioner: checking operation and setting temperature to 22 °C	7
2.12	Radio / Navigation System Plus (Chorus, Concert, Symphony): deactivating transport mode	8
2.13	Radio or Navigation System Plus: activating anti-theft coding by entering fixed code number	10
2.14	Self-diagnosis: interrogating fault memory with V.A.G 1551 or VAS 5051	11
2.15	Instrument cluster: setting the language	12
2.16	Service interval display: resetting LongLife Service	14
2.17	Service interval display: resetting Inspection Service (fixed interval)	30
2.18	Direct shift gearbox: 5-speed 085 DS: performing basic setting	44
2.19	Door arresters and lock cylinders: lubricating	48
2.20	Sun roof: cleaning and lubricating	49
2.21	Telematics: renewing emergency backup battery	49
2.22	Battery: checking fluid level	50
2.23	Battery: checking "no load" voltage before starting the engine for the first time (only applies to stock vehicles)	51
2.24	Battery: checking that battery cables are securely fitted	52
2.25	Battery: performing load test	53
2.26	Bonnet: removing	54
2.27	Engine cover panel: removing	54
2.28	Engine (from above and below) and engine compartment: visual check for leaks and damage	55
2.29	Poly V-belt: checking condition (petrol engines)	55
2.30	Toothed belt for camshaft drive and coupling drive: checking (4-cylinder petrol engine) ..	56
2.31	Toothed belt and tensioning roller for camshaft drive: renewing (TDI engines, unit injector)	57
2.32	Cooling system: checking antifreeze and topping up with coolant if necessary	57
2.33	Air cleaner: cleaning housing and renewing filter element	59
2.34	Spark plugs: renewing	59
2.35	Hydraulic system: checking for leaks, checking hydraulic fluid level and topping up if necessary	61
2.36	Dust and pollen filter: renewing	61
2.37	Transport locks: removing locking elements for front suspension struts	63
2.38	Noise insulation: removing	63
2.39	Manual gearbox/final drive: checking oil level, topping up with oil if necessary	64
2.40	Direct shift gearbox 5-speed 085 DS: checking fluid level, topping up with hydraulic fluid if necessary	64
2.41	Engine oil: draining or extracting, changing oil filter	68
2.42	Fuel filter: renewing (up to chassis no. 8Z 2 070 000)	70
2.43	Fuel filter: renewing (from chassis no. 8Z -3-000 001)	72



2.44	Brake system: visual check for leaks and damage	73
2.45	Brake pads: checking thickness	74
2.46	Underseal: visual check for damage	74
2.47	Track rod ball joints: checking play, security and boots	75
2.48	Tyres: checking condition, wear pattern, tread depth and correcting inflation pressures.	75
2.49	Tyre repair kit: checking	77
2.50	Winter tyres (factory-fitted)	77
2.51	Wheel bolts: tightening to specified torque	77
2.52	Engine oil: filling up	78
2.53	Engine: checking oil level	80
2.54	Brake fluid level (depends on brake pad wear): checking	80
2.55	Brake fluid: changing (every 2 years)	81
2.56	Headlights: checking settings and adjusting if necessary	86
2.57	Road test	89
3	Type plate, vehicle identification number	90
4	Lifting the vehicle	92
5	Tow-starting/towing	93
6	Vehicle tests carried out as part of inspection services and maintenance	96