

Contents

91 - Radio, telephone, navigation	1
1 Radio systems	1
1.1 General information and description	1
1.2 Block diagram of radio systems	2
1.3 Connectors at "chorus" radio	6
1.4 Connectors at "concert" radio	7
1.5 Connectors at "symphony" radio	10
1.6 Connector at BOSE amplifier	12
1.7 Connector at amplifier	13
1.8 Connector at CD changer	14
1.9 Connectors at aerial selection control unit J515	14
1.10 Aerial connection points on tailgate window	14
1.11 Overall layout of radio systems	16
1.12 Removing and installing radio	21
1.13 Removing and installing loudspeakers	22
1.14 Removing and installing CD changer R41	25
1.15 Removing and installing amplifier	26
1.16 Removing and installing BOSE amplifier	26
1.17 Removing and installing aerial amplifier	27
1.18 Removing and installing aerial selection control unit J515	27
2 Telephone systems	28
2.1 General information and description	28
2.2 Block diagram of telephone systems	28
2.3 Connectors at control units	32
2.4 Overall layout of telephone systems	35
2.5 Removing and installing cradle holder	36
2.6 Removing and installing mobile telephone operating electronics control unit J412 (up to MY 03)	37
2.7 Removing and installing mobile telephone operating electronics control unit J412 (as of MY 04)	38
2.8 Removing and installing aerial amplifier, mobile telephone R86	39
2.9 Removing and installing telephone/telematics control unit J526 (telephone operation only)	39
2.10 Removing and installing telephone microphone R38	40
2.11 Removing and installing telephone/navigation systems loudspeaker R39	40
2.12 Removing and installing telephone aerial R65	41
2.13 Removing and installing telephone aerial R65 (glass roof panel)	42
3 Navigation system II-D (navigation system Plus) RNS 4.1	44
3.1 General information and description	44
3.2 Fault message display	45
3.3 Block diagram of navigation system II-D	45
3.4 Connectors at operating electronics control unit, navigation J402	48
3.5 Connectors at TV tuner J415	50
3.6 Connectors at navigation interface R94	52
3.7 Connectors at aerial selection control unit J515	52
3.8 Overall layout of navigation system II-D	54
3.9 Removing and installing operating electronics control unit, navigation J402	55
3.10 Removing and installing TV tuner J415	56
3.11 Removing and installing TV aerial amplifiers	57
3.12 Removing and installing navigation interface R94	57
3.13 Removing and installing navigation aerial (GPS) R50	57
3.14 Checking operation of individual aerial amplifiers	58
4 Navigation system III	61

4.1	General information and description	61
4.2	Block diagram of navigation system III	61
4.3	Connectors at navigation system with CD drive control unit J401	62
4.4	Overall layout of navigation system III	63
4.5	Removing and installing function selection switch E272	64
4.6	Removing and installing navigation aerial (GPS) R50	65
4.7	Removing and installing navigation system with CD drive control unit J401	65
5	Navigation system Nav IV (BNS 4.0)	67
5.1	General information and description	67
5.2	Design of navigation system BNS 4.0	67
5.3	Connectors and contact assignments	67
5.4	Overall layout of BNS 4.0	67
6	Multi-function steering wheel	68
6.1	General information and description	68
6.2	Overall layout of multi-function steering wheel	68
6.3	Assignment of buttons on multi-function steering wheels	70
6.4	Removing and installing multi-function buttons	74
6.5	Removing and installing Tiptronic buttons	75
6.6	Removing and installing multi-function steering wheel control unit J453	75
7	Telematics system	77
7.1	General information and description	77
7.2	Block diagram of telematics system	77
7.3	Connectors at telephone/telematics control unit J526	79
7.4	Overall layout of telematics system	81
7.5	Removing and installing telephone/telematics control unit J526 (telematics system operation)	82
7.6	Activating/deactivating service mode	83
7.7	Telematics SIM card replacement	84
7.8	Initialising telephone/telematics control unit J526	84
7.9	Removing and installing emergency call button E276 and breakdown help button E275	85
7.10	Removing and installing hands-free microphone	86
7.11	Removing and installing emergency battery for telematics	86
7.12	Removing and installing additional aerial for telematics R90 (emergency aerial)	87
7.13	Removing and installing additional loudspeaker for telematics R91 (emergency loudspeaker)	87
7.14	Removing and installing aerial filter R87 (GPS aerial)	88