

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
2 Contact corrosion!	2
3 General repair instructions	3
3.1 Rules for cleanliness when working on the injection system	3
3.2 Checking for leaks in the fuel system	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Detaching bonnet	4
1.2 Removing engine	5
1.3 Securing engine to assembly stand	22
1.4 Installing engine	23
2 Assembly mountings	27
2.1 Removing and installing engine mountings	27
2.2 Removing and installing pendulum support	31
13 - Crankshaft group	32
1 Servicing work on pulley end	32
1.1 Removing and installing poly V-belt	32
1.2 Removing and installing vibration damper	33
1.3 Removing and installing bracket for alternator	34
1.4 Toothed belt drive for camshaft - exploded view of components	34
1.5 Removing and installing toothed belt	36
2 Removing and installing sealing flanges and flywheel	48
2.1 Sealing flanges and flywheel - exploded view	48
2.2 Renewing crankshaft oil seal (pulley end)	49
2.3 Removing and installing sealing flange (front)	51
2.4 Removing and installing flywheel	53
2.5 Removing and installing sealing flange (rear)	54
3 Removing and installing balance shaft and retaining frame	57
3.1 Balance shaft and retaining frame - exploded view of components	57
3.2 Removing and installing balance shaft and retaining frame	58
4 Crankshaft	63
4.1 Removing and installing chain sprocket	63
5 Dismantling and assembling pistons and conrods	65
5.1 Pistons and conrods - exploded view	65
5.2 Checking piston projection at TDC	67
5.3 Piston and cylinder dimensions	69
15 - Cylinder head, valve gear	70
1 Cylinder head	70
1.1 Cylinder head - exploded view	70
1.2 Removing and installing cylinder head cover	73
1.3 Removing and installing cylinder head	74
1.4 Removing and installing intake manifold	94
1.5 Checking compression	97
2 Servicing valve gear	100
2.1 Valve gear - exploded view	100
2.2 Checking axial clearance of camshaft	102



2.3	Renewing camshaft oil seal	102
2.4	Removing and installing camshaft	105
2.5	Checking hydraulic bucket tappets	108
2.6	Renewing valve stem oil seals	109
2.7	Valve dimensions	113
2.8	Checking valve guides	113
2.9	Machining valve seats	114
2.10	Checking valves	116
17	- Lubrication	117
1	Removing and installing parts of lubrication system	117
1.1	Lubrication system - exploded view	117
1.2	Removing and installing sump	118
1.3	Oil pump and retaining frame - exploded view of components	123
1.4	Removing and installing oil pump	125
1.5	Oil filter bracket - exploded view of components	126
1.6	Removing and installing oil pressure switch F1	130
1.7	Checking oil pressure and oil pressure switch	130
1.8	Engine oil	132
1.9	Checking oil level	132
19	- Cooling	134
1	Removing and installing parts of cooling system	134
1.1	Diagram of coolant hose connections	134
1.2	Draining and filling cooling system	136
1.3	Removing and installing coolant pump	141
1.4	Removing and installing thermostat	141
1.5	Checking thermostat	144
1.6	Removing and installing radiator	144
1.7	Checking cooling system for leaks	148
1.8	Removing and installing radiator fan V7	150
21	- Turbocharging/supercharging	151
1	Checking charge air system with turbocharger	151
1.1	Safety precautions	151
1.2	Test requirements for checking turbocharging system	151
1.3	Effects of leaks in charge air system	151
1.4	Checking charge pressure	152
1.5	Checking linkage and vacuum unit for charge pressure control	154
1.6	Checking vacuum actuation at turbocharger	155
1.7	Hose connection diagram for charge pressure control	157
2	Servicing charge air system with turbocharger	159
2.1	Rules for cleanliness	159
2.2	Turbocharger - exploded view	159
2.3	Removing and installing turbocharger	161
2.4	Removing and installing charge air cooler	167
26	- Exhaust system	171
1	Removing and installing parts of exhaust system	171
1.1	Exhaust system - exploded view of components	171
1.2	Separating starter/main catalytic converter and rear silencer	173
1.3	Removing and installing starter and main catalytic converter	174
1.4	Removing and installing exhaust manifold	179
1.5	Checking exhaust system for leaks	179
2	Exhaust gas recirculation system	180
2.1	Exhaust gas recirculation system - exploded view of components	180

2.2	Diagram of vacuum hose connections	181
2.3	Checking exhaust gas recirculation	181
2.4	Checking mechanical exhaust gas recirculation valve	183