

001 - Basic equipment, From model year 2001	1-23
1. Basic equipment, From model year 2001	1
2. Basic equipment, From model year 2001	2
3. Earth connections	3
4. Earth connections	4
5. Ignition/starter switch, X contact relief relay	5
6. Lighting switch, steering column switch - left	6
7. Switches and instruments - lighting control, headlight range control adjuster	7
8. Wiper/washer system	8
9. Tail lights, brake lights, reversing lights, rear fog light, number plate light	9
10. Fuse box, provision for radio	10
11. Fuse box, horn, socket, cigarette lighter	11
12. Fuse box, diagnostic connector	12
13. Fuse box, glove box light, heated washer jets	13
14. Fuse box, right headlight, right side turn signal, front right fog light bulb	14
15. Fuse box, left headlight, left side turn signal, front left fog light bulb	15
16. Turn signals and hazard warning lights	16
17. Convenience system central control unit, luggage compartment light on left-hand side, handbrake warning switch	17
18. Control unit with display in dash panel insert, warning lamps	18
19. Control unit with display in dash panel insert, ABS with EDL control unit	19
20. Belt switch - driver's side, ambient temperature sensor, oil level/oil temperature sender, airbag control unit	20
21. Immobilizer reading coil, brake fluid level warning contact, control unit with display in dash panel insert, warning lamps	21
22. Fresh air blower switch, power steering control unit, fresh air blower with overheating fuse series resistor	22
23. Fresh air blower (without air conditioner), heated rear window	23
002 - 1.4 litre fuel injection engine (55 kW - Magneti Marelli - 4-cylinder), engine code AUA	24-34
1. 1.4 litre fuel injection engine (55 kW - Magneti Marelli - 4-cylinder), engine code AUA	24-26
2. Battery, starter, alternator, ignition/starter switch, strip fuse	27
3. Fuses, 4LV (injection system) control unit, fuel pump relay	28
4. Lambda probes, 4LV (injection system) control unit, activated charcoal filter system solenoid valve, injectors	29
5. Throttle valve control unit, 4LV (injection system) control unit, exhaust gas recirculation valve	30
6. 4LV (injection system) control unit, accelerator pedal position senders	31
7. 4LV (injection system) control unit, knock sensor, Hall sender, coolant temperature senders, intake manifold pressure sender, intake manifold temperature sender, engine speed sender	32
8. 4LV (injection system) control unit, ignition coil, spark plugs, clutch pedal switch	33
9. Fuel pump, control unit with display in dash panel insert	34
003 - Anti-lock brake system (ABS) with electronic stability program (ESP)	35-41
1. Anti-lock brake system (ABS) with electronic stability program (ESP)	35-36
2. Battery, ignition/starter switch, brake light switch, fuses	37
3. Speed sensors, steering angle sender, ABS with EDL control unit	38
4. Lateral acceleration sender, yaw rate sender, ABS with EDL control unit, ABS valves, ABS hydraulic pump	39
5. Brake detection switch - ESP, brake pressure senders, ABS with EDL control unit	40
6. Traction control system switch, ABS with EDL control unit, brake light suppression relay	41
004 - Airbags for driver and front passenger with belt tensioners and side airbags, From model year 2001	42-45
1. Airbags for driver and front passenger with belt tensioners and side airbags, From model year 2001	42
2. Airbags on driver's and front passenger's side, belt tensioners, igniters	43
3. Airbag deactivation on front passenger's side, curtain airbags on driver's and front passenger's side, igniters	44
4. Side airbag driver's and front passenger's side, hazard warning light relay, igniter	45
005 - Air conditioner, From model year 2001	46-51
1. Air conditioner, From model year 2001	46
2. Control and display unit for air conditioner/Climatronic, compressor regulating valve, fuses	47
3. Control and display unit for air conditioner/Climatronic, fresh air blower control unit	48
4. Control and display unit for air conditioner/Climatronic, potentiometer, control motor	49
5. Control and display unit for air conditioner/Climatronic, air conditioner pressure switch, ambient temperature sensor	50
6. Radiator fan thermo-switches, radiator fan control unit	51
006 - Rear parking aid, From model year 2001	52-54
1. Rear parking aid. From model year 2001	52

2. Parking aid control unit, fuses	53
3. Parking aid control unit, parking aid sender	54
007 - Convenience electrics	55-71
1. Convenience electrics	55
2. Convenience electrics	56
3. Current supply	57
4. Convenience system central control unit, tank filler flap remote release, interior monitor switch, aerial for central locking and anti-theft alarm system	58
5. Convenience system central control unit, bonnet contact switch, anti-theft alarm ultra-sonic sensor, anti-theft alarm system horn	59
6. Convenience system central control unit, glass breakage sensor, rear window, tailgate/boot lid release	60
7. Convenience system central control unit, interior light front, luggage compartment light, rear interior light	61
8. Convenience system central control unit, tailgate/boot lid contact switch for anti-theft alarm, tailgate/boot lid release	62
9. Convenience system central control unit, central locking lock unit, rear left, without window lifter rear	63
10. Convenience system central control unit, central locking lock unit, rear right, without window lifter rear	64
11. Door control unit, driver's side, convenience system central control unit, window lifter motor, left	65
12. Door control unit, driver's side, central locking lock unit, driver's side, door contact switch, driver's side	66
13. Door control unit, driver's side, mirror adjustment motor, driver' side, heated exterior mirror, driver's side	67
14. Door control unit, front passenger's side, central locking lock unit, front passenger's side, door contact switch, front passenger's side, window lifter motor, right	68
15. Door control unit, front passenger's side, mirror adjustment motor, front passenger's side, heated exterior mirror, front passenger's side, window lifter switch, in front passenger's door	69
16. Door control unit, rear left, central locking lock unit, rear left, rear left door contact switch, window lifter motor, rear left	70
17. Door control unit, rear right, central locking lock unit, rear right, rear right door contact switch, window lifter motor, rear right	71
008 - Radio, Chorus, Concert, From model year 2001	72-80
1. Radio, Chorus, Concert, From model year 2001	72
2. Voltage supply	73
3. Front loudspeakers	74
4. Rear loudspeakers	75
5. Active loudspeakers, rear	76
6. Bose loudspeakers, front	77
7. Bose loudspeakers, rear	78
8. CD changer	79
9. Aerial	80
009 - 1.4 litre unit injector, TDI engine (55 kW - 3-cylinder), engine code AMF, From model year 2001	81-91
1. 1.4 litre unit injector, TDI engine (55 kW - 3-cylinder), engine code AMF, From model year 2001	81
2. Battery, starter, alternator, ignition/starter switch	82
3. Relay for glow plugs, diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs (engine)	83
4. Kick-down switch, idling switch, coolant temperature senders, accelerator pedal position sender, fuel temperature sender	84
5. Cruise control system switch, airbag control unit, diesel direct injection system control unit	85
6. Brake light switch, diesel direct injection system control unit, heater element (crankcase breather), unit injector solenoid valves	86
7. Clutch pedal switch, engine speed sender, Hall sender, diesel direct injection system control unit, engine control unit fuse	87
8. Air mass meter, intake manifold pressure sender, exhaust gas recirculation valve, charge pressure control solenoid valve, throttle butterfly valve	88
9. Air conditioning system/Climatronic operating and display unit, additional heating button (ECON), additional heating heater element	89
10. Heater control unit, diesel direct injection system control unit, glow plug with flame monitor, combustion air blower, metering pump	90
11. Oil pressure switch, fuel gauge sender, oil level/oil temperature sender, control unit with display in dash panel insert	91
010 - Slidina/tiltina sunroof. From model year 2001	92-93

1. Sliding/tilting sunroof, From model year 2001	92
2. Sliding/tilting sunroof	93
011 - Automatic anti-dazzle interior mirror, From model year 2001	94-95
1. Automatic anti-dazzle interior mirror, From model year 2001	94
2. Automatic anti-dazzle interior mirror	95
012 - Headlight washer system, From model year 2001	96-97
1. Headlight washer system, From model year 2001	96
2. Automatic intermittent wash/wipe relay, windscreen washer pump switch, headlight washer system pump	97
013 - Radiator fan control - 80W (without air conditioner), 1.4 litre fuel injection engine (55 kW - Magneti Marelli - 4-cylinder), engine code AUA, From model year 2001	98-99
1. Radiator fan control - 80W (without air conditioner), 1.4 litre fuel injection engine (55 kW - Magneti Marelli - 4-cylinder), engine code AUA, From model year 2001	98
2. Thermo-switch, radiator fan, fuse	99
014 - Radiator fan control - 60W/100W (without air conditioner), 1.4 litre unit injector, TDI engine (55 kW - 3-cylinder), engine code AMF, From model year 2001	100-101
1. Radiator fan control - 60W/100W (without air conditioner), 1.4 litre unit injector, TDI engine (55 kW - 3-cylinder), engine code AMF, From model year 2001	100
2. Thermo-switch, radiator fan, fuse	101
015 - Provision for mobile phone, From model year 2001	102-104
1. Provision for mobile phone, From model year 2001	102
2. Microphone for telephone, loudspeaker, fuse	103
3. Provision for mobile phone, radio	104
016 - Diagnostic connector, From model year 2001	105-106
1. Diagnostic connector, From model year 2001	105
2. Diagnostic connector	106
017 - Electric lumbar support adjustment	107-110
1. Electric lumbar support adjustment	107-108
2. Driver's seat lumbar support adjustment switch, fuse, driver's seat lumbar support adjustment motor	109
3. Front passenger's seat lumbar support adjustment switch, front passenger's seat lumbar support adjustment motor	110
018 - Navigation system 'NS LOW', From model year 2001	111-115
1. Navigation system 'NS LOW', From model year 2001	111
2. Navigation system with CD drive control unit, fuses	112
3. Navigation system with CD drive control unit, telephone/navigation systems loudspeaker	113
4. Control unit with display in dash panel insert, navigation system with CD drive control unit	114
5. Function selection switch II, control unit with display in dash panel insert	115
019 - Seat heating	116-120
1. Seat heating	116-117
2. Ignition/starter switch, fuses	118
3. Heated driver's seat regulator, driver's seat temperature sensor, heated driver's seat cushion, heated driver's seat backrest, driver's seat cushion lateral support heater	119
4. Heated front passenger's seat regulator, front passenger's seat temperature sensor, heated front passenger's seat cushion, heated front passenger's seat backrest, front passenger's seat cushion lateral support heater	120
020 - Daytime driving lights with fog lights, From model year 2001	121-126
1. Daytime driving lights with fog lights, From model year 2001	121
2. Ignition/starter switch, X contact relief relay, fuse	122
3. Lighting switch	123
4. Headlight dipper/flasher switch, headlight range control adjuster	124
5. Right headlight, right fog light, fuses	125
6. Left headlight, left fog light, rear fog light, fuses	126
021 - Basic equipment for 1.2 litre TDI engine, engine code ANY, From model year 2001	127-149
1. Basic equipment for 1.2 litre TDI engine, engine code ANY, From model year 2001	127
2. Basic equipment for 1.2 litre TDI engine, engine code ANY, From model year 2001	128
3. Earth connections	129
4. Earth connections	130
5. Ignition/starter switch, X contact relief relay, consumer switch-off relay	131
6. Lighting switch, steering column switch - left	132
7. Switches and instruments - lighting control, headlight range control adjuster	133
8. Wiper/washer system	134
9. Tail lights, brake lights, reversing lights, rear fog light, number plate light	135
10. Fuse box, voltage stabiliser	136
11. Fuse box, horn, socket, cigarette lighter	137
12. Fuse box. diagnostic connector	138

13. Fuse box, glove box light, heated washer jets	139
14. Fuse box, right headlight, right side turn signal, front right fog light bulb	140
15. Fuse box, left headlight, left side turn signal, front left fog light bulb	141
16. Turn signals and hazard warning lights	142
17. Convenience system central control unit, luggage compartment light on left-hand side, handbrake warning switch	143
18. Control unit with display in dash panel insert, warning lamps	144
19. Control unit with display in dash panel insert	145
20. Belt switch on driver's side, ambient temperature sensor, speedometer sender, oil level/oil temperature sender, control unit with display in dash panel insert	146
21. Immobilizer reading coil, brake fluid level warning contact, control unit with display in dash panel insert, warning lamps	147
22. Fresh air blower switch, power steering control unit, fresh air blower with overheating fuse series resistor	148
23. Fresh air blower (without air conditioner), heated rear window	149
022 - 1.2 litre unit injector, TDI engine (45 kW - 3-cylinder), engine code ANY, From model year 2001	150-158
1. 1.2 litre unit injector, TDI engine (45 kW - 3-cylinder), engine code ANY, From model year 2001	150
2. Battery, starter, alternator, ignition/starter switch, starter inhibitor and reversing light relay	151
3. Relay for glow plugs, diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs (engine)	152
4. Kick-down switch, idling switch, coolant temperature senders, accelerator pedal position sender, fuel temperature sender	153
5. Brake light switch, diesel direct injection system control unit, heater element (crankcase breather), unit injector solenoid valves	154
6. Engine speed sender, Hall sender, diesel direct injection system control unit, electronic manual gearbox control unit	155
7. Air mass meter, intake manifold pressure sender, exhaust gas recirculation valve, charge pressure control solenoid valve, throttle butterfly valve	156
8. Air conditioning system/Climatronic operating and display unit, additional heating button (ECON), additional heating heater element	157
9. Oil pressure switch, fuel gauge sender, speedometer sender, oil level/oil temperature sender	158
023 - 5-speed manual gearbox 085 DS, From model year 2001	159-166
1. 5-speed manual gearbox 085 DS, From model year 2001	159
2. Battery, starter, starter inhibitor and reversing light relay	160
3. Electronic manual gearbox control unit, handbrake warning lamp control unit, ignition key withdrawal lock, fuses	161
4. Start/Stop operation switch, electronic manual gearbox control unit, fuses	162
5. Electronic manual gearbox control unit, gear selector	163
6. Brake pressure switch, gear detector potentiometers, electronic manual gearbox control unit, clutch actuator	164
7. Electronic manual gearbox control unit, gearbox speed sender, clutch travel sender, selector lever valves	165
8. Diesel direct injection system control unit, control unit with display in dash panel insert, electronic manual gearbox control unit	166
024 - Air conditioner for 1.2 litre TDI engine, engine code ANY, From model year 2001	167-173
1. Air conditioner for 1.2 litre TDI engine, engine code ANY, From model year 2001	167
2. Ignition/starter switch, X contact relief relay, consumer switch-off relay, fuse	168
3. Control and display unit for air conditioner/Climatronic, voltage stabiliser, compressor regulating valve for air conditioning system	169
4. Control and display unit for air conditioner/Climatronic, fresh air blower control unit	170
5. Control and display unit for air conditioner/Climatronic, potentiometer, control motor	171
6. Control and display unit for air conditioner/Climatronic, air conditioner pressure switch, ambient temperature sensor	172
7. Radiator fan thermo-switches, radiator fan control unit	173
025 - Driver information system, From model year 2001	174-177
1. Driver information system, From model year 2001	174
2. Dipped beam headlights	175
3. Lighting switch, tail lights, brake lights	176
4. Function selection switch, control unit with display in dash panel insert, radio	177
026 - Radio sound systems (radio generation II), Chorus, Concert, Symphony, From model year 2001	178-187
1. Radio sound systems (radio generation II), Chorus, Concert, Symphony, From model year 2001	178
2. Voltage supply	179
3. Front loudspeakers	180
4. Rear loudspeakers	181

5. Active loudspeakers, rear	182
6. Bose loudspeakers, front	183
7. Bose loudspeakers, rear	184
8. CD changer	185
9. Control unit with display in dash panel insert	186
10. Aerial	187
027 - Basic equipment	188-214
1. Basic equipment	188-190
2. Earth connections	191
3. Earth connections	192
4. Ignition/starter switch, X contact relief relay	193
5. Lighting switch, turn signal switch, headlight dipper/flasher switch, front and rear fog light switch	194
6. Switches and instruments light regulator, headlight range control adjuster	195
7. Automatic intermittent wash/wipe relay, windscreen wiper motor, windscreen washer pump	196
8. Brake light switch, reversing light switch, brake light suppression relay, left tail light bulb, left brake light bulb	197
9. Bulb check warning unit, right tail light bulb, right brake light bulb, high level brake light bulb, number plate light	198
10. Battery, fuse on fuse box, strip fuse	199
11. Horn plate, horn/dual tone horn, dual tone horn relay, fuse, socket	200
12. Ashtray light bulb, cigarette lighter light bulb, fuse, cigarette lighter	201
13. Fuse on fuse box, diagnostic connector	202
14. Fuse on fuse box	203
15. Fuse on fuse box, glove box light, heater element for washer jet	204
16. Twin filament bulb for right headlight, front right fog light bulb, right side light bulb, right side turn signal bulb	205
17. Twin filament bulb for left headlight, front left fog light bulb, left side light bulb, left side turn signal bulb	206
18. Hazard warning light switch, cruise control system switch, hazard warning light relay	207
19. Handbrake warning switch, convenience system central control unit, luggage compartment light, left	208
20. Alternator, oil pressure switch, control unit with display in dash panel insert, warning lamps	209
21. ABS with EDL control unit, control unit with display in dash panel insert	210
22. Belt switch on driver's side, ambient temperature sensor, oil level/oil temperature sender, control unit with display in dash panel insert	211
23. Control unit with display in dash panel insert, warning lamps	212
24. Fresh air blower switch, power steering sensor, power steering control unit, fresh air blower with overheating fuse series resistor	213
25. Heated rear window switch, fresh air/air recirculating flap switch, additional heating button (ECON), heated rear window relay	214
028 - Basic equipment for 1.2 litre TDI engine, engine code ANY	215-242
1. Basic equipment for 1.2 litre TDI engine, engine code ANY	215-217
2. Earth connections	218
3. Earth connections	219
4. Ignition/starter switch, X contact relief relay, consumer switch-off relay, electronic manual gearbox control unit	220
5. Lighting switch	221
6. Switches and instruments light regulator, headlight range control adjuster	222
7. Intermittent wiper switch, windscreen washer pump switch, automatic intermittent wash/wipe relay	223
8. Brake light switch, reversing light switch, brake light suppression relay, rear left fog light bulb, left tail light bulb	224
9. Bulb check warning unit, right tail light bulb, right brake light bulb, high level brake light bulb, number plate light	225
10. Battery, voltage stabiliser, fuses on fuse box, strip fuse	226
11. Voltage stabiliser, ashtray light bulb, cigarette lighter light bulb, fuses on fuse box	227
12. Horn plate, horn/dual tone horn, dual tone horn relay, fuses on fuse box	228
13. Fuses on fuse box, diagnostic connector	229
14. Fuses on fuse box	230
15. Fuses on fuse box, glove box light, heater element for washer jet	231
16. Twin filament bulb for right headlight, front right fog light bulb, right side light bulb, right side turn signal bulb	232
17. Twin filament bulb for left headlight, front left fog light bulb, left side light bulb, left side turn signal bulb	233
18. Hazard warning light switch, hazard warning light relay	234
19. Handbrake warning switch, convenience system central control unit, luggage compartment light.	235

left	
20. Oil pressure switch, control unit with display in dash panel insert, warning lamps	236
21. ABS with EDL control unit, control unit with display in dash panel insert	237
22. Speedometer sender, oil level/oil temperature sender, airbag control unit, control unit with display in dash panel insert	238
23. Immobilizer reading coil, belt switch - driver's side, ambient temperature sensor, control unit with display in dash panel insert	239
24. Brake fluid level warning contact, coolant shortage indicator switch, brake lining/pad wear sender, front left	240
25. Fresh air blower switch, power steering sensor, power steering control unit, fresh air blower with overheating fuse series resistor	241
26. Heated rear window switch, fresh air/air recirculating flap switch, additional heating button (ECON), heated rear window relay	242
029 - 1.4 litre fuel injection engine (55 kW - Magneti Marelli - 4-cylinder), engine code AUA	243-255
1. 1.4 litre fuel injection engine (55 kW - Magneti Marelli - 4-cylinder), engine code AUA	243-245
2. Battery, starter, alternator, ignition/starter switch, strip fuse	246
3. Fuses on fuse box	247
4. Fuel pump relay, airbag control unit, power steering control unit, 4LV (injection system) control unit, fuse	248
5. Lambda probes, 4LV (injection system) control unit, activated charcoal filter system solenoid valve, injectors	249
6. Control and display unit for air conditioner/Climatronic, exhaust gas recirculation potentiometer, 4LV (injection system) control unit	250
7. Accelerator pedal position senders, throttle valve control unit, 4LV (injection system) control unit	251
8. Cruise control system switch, brake light switch, 4LV (injection system) control unit, heater element (crankcase breather)	252
9. Coolant temperature senders, engine speed sender, Hall sender, knock sensor, intake manifold pressure sender, 4LV (injection system) control unit	253
10. Clutch pedal switch, 4LV (injection system) control unit, ignition coil, spark plugs	254
11. Oil pressure switch, fuel gauge sender, fuel pump (pre-supply pump), control unit with display in dash panel insert	255
030 - 1.2 litre unit injector, TDI engine (45 kW - 3-cylinder), engine code ANY, From model year 2002	256-264
1. 1.2 litre unit injector, TDI engine (45 kW - 3-cylinder), engine code ANY, From model year 2002	256
2. Battery, starter, alternator, ignition/starter switch, starter inhibitor and reversing light relay	257
3. Relay for glow plugs, diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs (engine)	258
4. Kick-down switch, idling switch, coolant temperature senders, accelerator pedal position sender, fuel temperature sender	259
5. Brake light switch, diesel direct injection system control unit, heater element (crankcase breather), unit injector solenoid valves	260
6. Engine speed sender, Hall sender, diesel direct injection system control unit, electronic manual gearbox control unit	261
7. Air mass meter, intake manifold pressure sender, exhaust gas recirculation valve, charge pressure control solenoid valve, throttle butterfly valve	262
8. Air conditioning system/Climatronic operating and display unit, additional heating button (ECON), additional heating heater element	263
9. Oil pressure switch, fuel gauge sender, speedometer sender, oil level/oil temperature sender	264
031 - 1.4 litre unit injector, TDI engine (55 kW - 3-cylinder), engine code AMF	265-276
1. 1.4 litre unit injector, TDI engine (55 kW - 3-cylinder), engine code AMF	265-266
2. Battery, starter, alternator, ignition/starter switch	267
3. Relay for glow plugs, diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs - (engine)	268
4. Kick-down switch, idling switch, coolant temperature senders, accelerator pedal position sender, fuel temperature sender	269
5. Cruise control system switch, airbag control unit, diesel direct injection system control unit	270
6. Brake light switch, diesel direct injection system control unit, heater element (crankcase breather), unit injector solenoid valves	271
7. Clutch pedal switch, engine speed sender, Hall sender, diesel direct injection system control unit, engine control unit fuse	272
8. Air mass meter, intake manifold pressure sender, exhaust gas recirculation valve, charge pressure control solenoid valve, throttle butterfly valve	273
9. Air conditioning system/Climatronic operating and display unit, additional heating button (ECON), additional heating heater element	274

10. Heater control unit, diesel direct injection system control unit, glow plug with flame monitor, combustion air blower, metering pump	275
11. Oil pressure switch, fuel gauge sender, oil level/oil temperature sender, control unit with display in dash panel insert	276
032 - 5-speed manual gearbox 085 DS, From model year 2002	277-284
1. 5-speed manual gearbox 085 DS, From model year 2002	277
2. Battery, starter, starter inhibitor and reversing light relay	278
3. Electronic manual gearbox control unit, handbrake warning lamp control unit, ignition key withdrawal lock, fuses	279
4. Start/Stop operation switch, electronic manual gearbox control unit, fuses	280
5. Electronic manual gearbox control unit, gear selector	281
6. Brake pressure switch, gear detector potentiometers, electronic manual gearbox control unit, clutch actuator	282
7. Electronic manual gearbox control unit, gearbox speed sender, clutch travel sender, selector lever valves	283
8. Diesel direct injection system control unit, control unit with display in dash panel insert, electronic manual gearbox control unit	284
033 - Anti-lock brake system (ABS) with electronic stability program (ESP)	285-293
1. Anti-lock brake system (ABS) with electronic stability program (ESP)	285-286
2. Battery, starter, ignition/starter switch, brake light switch, fuses	287
3. Function selection switch, steering angle sender, ABS with EDL control unit	288
4. Rear right speed sensor, front right speed sensor, rear left speed sensor, front left speed sensor, ABS with EDL control unit	289
5. Lateral acceleration sender, yaw rate sender, ABS with EDL control unit	290
6. Brake detection switch - ESP, brake pressure senders, ABS with EDL control unit	291
7. Traction control system switch, ABS with EDL control unit, brake light suppression relay	292
8. ABS with EDL control unit, control unit with display in dash panel insert, traction control system warning lamp	293
034 - Automatic anti-dazzle interior mirror, From model year 2002	294-295
1. Automatic anti-dazzle interior mirror, From model year 2002	294
2. Automatic anti-dazzle interior mirror	295
035 - Diagnostic connector, From model year 2002	296-297
1. Diagnostic connector, From model year 2002	296
2. Diagnostic connector	297
036 - Parking aid, rear, From model year 2002	298-300
1. Parking aid, rear, From model year 2002	298
2. Parking aid control unit, fuses	299
3. Parking aid control unit, parking aid senders	300
037 - Driver information system, From model year 2002	301-304
1. Driver information system, From model year 2002	301
2. Dipped beam headlights	302
3. Lighting switch, tail lights, brake lights	303
4. Function selection switch, control unit with display in dash panel insert, radio	304
038 - Provision for mobile phone, From model year 2002	305-307
1. Provision for mobile phone, From model year 2002	305
2. Microphone for telephone, loudspeaker, fuse	306
3. Provision for mobile phone, radio	307
039 - Air conditioner, From model year 2002	308-313
1. Air conditioner, From model year 2002	308
2. Control and display unit for air conditioner/Climatronic, compressor regulating valve, fuses	309
3. Control and display unit for air conditioner/Climatronic, fresh air blower control unit	310
4. Control and display unit for air conditioner/Climatronic, potentiometer, control motor	311
5. Control and display unit for air conditioner/Climatronic, air conditioner pressure switch, ambient temperature sensor	312
6. Radiator fan thermo-switches, radiator fan control unit	313
040 - Air conditioner for 1.2 litre TDI engine, engine code ANY, From model year 2002	314-320
1. Air conditioner for 1.2 litre TDI engine, engine code ANY, From model year 2002	314
2. Ignition/starter switch, X contact relief relay, consumer switch-off relay, fuse	315
3. Control and display unit for air conditioner/Climatronic, voltage stabiliser, compressor regulating valve for air conditioning system	316
4. Control and display unit for air conditioner/Climatronic, fresh air blower control unit	317
5. Control and display unit for air conditioner/Climatronic, potentiometer, control motor	318
6. Control and display unit for air conditioner/Climatronic, air conditioner pressure switch, ambient temperature sensor	319
7. Radiator fan thermo-switches, radiator fan control unit	320
041 - Convenience electrics	321-337

1. Convenience electrics	321
2. Convenience electrics	322
3. Current supply	323
4. Convenience system central control unit, tank filler flap remote release, interior monitor switch, aerial for central locking and anti-theft alarm system	324
5. Convenience system central control unit, bonnet contact switch, anti-theft alarm ultra-sonic sensor, anti-theft alarm system horn	325
6. Convenience system central control unit, glass breakage sensor for rear window, tailgate/boot lid unlocking	326
7. Convenience system central control unit, front interior light, luggage compartment light, rear interior light	327
8. Convenience system central control unit, tailgate/boot lid contact switch for anti-theft alarm, tailgate/boot lid unlocking	328
9. Convenience system central control unit, rear left central locking lock unit (without rear electric windows)	329
10. Convenience system central control unit, rear right central locking lock unit (without rear electric windows)	330
11. Door control unit on driver's side, convenience system central control unit, electric window motor, left	331
12. Door control unit on driver's side, central locking lock unit on driver's side, door contact switch on driver's side	332
13. Door control unit on driver's side, mirror adjustment motor on driver's side, heated exterior mirror on driver's side	333
14. Door control unit on front passenger's side, central locking lock unit on front passenger's side, door contact switch on front passenger's side, electric window motor, right	334
15. Door control unit on front passenger's side, mirror adjustment motor on front passenger's side, heated exterior mirror on front passenger's side, electric window switch in front passenger's door, central locking lock unit	335
16. Rear left door control unit, rear left central locking lock unit, rear left door contact switch, rear left electric window motor	336
17. Rear right door control unit, rear right central locking lock unit, rear right door contact switch, rear right electric window motor	337
042 - Radiator fan control - 80W (without air conditioner)	338-340
1. Radiator fan control - 80W (without air conditioner)	338-339
2. Battery, starter, ignition/starter switch, radiator fan thermo-switch, fuses, radiator fan	340
043 - Radiator fan control - 60W/100W (without air conditioner)	341-343
1. Radiator fan control - 60W/100W (without air conditioner)	341-342
2. Battery, starter, ignition/starter switch, radiator fan thermo-switch, fuses, radiator fan	343
044 - Navigation system 'NS LOW', From model year 2002	344-348
1. Navigation system 'NS LOW', From model year 2002	344
2. Navigation system with CD drive control unit, fuses	345
3. Navigation system with CD drive control unit, telephone/navigation systems loudspeaker	346
4. Control unit with display in dash panel insert, navigation system with CD drive control unit	347
5. Function selection switch II, control unit with display in dash panel insert	348
045 - Radio sound systems (radio generation II), Chorus, Concert, Symphony, From model year 2002	349-358
1. Radio sound systems (radio generation II), Chorus, Concert, Symphony, From model year 2002	349
2. Voltage supply	350
3. Front loudspeakers	351
4. Rear loudspeakers	352
5. Active loudspeakers, rear	353
6. Bose loudspeakers, front	354
7. Bose loudspeakers, rear	355
8. CD changer	356
9. Control unit with display in dash panel insert	357
10. Aerial	358
046 - Radio navigation system (RNS-D)	359-372
1. Radio navigation system (RNS-D)	359-360
2. Voltage supply	361
3. Reversing light switch, ABS with EDL control unit, telephone/telematics control unit	362
4. Front loudspeakers	363
5. Passive loudspeakers, rear	364
6. Active loudspeakers, rear	365
7. Bose loudspeakers, front	366
8. Bose loudspeakers, rear	367
9. CD changer	368
10. Navigation/TV tuner	369

11. Lighting switch, navigation/TV tuner, navigation interface	370
12. Control unit with display in dash panel insert	371
13. Aerial	372
047 - Headlight washer system, From model year 2002	373-374
1. Headlight washer system, From model year 2002	373
2. Automatic intermittent wash/wipe relay, windscreen washer pump switch (automatic wash/wipe and headlight washer system), headlight washer system pump	374
048 - Seat heating	375-379
1. Seat heating	375-376
2. Ignition/starter switch, fuses	377
3. Heated driver's seat regulator, driver's seat temperature sensor, heated driver's seat cushion, heated driver's seat backrest, driver's seat cushion lateral support heater	378
4. Heated front passenger's seat regulator, front passenger's seat temperature sensor, heated front passenger's seat cushion, heated front passenger's seat backrest, front passenger's seat cushion lateral support heater	379
049 - Daytime driving lights with fog lights, From model year 2002	380-385
1. Daytime driving lights with fog lights, From model year 2002	380
2. Ignition/starter switch, X contact relief relay, fuse	381
3. Lighting switch	382
4. Headlight dipper/flasher switch, headlight range control adjuster	383
5. Right headlight, right fog light, fuses	384
6. Left headlight, left fog light, rear fog light, fuses	385
050 - CAN bus wires, From model year 2002	386-392
1. CAN bus wires, From model year 2002	386
2. CAN bus wires (drive train)	387
3. CAN bus wires, anti-lock brake system	388
4. CAN bus wires, control unit with display in dash panel insert	389
5. CAN bus wires, air conditioner, convenience electrics	390
6. CAN bus wires (infotainment)	391
7. CAN bus wires (infotainment)	392
051 - Telematics	393-402
1. Telematics	393-394
2. Telephone/telematics control unit, fuses	395
3. Telephone/telematics control unit, aerials	396
4. Telematics operating unit, telephone/telematics control unit, additional loudspeaker for telematics	397
5. Telephone handset, telephone/telematics control unit	398
6. Telephone/telematics control unit, fax unit	399
7. Telephone/telematics control unit, telephone microphone	400
8. Telephone/telematics control unit, CAN bus	401
9. Function selection switch II	402
052 - Anti-lock brake system (ABS) MK60 with electronic stability program (ESP)	403-410
1. Anti-lock brake system (ABS) MK60 with electronic stability program (ESP)	403-404
2. Fuses, ABS with EDL control unit	405
3. Speed sensors, steering angle sender, ABS with EDL control unit	406
4. Lateral acceleration sender, yaw rate sender, ABS with EDL control unit, ABS valves, ABS hydraulic pump	407
5. Brake pressure sender, ABS with EDL control unit	408
6. Traction control system switch, brake light switch, ABS with EDL control unit	409
7. ABS with EDL control unit, control unit with display in dash panel insert, traction control system warning lamp	410
053 - Multi-function steering wheel	411-415
1. Multi-function steering wheel	411-412
2. Current supply, ignition/starter switch, multi-function steering wheel control unit, fuse	413
3. Operating unit in steering wheel, airbag coil connector, return spring with slip ring, horn plate, airbag control unit, multi-function steering wheel control unit	414
4. Control unit with display in dash panel insert, multi-function steering wheel control unit	415
201 - -Fitting Locations: Connector points, relay carriers, fuse carrier	416-430
1. Fitting locations overview	416
2. -Fitting Locations: Connector points, relay carriers, fuse carrier	417
3. -Fitting Locations: Connector points, relay carriers, fuse carrier	418
4. -Fitting Locations: Connector points, relay carriers, fuse carrier	419
5. -Fitting Locations: Connector points, relay carriers, fuse carrier	420
6. -Fitting Locations: Connector points, relay carriers, fuse carrier	421
7. -Fitting Locations: Connector points, relay carriers, fuse carrier	422
8. -Fitting Locations: Connector points. relay carriers. fuse carrier	423

9. -Fitting Locations: Connector points, relay carriers, fuse carrier	424
10. -Fitting Locations: Connector points, relay carriers, fuse carrier	425
11. -Fitting Locations: Connector points, relay carriers, fuse carrier	426
12. -Fitting Locations: Connector points, relay carriers, fuse carrier	427
13. -Fitting Locations: Connector points, relay carriers, fuse carrier	428
14. -Fitting Locations: Connector points, relay carriers, fuse carrier	429
15. -Fitting Locations: Connector points, relay carriers, fuse carrier	430
202 - -Fitting Locations: List of earth points	431-432
1. List of earth points	431
2. -Fitting Locations: List of earth points	432
203 - -Fitting Locations: Fitting locations of individual control units	433-438
1. Fitting locations overview	433
2. -Fitting Locations: Fitting locations of individual control units	434
3. -Fitting Locations: Fitting locations of individual control units	435
4. -Fitting Locations: Fitting locations of individual control units	436
5. -Fitting Locations: Fitting locations of individual control units	437
6. -Fitting Locations: Fitting locations of individual control units	438
204 - -Fitting Locations: Components for radio sound system Chorus	439-441
1. Fitting locations overview	439
2. -Fitting Locations: Components for radio sound system Chorus	440
3. -Fitting Locations: Components for radio sound system Chorus	441
205 - -Fitting Locations: Components for radio sound system Concert	442-446
1. Fitting locations overview	442
2. -Fitting Locations: Components for radio sound system Concert	443
3. -Fitting Locations: Components for radio sound system Concert	444
4. -Fitting Locations: Components for radio sound system Concert	445
5. -Fitting Locations: Components for radio sound system Concert	446
206 - -Fitting Locations: Components for radio sound system Concert with Bose sound system	447-451
1. Fitting locations overview	447
2. -Fitting Locations: Components for radio sound system Concert with Bose sound system	448
3. -Fitting Locations: Components for radio sound system Concert with Bose sound system	449
4. -Fitting Locations: Components for radio sound system Concert with Bose sound system	450
5. -Fitting Locations: Components for radio sound system Concert with Bose sound system	451
207 - -Fitting Locations: Components for navigation system 'NS Low' (7Q9)	452-456
1. Fitting locations overview	452
2. -Fitting Locations: Components for navigation system 'NS Low' (7Q9)	453
3. -Fitting Locations: Components for navigation system 'NS Low' (7Q9)	454
4. -Fitting Locations: Components for navigation system 'NS Low' (7Q9)	455
5. -Fitting Locations: Components for navigation system 'NS Low' (7Q9)	456
208 - -Fitting Locations: Components for telephone/mobile phone	457-461
1. Fitting locations overview	457
2. -Fitting Locations: Components for telephone/mobile phone	458
3. -Fitting Locations: Components for telephone/mobile phone	459
4. -Fitting Locations: Components for telephone/mobile phone	460
5. -Fitting Locations: Components for telephone/mobile phone	461