

Contents

1	General information	1
1.1	--- Change history ---	1
1.2	Engine number	1
1.3	Vehicle identification number	5
1.4	Vehicle data sticker	5
2	Preparations	6
2.1	Vehicle: raising	6
2.2	Engine cover panel: removing and installing	8
2.3	Noise insulation: removing and installing	15
2.4	Window regulators: activating automatic open/close function	17
2.5	Vehicle diagnostic tester: connecting	17
3	Maintenance	20
3.1	Diesel particulate filter: reading out ash deposit volume	22
3.2	Event memory: reading out and erasing	23
3.3	Service interval display: resetting service event	24
3.4	Transport mode: deactivating	24
3.5	Transport mode: checking activation and activating if necessary	25
3.6	Battery: reading out status and sending diagnostic log	25
3.7	Battery: checking electrolyte level	26
3.8	Battery: determining and recording state of charge (SOC)	31
3.9	Mirror hanger indicating defective battery: renewing battery on affected vehicles	34
3.10	Brake fluid: changing	35
3.11	Brake fluid (vehicles older than 12 months): changing	40
3.12	Brake fluid: checking fluid level	40
3.13	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	40
3.14	Brake pads: checking thickness	41
3.15	Brake discs: checking for surface rust and operating brakes to clean if necessary	42
3.16	Parking brake: releasing	43
3.17	Tyres: checking condition and wear pattern, and checking and recording tread depth	43
3.18	Tyres: checking tyre pressures and adjusting if necessary	44
3.19	Tyres (except spare wheel): checking tyre pressures and adjusting to 3.5 bar if necessary	46
3.20	Tyre Pressure Loss Indicator: storing changed tyre pressures	46
3.21	Tyre repair kit: checking that set is complete, and checking and recording expiry date	47
3.22	Wheel bolts: tightening to specified torque	48
3.23	Suspension struts on front and rear axle: removing locking elements and correctly fitting bump stops	49
3.24	Axles (front and rear): checking components for play, secure attachment and damage, and checking protective boots	50
3.25	Engine, gearbox, final drive and steering: checking for leaks and damage	54
3.26	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage, and checking that they are properly secured	54
3.27	Roof insert: checking operation	54
3.28	Roof insert - sliding/tilting sunroof: cleaning and lubricating	55
3.29	Roof insert - panorama sunroof: cleaning and lubricating	57
3.30	Convertible roof locking element: lubricating	60
3.31	Bonnet arrester hook: lubricating	60
3.32	Door hinges with arresters and locking cylinders: lubricating	61
3.33	Gas strut for rear lid: checking bolt connection of socket for ball-head pin	62
3.34	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	63
3.35	Wiper blades: checking for damage	64
3.36	Headlight washer system: checking operation	65
3.37	Headlights: checking for correct adjustment	66



3.38	Headlights and reversing lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	67
3.39	Luggage compartment lighting: checking operation	68
3.40	Glove box light, interior lighting and reading light: checking operation	68
3.41	Horn: checking operation	69
3.42	Passenger airbag: checking key switch on/off and setting to "on"	69
3.43	Vehicle interior: removing any objects other than those protecting interior surfaces	69
3.44	Vehicle interior and exterior: checking for and documenting any damage	70
3.45	Vehicle keys: checking operation and recording number of keys given to customer	70
3.46	Vehicle key: removing from ignition lock	70
3.47	Vehicle key(s), wheel covers and owner's literature: checking availability and recording number present	70
3.48	Sun visors: checking that they are folded up and folding up if necessary	71
3.49	Luggage compartment cover and sun blind: checking that they are rolled up and rolling up if necessary	71
3.50	Engine oil: draining	71
3.51	Engine oil: renewing oil filter	79
3.52	Engine oil: filling up	89
3.53	Engine oil: checking oil level and correcting if necessary	90
3.54	Spark plugs: renewing	91
3.55	Coolant level: checking (fill level should be at top marking on coolant expansion tank; level may be above top marking, but not below it)	106
3.56	Air cleaner: renewing filter element and cleaning housing	109
3.57	Dust and pollen filter: renewing	120
3.58	Fuel filter: renewing	121
3.59	Fuel tank: adding fuel additive	123
3.60	Vehicle exterior: checking unprotected areas for dirt, and cleaning if necessary	124
3.61	Vehicle cover: checking position and correcting if necessary	124
3.62	Vehicle cover: removing according to manufacturer's instructions	124
3.63	Body: checking vehicle paintwork for damage and corrosion from below and with bonnet, rear lid and doors open	124
3.64	Vehicles parked outdoors: locking	125
3.65	Road test	125
3.66	Stock vehicles: observing measures specified in Maintenance table for stock vehicles (see "Before handing vehicle over to customer")	125
3.67	Checklist "Documentation of cleaning and care routine": checking that list is present	126
3.68	"Stock vehicle maintenance" checklist: signing and placing in vehicle wallet	126
3.69	Cleaning and care: checking that required measures have been carried out on time	126
3.70	Stock vehicle care management: deciding and recording date of next check	126
3.71	Display instruments: setting time and date	126
3.72	Manual gearbox/automatic gearbox: selecting 1st gear/park	126
3.73	Dual clutch gearbox (S tronic): changing ATF	127
3.74	Dual clutch gearbox (S tronic): changing gear oil and renewing oil filter	127
3.75	Four-wheel drive coupling: changing oil	127
3.76	Interior mirror: calibrating compass	127
3.77	Instrument cluster: resetting driver information system	127
3.78	Toothed belt for camshaft drive: renewing	127
3.79	Toothed belt for camshaft drive and tensioning roller: renewing	127
4	Exhaust emissions test	128
4.1	Petrol engines: performing exhaust emissions test	128
4.2	Diesel engines: performing exhaust emissions test	135