

Contents

00 - Technical data	1
1 Technical data	1
1.1 Running gear	1
1.2 Steering	1
1.3 Wheels, tyres	1
2 Proper disposal of fluid-filled components	2
2.1 Releasing gas and draining front gas-filled shock absorbers	2
2.2 Releasing gas and draining rear gas-filled shock absorbers	3
2.3 Releasing gas and draining Audi magnetic ride shock absorbers (front)	4
2.4 Releasing gas and draining Audi magnetic ride shock absorbers (rear)	5
3 Checking shock absorbers	6
3.1 Leaks at shock absorbers	6
3.2 Checking shock absorbers when removed	6
3.3 Checking shock absorbers on shock tester	7
40 - Front suspension	10
1 Servicing front suspension	10
1.1 General notes:	10
1.2 Contact corrosion	11
1.3 Servicing threads in longitudinal member	11
1.4 Lifting suspension to unladen position	11
1.5 Exploded views of front axle	13
2 Subframe, diagonal strut, swivel joint, anti-roll bar, wishbone, suspension bracket and vehicle level senders	15
2.1 Exploded view of subframe, diagonal strut, swivel joint, anti-roll bar, wishbone, suspension bracket and vehicle level senders	15
2.2 Removing and installing subframe	18
2.3 Servicing subframe	20
2.4 Removing and installing diagonal struts	29
2.5 Removing and installing front left vehicle level sender G78 and front right vehicle level sender G289	29
2.6 Removing and installing swivel joint	32
2.7 Fixing position of subframe and suspension brackets	34
2.8 Removing and installing anti-roll bar	36
2.9 Removing and installing wishbone with mounting bracket on vehicles with manual gearbox	39
2.10 Removing and installing wishbone with mounting bracket (left-side) on vehicles with dual clutch gearbox or automatic gearbox	42
2.11 Removing and installing wishbone and mounting bracket (right-side) - RS 3	45
2.12 Renewing bonded rubber bush in wishbone	48
2.13 Renewing mounting bracket for wishbone	51
2.14 Removing and installing suspension bracket	51
3 Wheel bearing housing, wheel bearing unit	53
3.1 General notes:	53
3.2 Exploded view of wheel bearing housing and wheel bearing unit	53
3.3 Removing and installing wheel bearing housing	56
3.4 Removing and installing wheel bearing unit	59
4 Audi magnetic ride (AMR) - electronic damping control	61
4.1 Overview of Audi magnetic ride (AMR) - electronic damping control	61
4.2 Removing and installing electronically controlled damping control unit J250	62
4.3 Procedure for re-adapting reference position with vehicle diagnostic, testing and information system VAS 5051B	63
5 Suspension strut	65



5.1	Exploded view of suspension strut	65
5.2	Removing and installing suspension strut	66
5.3	Servicing suspension strut	69
6	Drive shafts	72
6.1	General notes:	72
6.2	Loosening and tightening hexagon bolt securing drive shaft	73
6.3	Loosening and tightening twelve-point ribbed bolt securing drive shaft	74
6.4	Loosening and tightening twelve-point bolt (without ribbing) securing drive shaft	76
6.5	Removing and installing drive shaft (version with bolted flange on inner joint)	78
6.6	Removing and installing drive shaft (version with splines on inner joint)	79
6.7	Removing and installing drive shaft (version with internal splines on inner joint)	81
6.8	Removing and installing drive shaft with intermediate shaft (version with bolted flange on inner joint)	83
6.9	Removing and installing drive shaft with intermediate shaft (version with splines on inner joint)	84
6.10	Removing and installing drive shaft (version with internal splines on inner sliding CV joint)	86
6.11	Removing and installing intermediate shaft	91
6.12	Servicing intermediate shaft	92
6.13	Servicing drive shaft with 100 mm diameter inner constant velocity joint	93
6.14	Servicing drive shaft (version with internal splines on inner sliding CV joint)	102
6.15	Servicing drive shaft with 108 mm diameter inner constant velocity joint	107
6.16	Checking outer constant velocity joint	113
6.17	Checking inner constant velocity joint	114
6.18	Servicing drive shaft with triple roller joint AAR 2600i (version with splines on inner joint) and AAR 3300i (version with internal splines on inner joint)	116
6.19	Dismantling and assembling drive shaft with triple roller joint AAR 2600i (version with splines on inner joint) and AAR 3300i (version with internal splines on inner joint)	120
42	Rear suspension	125
1	General notes on rear axle	125
1.1	General notes	125
1.2	Contact corrosion	126
1.3	Repairing damaged threads in longitudinal member (subframe to body)	126
1.4	Rear suspension in unladen position	126
2	Exploded view of rear axle (front wheel drive)	129
2.1	Rear axle - overview	129
3	Part I: Subframe, diagonal strut, lower transverse link, upper transverse link, track rod, vehicle level senders	130
3.1	Exploded view of subframe, diagonal strut, lower transverse link, upper transverse link, track rod, vehicle level senders	130
3.2	Removing and installing subframe with attachments	133
3.3	Removing and installing diagonal struts	136
3.4	Removing and installing lower transverse links	137
3.5	Removing and installing upper transverse link	139
3.6	Removing and installing track rod	140
3.7	Vehicle level sender (overview)	142
3.8	Removing and installing rear left vehicle level sender G76 and rear right vehicle level sender G77 (on vehicle)	143
4	Part II: Wheel bearing housing, wheel bearing unit, trailing arm with mounting bracket, stone deflector	146
4.1	Exploded view of wheel bearing housing, wheel bearing unit, trailing arm with mounting bracket, stone deflector	146
4.2	Removing and installing wheel bearing housing	148
4.3	Renewing bonded rubber bush for wheel bearing housing	151
4.4	Removing and installing wheel bearing unit	154
4.5	Removing and installing trailing arm with mounting bracket	157

4.6	Servicing trailing arm	160
4.7	Removing and installing stone deflector	163
5	Part III: Shock absorbers, coil springs	164
5.1	Exploded view of shock absorbers, coil springs	164
5.2	Removing and installing shock absorber	165
5.3	Servicing shock absorber	166
5.4	Removing and installing coil spring	169
6	Part IV: Anti-roll bar	171
6.1	Exploded view of anti-roll bar	171
6.2	Removing and installing anti-roll bar	171
6.3	Removing and installing anti-roll bar - Cabriolet	173
7	Exploded view of rear axle (four-wheel drive)	175
7.1	General notes:	175
7.2	Rear axle - overview	176
8	Part I: Subframe, lower transverse link, upper transverse link, track rod, vehicle level senders	178
8.1	Exploded view of subframe, lower transverse link, upper transverse link, track rod, vehicle level senders	178
8.2	Removing and installing subframe with attachments	181
8.3	Servicing subframe up to model year 2013	187
8.4	Servicing subframe from model year 2013 onwards	197
8.5	Removing and installing lower transverse links	209
8.6	Removing and installing upper transverse link	211
8.7	Removing and installing track rod	213
8.8	Vehicle level sender (overview)	215
8.9	Removing and installing rear left vehicle level sender G76 and rear right vehicle level sender G77 (on vehicle)	216
9	Part II: Wheel bearing housing, wheel bearing unit, trailing arm with mounting bracket	219
9.1	Exploded view of wheel bearing housing, wheel bearing unit, trailing arm with mounting bracket, stone deflector	219
9.2	Removing and installing wheel bearing housing	221
9.3	Renewing bonded rubber bush for wheel bearing housing	226
9.4	Removing and installing wheel bearing unit	229
9.5	Removing and installing trailing arm with mounting bracket	231
9.6	Servicing trailing arm	234
9.7	Removing and installing stone deflector	237
10	Part III: Shock absorbers, coil springs	238
10.1	Exploded view of shock absorbers, coil springs	238
10.2	Removing and installing shock absorber	239
10.3	Servicing shock absorber	241
10.4	Removing and installing coil spring	244
11	Part IV: Anti-roll bar	245
11.1	Exploded view of anti-roll bar	245
11.2	Removing and installing anti-roll bar	245
12	Drive shafts	247
12.1	General notes:	247
12.2	Loosening and tightening hexagon bolt securing drive shaft	247
12.3	Loosening and tightening twelve-point ribbed bolt securing drive shaft	248
12.4	Loosening and tightening twelve-point bolt (without ribbing) securing drive shaft	250
12.5	Removing and installing drive shaft	251
12.6	Servicing drive shaft with 100 mm diameter inner constant velocity joint	253
12.7	Servicing drive shaft with 82 mm diameter outer constant velocity joint	261
12.8	Checking outer constant velocity joint	267
12.9	Checking inner constant velocity joint	269



43 - Self-levelling suspension	271
44 - Wheels, tyres, vehicle geometry	272
1 Wheels, tyres	272
2 Tyre Pressure Loss Indicator (TPLI)	273
2.1 General notes	273
3 Tyre Pressure Monitoring System (TPMS)	275
3.1 General notes	275
3.2 Overview of Tyre Pressure Monitoring System	276
3.3 Removing and installing Tyre Pressure Monitoring System control unit J502	276
3.4 Operation of Tyre Pressure Monitoring System	277
3.5 Exploded view of tyre pressure sensor	278
3.6 Changing a tyre	279
3.7 Removing and installing tyre pressure sensor	280
4 Wheel alignment	282
4.1 General information	282
4.2 Test requirements:	284
4.3 Explanatory notes on production control numbers (PR Nos.)	285
4.4 Wheel alignment specifications, front-wheel drive and four-wheel drive	285
4.5 Measurement procedure	286
4.6 Centralising camber at front wheels	288
4.7 Adjusting camber at rear wheels	289
4.8 Adjusting toe setting at rear wheels	290
4.9 Adjusting toe setting at front wheels	291
48 - Steering	292
1 General repair instructions	292
1.1 Steering rack	292
1.2 Gaskets and seals	292
1.3 Nuts, bolts	293
1.4 Electrical components	293
1.5 Guided Fault Finding, Vehicle Self-Diagnosis and Test Instruments	293
2 Airbag steering wheel	294
2.1 Exploded view of airbag steering wheel	294
2.2 Removing and installing airbag steering wheel	294
3 Steering column	296
3.1 Exploded view of steering column and mounting bracket with strut	296
3.2 Handling and transporting steering column	297
3.3 Removing and installing steering column	298
3.4 Checking steering column for damage	302
3.5 Removing and installing mounting bracket with strut	302
4 Electromechanical steering rack	305
4.1 Different types of steering racks (generation 1 and 2)	305
4.2 Renewing steering rack (changing from generation 1 to generation 2)	306
4.3 Renewing steering rack (changing from generation 1 to generation 3)	306
4.4 Differences between steering racks (generations 2 and 3)	307
4.5 Renewing steering rack (changing from generation 2 to generation 3)	308
4.6 Exploded view of electromechanical steering rack (generations 1 and 2)	308
4.7 Exploded view of electromechanical steering rack (generation 3)	309
4.8 Removing and installing electromechanical steering rack	310
5 Servicing electromechanical steering rack (generation 1)	316
5.1 Exploded view of electromechanical steering rack (generation 1)	316
5.2 Removing and installing boot	318
5.3 Removing and installing track rod	320

5.4	Removing and installing rubber bush	323
5.5	Renewing sensor wiring	324
5.6	Renewing and adjusting hydraulic thrust piece	327
5.7	Removing and installing servo motor with control unit	331
5.8	Renewing and adjusting thrust piece at steering pinion end	333
5.9	Removing and installing steering pinion with steering moment sender	339
6	Servicing electromechanical steering rack (generations 2 and 3)	344
6.1	Exploded view of electromechanical steering rack (generations 2 and 3)	344
6.2	Removing and installing boot	346
6.3	Removing and installing track rod	348
6.4	Removing and installing rubber bush for steering rack (generation 2)	352