

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Code, allocation, transmission ratios, capacities	2
2 Overview - power transmission	4
3 Calculating ratio "i"	5
4 General repair instructions	6
5 Safety precautions for vehicles with start/stop system	13
6 Overview of fitting locations - electrical components	14
6.1 Overview of fitting locations - electrical components, manual gearbox	14
6.2 Overview of fitting locations - electrical components, clutch mechanism	15
30 - Clutch	16
1 Overview - clutch mechanism	16
2 Notes on removing and installing clutch master cylinder and slave cylinder	17
2.1 Function check for clutch master cylinder and slave cylinder	17
3 Exploded view - pedal cluster, clutch master cylinder	19
3.1 Removing and installing over-centre spring	21
3.2 Removing and installing clutch pedal	24
3.3 Removing and installing mounting bracket	27
3.4 Removing and installing clutch position sender G476	32
3.5 Removing and installing clutch master cylinder	34
4 Exploded view - hydraulics (LHD)	38
4.1 Removing and installing clutch slave cylinder	41
4.2 Removing and installing pipe/hose assembly	48
5 Exploded view - hydraulics (RHD)	52
6 Bleeding clutch system	55
7 Exploded view - clutch release mechanism	57
8 Overview - servicing clutch	61
8.1 Clutch identification	61
8.2 Exploded view - Sachs version clutch	63
8.3 Removing and installing clutch (Sachs version)	64
8.4 Exploded view - LuK version clutch	68
8.5 Removing and installing clutch (LuK version)	70
34 - Controls, housing	75
1 Overview - selector mechanism	75
1.1 Exploded view - gear knob and gear lever boot	76
1.2 Removing and installing gear knob with gear lever boot	77
1.3 Separating gear lever boot from gear knob	79
1.4 Exploded view - gear lever and selector housing on vehicles up to model year 2007	79
1.5 Exploded view - selector mechanism, vehicles from model year 2008 onwards	82
1.6 Dismantling and assembling selector mechanism on vehicles from model year 2008 onwards	84
1.7 Removing and installing selector mechanism	90
1.8 Exploded view - gear selector cable and gate selector cable, vehicles up to model year 2007	96
1.9 Exploded view - gear selector cable and gate selector cable, vehicles from model year 2008 onwards	101
1.10 Removing and installing gear selector cable and gate selector cable	109
1.11 Adjusting selector mechanism	111
2 Removing and installing gearbox - vehicles with 1.6 ltr. TDI engine	115



2.1	Removing gearbox - vehicles with 1.6 ltr. TDI engine	115
2.2	Installing gearbox - vehicles with 1.6 ltr. TDI engine	126
3	Removing and installing gearbox - vehicles with 1.9 ltr. TDI engine	135
3.1	Removing gearbox - vehicles with 1.9 ltr. TDI engine	135
3.2	Installing gearbox - vehicles with 1.9 ltr. TDI engine	148
4	Transporting gearbox	160
5	Exploded view - assembly mountings	162
5.1	Removing and installing gearbox mounting	164
5.2	Removing and installing pendulum support	168
5.3	Removing and installing gearbox bracket	169
6	Gear oil	175
6.1	Checking gear oil level	175
6.2	Draining off gear oil	175
6.3	Filling up with gear oil	178
7	Dismantling and assembling gearbox	179
7.1	General layout of gearbox	179
7.2	Exploded view	180
7.3	Exploded view - removing and installing gearbox housing cover and 5th gear	180
7.4	Exploded view - removing and installing gearbox housing and selector mechanism	182
7.5	Exploded view - removing and installing input shaft, output shaft, differential and selector forks	184
7.6	Assembly sequence - removing and installing gearbox housing cover and 5th gear	185
8	Assembly sequence - dismantling and assembling complete gearbox	193
8.1	Dismantling complete gearbox	196
8.2	Assembling gearbox	203
9	Exploded view - servicing gearbox housing and clutch housing	213
10	Removing and installing gearbox neutral position sender G701	220
11	Exploded view - servicing selector unit	222
11.1	Removing and installing selector shaft	224
11.2	Dismantling and assembling	225
12	Exploded view - dismantling and assembling selector forks	227
35 - Gears, shafts		233
1	Input shaft	233
1.1	Exploded view - dismantling and assembling input shaft	233
1.2	Adjusting input shaft	242
2	Output shaft	248
2.1	Exploded view - dismantling and assembling output shaft	248
2.2	Adjusting output shaft	264
3	Exploded view - dismantling and assembling reverse shaft	269
39 - Final drive - front differential		273
1	Renewing oil seals for flange shafts with gearbox installed in vehicle	273
1.1	Renewing oil seal for flange shaft (left-side)	273
1.2	Identification of flange shaft oil seals (right-side)	276
1.3	Renewing flange shaft oil seal (right-side) - two-piece oil seal and sleeve	277
1.4	Renewing oil seal together with sleeve (one-piece sleeve and flange shaft oil seal (right-side))	283
2	Table of adjustments	290
3	Differential	291
3.1	Exploded view - dismantling and assembling differential	291
3.2	Adjusting differential	300