

Contents

00 - Technical data	1
1 Gearbox identification	1
2 Code, allocation, transmission ratios, capacities	3
3 Overview - power transmission	4
3.1 Calculating ratio "i"	5
4 Safety information	6
4.1 Safety precautions when working on vehicles with start/stop system	6
5 General repair instructions	7
5.1 Contact corrosion	12
6 Electrical components	14
6.1 Overview of fitting locations - electrical components	14
30 - Clutch	16
1 Overview - clutch mechanism	16
1.1 Notes on removing and installing clutch master cylinder and slave cylinder	16
1.2 Function check for clutch master cylinder and slave cylinder	17
2 Assembly overview - pedal cluster, clutch master cylinder	19
2.1 Removing and installing over-centre spring	21
2.2 Removing and installing clutch pedal	24
2.3 Removing and installing mounting bracket	27
2.4 Removing and installing clutch position sender G476	32
2.5 Removing and installing clutch master cylinder	34
3 Assembly overview - hydraulic system, LHD vehicles	37
3.1 Removing and installing clutch slave cylinder	40
3.2 Removing and installing pipe/hose assembly or plastic pipe	44
3.3 Bleeding clutch system	47
4 Assembly overview - hydraulic system, RHD vehicles	49
5 Assembly overview - clutch release mechanism	52
5.1 Removing and installing clutch release bearing with release lever and guide sleeve	53
5.2 Renewing input shaft oil seal	54
6 Assembly overview - clutch	56
6.1 Removing and installing clutch	57
34 - Controls, housing	61
1 Overview - selector mechanism	61
1.1 Assembly overview - gear knob and gear lever boot	61
1.2 Removing and installing gear knob with gear lever boot	62
1.3 Separating gear lever boot from gear knob	64
1.4 Assembly overview - gear lever and selector housing on vehicles up to model year 2007	64
1.5 Assembly overview - selector mechanism, vehicles from model year 2008 onwards	67
1.6 Dismantling and assembling selector mechanism on vehicles from model year 2008 onwards	69
1.7 Removing and installing selector mechanism	74
1.8 Assembly overview - gear selector cable and gate selector cable, vehicles up to model year 2007	82
1.9 Assembly overview - gear selector cable and gate selector cable, vehicles from model year 2008 onwards	86
1.10 Removing and installing gear selector cable and gate selector cable	93
1.11 Adjusting selector mechanism	94
2 Removing gearbox	98
3 Installing gearbox	109



4	Transporting gearbox	113
5	Assembly overview - assembly mountings	115
5.1	Removing and installing gearbox mounting	117
5.2	Removing and installing pendulum support	122
5.3	Removing and installing gearbox support	122
6	Checking oil level in gearbox	128
7	Securing gearbox to assembly stand	130
8	Dismantling and assembling gearbox	132
8.1	General layout of gearbox	132
8.2	Assembly overview	132
8.3	Assembly overview - gearbox housing cover and 5th gear	133
8.4	Assembly overview - clutch housing	134
8.5	Removing and installing clutch housing	135
8.6	Assembly overview - input shaft, output shaft, differential, selector mechanism and selector forks	138
8.7	Removing and installing input shaft, output shaft, differential, selector mechanism and selector forks	140
9	Assembly overview - gearbox housing and clutch housing	156
9.1	Servicing gearbox housing and clutch housing	159
10	Assembly overview - selector mechanism in gearbox	164
10.1	Removing and installing locking pin	164
10.2	Renewing oil seal for selector mechanism in gearbox	166
11	Assembly overview - selector forks	170
11.1	Dismantling and assembling selector forks	170
35 - Gears, shafts		175
1	Assembly overview - input shaft	175
1.1	Dismantling and assembling input shaft	177
1.2	Checking 3rd and 4th gear synchro-ring for wear	182
1.3	Dismantling and assembling 3rd and 4th gear locking collar and synchro-hub	182
2	Assembly overview - output shaft	184
2.1	Dismantling and assembling output shaft	186
2.2	Checking 1st and 2nd gear inner ring for wear	192
2.3	Checking 1st and 2nd gear synchro-ring for wear	193
2.4	Dismantling and assembling locking collar and synchro-hub for 1st and 2nd gear	193
3	Assembly overview - 5th gear	195
3.1	Removing and installing 5th gear	196
3.2	Dismantling and assembling 5th gear locking collar and synchro-hub	198
3.3	Checking 5th gear synchro-ring for wear	200
39 - Final drive - differential		202
1	Renewing oil seals for flange shafts	202
1.1	Renewing oil seal for left flange shaft	202
1.2	Renewing oil seal for right flange shaft	204
2	Assembly overview - differential	208
2.1	Dismantling and assembling differential	210
2.2	Adjusting differential	218