



Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Technical data	3
2.1 Allocation of gearbox to engine	3
2.2 Capacities	3
3 Transmission layout	4
3.1 Transmission layout - front-wheel drive	4
4 Safety precautions	5
4.1 General safety precautions	5
4.2 Safety precautions when working on vehicles with start/stop system	6
4.3 Safety precautions when using testers and measuring instruments during a road test	6
4.4 Safety precautions when working on mechatronic unit	6
4.5 Safety precautions when tow-starting and towing	8
5 Repair instructions	9
5.1 General notes	9
5.2 Rules for cleanliness	12
5.3 General repair instructions	12
5.4 Contact corrosion	13
30 - Clutch	15
1 Clutch	15
1.1 Exploded view - dual clutch	15
1.2 Removing dual clutch	18
1.3 Installing dual clutch	22
1.4 Renewing input shaft oil seal	27
1.5 Renewing oil seal for inner input shaft	29
2 Clutch mechanism	32
2.1 Exploded view - clutch engagement mechanism	32
2.2 Removing and installing clutch engagement mechanism	34
2.3 Adjusting clutch engagement mechanism	40
34 - Controls, housing	65
1 Transporting gearbox	65
2 Securing to engine and gearbox support	68
3 Mechatronic unit	70
3.1 Exploded view - mechatronic unit	70
3.2 Removing and installing mechatronic unit	71
3.3 Moving mechatronic unit into removal position by hand	81
3.4 Basic settings	83
3.5 Renewing boot together with clutch actuator	85
3.6 Renewing mechatronic unit control unit	89
4 Gear oil	94
4.1 Draining and filling hydraulic fluid for mechatronic unit	94
35 - Gears, shafts	97
1 Parking lock	97
1.1 Removing and installing cover for parking lock	97
1.2 Removing and installing parking lock	97
39 - Final drive - differential	99
1 Oil seals	99



1.1	Overview of fitting locations - oil seals	99
1.2	Renewing oil seal (left-side)	99
1.3	Renewing oil seal (right-side)	101
2	Differential	103
2.1	Exploded view - differential	103
2.2	Removing and installing flange shaft (left-side)	105
2.3	Removing and installing flange shaft (right-side)	106
2.4	Removing and installing stub shaft	106