

Contents

00 - Technical data	1
1 Gearbox identification	1
2 Code, gearbox allocation, transmission ratios, equipment	2
2.1 Calculating ratio "i"	2
3 Capacities	3
4 Safety precautions	4
4.1 When working on the vehicle	4
4.2 When working on vehicles with start/stop system	4
4.3 When using test equipment while road-testing the vehicle	5
5 Notes on dual clutch gearbox 0BH	6
5.1 General notes	6
5.2 Safety functions of gearbox control unit	7
6 Notes on tow-starting and towing	9
7 Repair instructions	10
7.1 Contact corrosion	10
7.2 General notes	10
8 Rules for cleanliness when working on the gearbox	12
9 Exploded view - dual clutch gearbox	13
10 Electrical components	16
10.1 Overview of fitting locations - electrical components	16
30 - Clutch	17
1 Clutch	17
1.1 Exploded view - dual clutch	17
1.2 Removing and installing clutch end cover	18
1.3 Removing dual clutch	23
1.4 Installing dual clutch	28
34 - Controls, housing	37
1 Electrical/electronic components and fitting locations	37
1.1 Overview of fitting locations - mechatronic unit senders	41
2 Exploded view - selector lever handle, selector lever display illumination bulb L101 and selector lever position display Y26	42
2.1 Removing and installing selector lever handle	42
2.2 Detaching and attaching selector lever boot on selector lever handle	46
2.3 Moving interlock button on selector lever handle into installation position	47
2.4 Removing and installing selector lever display illumination bulb L101 with selector lever position display Y26	50
3 Exploded view - selector mechanism	52
3.1 Operating manual release of selector mechanism from position "P"	52
3.2 Checking selector mechanism and ignition key removal lock	54
3.3 Removing and installing selector mechanism	55
3.4 Adjusting and checking selector lever cable	58
3.5 Removing and installing selector lever sensors control unit J587 with selector lever E313, tiptronic switch F189 and selector lever locked in position P switch F319	60
3.6 Removing and installing selector lever lock solenoid N110	60
3.7 Checking connectors on selector mechanism	60
4 Removing and installing gearbox	61
4.1 Removing gearbox	61
4.2 Installing gearbox	78
5 Transporting dual clutch gearbox	85



6	Securing gearbox to engine and gearbox support	87
7	Exploded view - assembly mountings	89
7.1	Removing and installing gearbox mounting	92
7.2	Removing and installing pendulum support	97
8	Gear oil in dual clutch gearbox - overview	99
8.1	Checking gear oil level and topping up	101
8.2	Draining and filling gear oil	107
9	Exploded view - gear oil cooler and gear oil filter	112
9.1	Removing and installing gear oil cooler	112
9.2	Removing and installing gear oil filter	115
10	Dismantling and assembling gearbox	119
10.1	Renewing sealing cap	119
11	Bevel box	121
11.1	Overview of tightening torques	121
11.2	Removing and installing bevel box	122
35 - Gears, shafts		130
1	Exploded view - oil pan, mechatronic unit for dual clutch gearbox J743	130
1.1	Removing and installing oil pan	131
1.2	Removing and installing mechatronic unit for dual clutch gearbox J743	136
1.3	Removing and installing gearbox input speed sender G182/clutch temperature sender G509	141
39 - Final drive - front differential		143
1	Renewing oil seals (with gearbox installed in vehicle)	143
1.1	Renewing oil seal (left-side)	143
1.2	Renewing stub shaft oil seal (right-side) with bevel box installed	145
1.3	Renewing oil seal between dual clutch gearbox and bevel box (bevel box removed)	148
2	Exploded view - oil seals in bevel box and stub shaft bearings in bevel box	151
2.1	Renewing stub shaft oil seal (right-side), on gearbox side (bevel box removed)	153
2.2	Renewing needle bearing (polygon bearing) on stub shaft of bevel box (bevel box removed)	156
2.3	Renewing oil seal between bevel box and dual clutch gearbox (on bevel box)	159
2.4	Renewing oil seal for output flange (bevel box removed)	161
3	Gear oil in bevel box	167
3.1	Overview of tightening torques	167
3.2	Checking gear oil level and topping up	167
3.3	Topping up gear oil	169
3.4	Draining gear oil and filling up after repairs	172
4	Propshaft	175
5	Rear final drive	176