

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions	1
1.3 Safety precautions for vehicles with start/stop system	3
1.4 Rules for cleanliness and instructions for working on fuel system	3
1.5 Safety precautions when working on the ignition system	4
1.6 Reducing pressure in high-pressure section of injection system	4
1.7 Checking vacuum system	6
2 Injection system	7
2.1 Technical data	7
2.2 Overview of fitting locations	7
2.3 Removing and installing engine cover panel	18
2.4 Removing and installing cover with oil separator (engine code BYT)	18
3 Air cleaner	21
3.1 Air cleaner - exploded view	21
3.2 Removing and installing air filter element	22
3.3 Removing and installing air cleaner housing	23
4 Intake manifold	25
4.1 Intake manifold - exploded view	25
4.2 Fuel rail - exploded view	26
4.3 Removing and installing intake manifold with fuel rail	27
5 High-pressure pump	35
5.1 High-pressure pump - exploded view	35
5.2 Removing and installing high-pressure pump	36
6 Injectors	39
6.1 Removing and installing injectors	39
6.2 Cleaning injectors	42
7 Senders and sensors	44
7.1 Removing and installing air mass meter G70	44
7.2 Checking fuel pressure sender G247	44
7.3 Removing and installing fuel pressure sender G247	46
7.4 Checking fuel pressure and residual pressure (up to high-pressure pump)	47
7.5 Removing and installing throttle valve module J338	50
7.6 Cleaning throttle valve module J338	51
7.7 Checking intake manifold change-over function	51
7.8 Checking dual non-return valve	53
8 Lambda probes	55
8.1 Lambda probe - overview	55
8.2 Removing and installing Lambda probe G39 and Lambda probe heater Z19 before catalytic converter (engine codes BYT, BZB and BPU)	56
8.3 Removing and installing Lambda probe G39 and Lambda probe heater Z19 before catalytic converter (engine code CDAA)	57
8.4 CDAA: Removing and installing Lambda probe after catalytic converter G130 and Lambda probe 1 heater after catalytic converter Z29	58
9 Engine control unit	60
9.1 Wiring and component check with test box V.A.G 1598/42	60
9.2 Renewing engine control unit J623	62
28 - Ignition system	66
1 General notes and safety precautions	66
1.1 General notes on ignition system	66



1.2	Safety precautions	66
2	Servicing ignition system	67
2.1	Test data	67
2.2	Ignition system - exploded view	67
2.3	Removing and installing ignition coils with output stages	68
2.4	Removing knock sensor 1 G61	69