

Contents

00	Technical data	1
1	Engine number/engine data	1
2	Safety precautions	2
2.1	Safety precautions when working on the fuel supply system	2
2.2	Safety precautions when working on the cooling system	3
2.3	Working on vehicles with start/stop system	3
2.4	Using testers and measuring instruments during a road test	3
2.5	Safety precautions when working on the exhaust system	4
3	Repair instructions	5
3.1	Rules for cleanliness	5
3.2	Checking for leaks in the fuel system	5
3.3	Bolts/nuts	6
3.4	Identification plates	6
3.5	Use of impact wrenches	6
3.6	Foreign material in engine	7
3.7	Contact corrosion	7
3.8	Routing and attachment of pipes, hoses and wiring	8
3.9	Installing radiators, condensers and charge air coolers	8
3.10	Checking vacuum system	8
10	Removing and installing engine	9
1	Removing engine	9
2	Separating engine and gearbox	40
2.1	Separating engine and manual gearbox	40
2.2	Separating engine and dual clutch gearbox	42
3	Securing engine to engine and gearbox support	44
4	Installing engine	46
5	Assembly mountings	52
5.1	Assembly overview - assembly mountings	52
5.2	Removing and installing engine mountings	55
5.3	Removing and installing engine support	59
5.4	Checking adjustment of assembly mountings	62
5.5	Adjusting assembly mountings	65
13	Crankshaft group	71
1	Cylinder block (pulley end)	71
1.1	Assembly overview - poly V-belt drive without air conditioner compressor	71
1.2	Removing and installing poly V-belt - vehicles without air conditioner compressor	73
1.3	Assembly overview - poly V-belt drive with air conditioner compressor and tensioner	74
1.4	Removing and installing poly V-belt - vehicles with air conditioner compressor and tensioner	77
1.5	Removing and installing tensioner for poly V-belt	79
1.6	Assembly overview - poly V-belt drive with air conditioner compressor and tensioning roller	81
1.7	Removing and installing poly V-belt - vehicles with air conditioner compressor and tensioning roller	84
1.8	Removing and installing vibration damper	86
1.9	Removing and installing bracket for ancillaries	88
1.10	Assembly overview - sealing flange (pulley end)	89
1.11	Renewing crankshaft oil seal (pulley end)	91
1.12	Removing and installing sealing flange (pulley end)	93
2	Cylinder block (gearbox end)	98



2.1	Flywheel and sealing flange (gearbox end) - assembly overview	98
2.2	Removing and installing flywheel	100
2.3	Renewing sealing flange (gearbox end)	102
3	Crankshaft	113
3.1	Assembly overview - crankshaft	113
3.2	Crankshaft dimensions	114
3.3	Measuring axial clearance of crankshaft	114
3.4	Measuring radial clearance of crankshaft	115
3.5	Renewing needle bearing in crankshaft	116
4	Pistons and conrods	119
4.1	Assembly overview - pistons and conrods	119
4.2	Measuring piston projection at "TDC"	123
4.3	Checking piston bores and cylinder bores	126
4.4	Checking radial clearance of conrod bearings	128
15	Cylinder head, valve gear	130
1	Toothed belt drive	130
1.1	Assembly overview - toothed belt	130
1.2	Removing and installing toothed belt	133
2	Cylinder head	153
2.1	Assembly overview - cylinder head cover	153
2.2	Removing and installing cylinder head cover	155
2.3	Removing and installing seals for injectors	160
2.4	Assembly overview - cylinder head	162
2.5	Removing and installing cylinder head	165
2.6	Checking compression	182
3	Valve gear	184
3.1	Assembly overview - valve gear	184
3.2	Measuring axial clearance of camshafts	186
3.3	Measuring radial clearance of camshaft	187
3.4	Removing and installing camshaft oil seal	188
3.5	Removing and installing camshaft	192
3.6	Removing and installing valve stem oil seals (cylinder head installed)	200
3.7	Removing and installing valve stem oil seals (cylinder head removed)	204
3.8	Valve dimensions	209
3.9	Reworking valve seats	209
3.10	Checking valve guides	209
3.11	Checking valves	210
17	Lubrication	211
1	Oil pump and sump	211
1.1	Assembly overview - oil pump and sump	211
1.2	Removing and installing oil level and oil temperature sender G266	213
1.3	Removing and installing sump	214
1.4	Removing and installing oil pump	221
2	Oil filter bracket and engine oil cooler	223
2.1	Assembly overview - oil filter housing/oil pressure switch	223
2.2	Removing and installing oil filter housing	225
2.3	Removing and installing oil pressure switch F1	229
2.4	Checking oil pressure switch F1	230
2.5	Checking oil pressure	232
2.6	Engine oil	233
2.7	Checking oil level	233
19	Cooling	234

1	Cooling system	234
1.1	Diagrams of coolant hose connections	234
1.2	Draining and filling cooling system	236
1.3	Checking cooling system for leaks	246
2	Coolant pump and thermostat	249
2.1	Assembly overview - coolant pump/thermostat	249
2.2	Removing and installing coolant pump	250
2.3	Removing and installing thermostat	251
2.4	Checking thermostat	253
2.5	Removing and installing 4/2-way valve with thermostat	254
3	Coolant pipes, coolant temperature senders, coolant circulation pump	260
3.1	Assembly overview - coolant pipes, coolant temperature senders, coolant circulation pump	260
3.2	Removing and installing coolant temperature sender G62	262
3.3	Removing and installing radiator outlet coolant temperature sender G83	265
3.4	Removing and installing pump for exhaust gas recirculation cooler V400	267
3.5	Removing and installing coolant pipe (front) - vehicles with thermostat	270
3.6	Removing and installing coolant pipe (front) - vehicles with 4/2-way valve	274
3.7	Removing and installing coolant pipe (top front)	278
3.8	Removing and installing coolant pipe (left-side)	282
3.9	Removing and installing coolant pipe (right-side)	284
3.10	Removing and installing coolant pipes (right-side) - vehicles with auxiliary heater	287
4	Radiator and radiator fans	291
4.1	Exploded view - radiator/radiator fans	291
4.2	Removing and installing radiator	293
4.3	Removing and installing radiator cowl	296
4.4	Removing and installing radiator fans V7 and V177	299
21	Turbocharging/supercharging	301
1	Turbocharger	301
1.1	Diagram of vacuum connections	301
1.2	Assembly overview - turbocharger	302
1.3	Removing and installing turbocharger	304
2	Charge air cooling	309
2.1	Assembly overview - charge air cooler	309
2.2	Removing and installing charge pressure sender G31 / intake air temperature sender G42	310
2.3	Removing and installing charge air cooler	311
2.4	Checking charge air system for leaks	313
26	Exhaust system	317
1	Silencers	317
1.1	Assembly overview - silencers	317
1.2	Removing and installing particulate filter	319
1.3	Renewing flexible joint	327
1.4	Stress-free alignment of exhaust system	330
1.5	Aligning tailpipe	330
1.6	Checking exhaust system for leaks	331
2	Exhaust gas temperature regulation	332
2.1	Assembly overview - exhaust gas temperature regulation	332
2.2	Removing and installing exhaust gas temperature sender 1 G235	334
2.3	Removing and installing exhaust gas temperature sender 3 G495	336
2.4	Removing and installing exhaust gas temperature sender 4 G648	338
3	Exhaust gas recirculation system	340
3.1	Diagram of vacuum connections	340
3.2	Assembly overview - exhaust gas recirculation with exhaust gas recirculation cooler	340



3.3	Checking exhaust gas recirculation cooler change-over	342
3.4	Removing and installing exhaust gas recirculation cooler	342
3.5	Cleaning exhaust gas recirculation system	346