

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety precautions</b> .....	<b>1</b>
1.1 Working on the fuel system .....	1
1.2 Using testers and measuring instruments during a road test .....	2
1.3 Removing and installing components from a full or partly full fuel tank .....	2
1.4 Removing and installing fuel tank .....	2
1.5 Working on vehicles with start/stop system .....	2
<b>2 General repair instructions</b> .....	<b>3</b>
2.1 Rules for cleanliness when working on fuel supply system and injection system .....	3
2.2 Test conditions .....	3
2.3 Contact corrosion! .....	3
<b>20 - Fuel supply system</b> .....	<b>5</b>
<b>1 Fuel supply system - front-wheel drive</b> .....	<b>5</b>
1.1 Fuel tank with attached components - exploded view .....	5
1.2 Draining fuel tank .....	6
1.3 Removing and installing fuel tank with attached components .....	7
<b>2 Fuel delivery unit and fuel gauge sender - vehicles with front-wheel drive</b> .....	<b>12</b>
2.1 Fuel delivery unit and fuel gauge sender - exploded view .....	12
2.2 Fuel system pressurisation pump G6 (electrical test) .....	13
2.3 Removing and installing fuel delivery unit .....	14
2.4 Checking fuel gauge sender G .....	17
2.5 Removing and installing fuel gauge sender G - vehicles up to approx. 10.2004 .....	20
2.6 Removing and installing fuel gauge sender G - vehicles from approx. 10.2004 onwards ..	20
<b>3 Fuel tank - vehicles with four-wheel drive</b> .....	<b>23</b>
3.1 Fuel tank with attached components - exploded view .....	23
3.2 Draining fuel tank .....	24
3.3 Removing and installing fuel tank with attached components .....	25
<b>4 Fuel delivery unit and fuel gauge senders - version 1 for vehicles with four-wheel drive</b> ..	<b>31</b>
4.1 Fuel delivery unit and fuel gauge senders - exploded view .....	31
4.2 Fuel system pressurisation pump G6 (electrical test) .....	33
4.3 Removing and installing fuel delivery unit .....	34
4.4 Checking fuel gauge sender G .....	37
4.5 Removing and installing fuel gauge sender G - vehicles up to approx. 10.2004 .....	41
4.6 Removing and installing fuel gauge sender G - vehicles from approx. 10.2004 onwards ..	42
4.7 Checking fuel gauge sender 2 G169 .....	42
4.8 Removing and installing fuel gauge sender 2 G169 .....	44
4.9 Suction-jet pump .....	47
4.10 Removing and installing suction-jet pump .....	47
<b>5 Fuel delivery unit and fuel gauge senders - version 2 for vehicles with four-wheel drive</b> ..	<b>53</b>
5.1 Fuel delivery unit and fuel gauge senders - exploded view .....	53
5.2 Fuel system pressurisation pump G6 (electrical test) .....	55
5.3 Removing and installing fuel delivery unit .....	56
5.4 Checking fuel gauge sender G .....	60
5.5 Removing and installing fuel gauge sender G .....	62
5.6 Checking fuel gauge sender 2 G169 .....	63
5.7 Removing and installing fuel gauge sender 2 G169 .....	65
5.8 Suction-jet pump .....	68
5.9 Removing and installing suction-jet pump .....	68
<b>6 Tandem pump - vehicles with unit injector engine</b> .....	<b>74</b>
6.1 Checking tandem pump - vehicles with 2-valve engine .....	74
6.2 Checking tandem pump - vehicles with 4-valve engine .....	76



6.3	Removing and installing tandem pump - vehicles with 2-valve engine	79
6.4	Removing and installing tandem pump - vehicles with 4-valve engine	82
<b>7</b>	<b>Supplementary fuel pump - vehicles with common rail engine</b>	<b>86</b>
7.1	Supplementary fuel pump V393 - exploded view	86
7.2	Removing and installing supplementary fuel pump V393	87
<b>8</b>	<b>Fuel cooler - vehicles with unit injector engine</b>	<b>89</b>
8.1	Removing and installing fuel cooler	89
<b>9</b>	<b>Fuel filter</b>	<b>90</b>
9.1	Fuel filter - exploded view (vehicles with unit injector engine)	90
9.2	Removing and installing fuel filter housing - vehicles with unit injector engine	92
9.3	Fuel filter - exploded view (vehicles with common rail engine)	94
9.4	Removing and installing fuel filter housing - vehicles with common rail engine	95
<b>10</b>	<b>Bleeding fuel system</b>	<b>98</b>
10.1	Bleeding fuel system	98
10.2	Bleeding fuel supply line leading to metering pump - vehicles with auxiliary heater	98
<b>11</b>	<b>Checking fuel system for leaks - vehicles with unit injector engine</b>	<b>100</b>
11.1	Checking for leaks	100
<b>12</b>	<b>Accelerator mechanism</b>	<b>105</b>
12.1	Accelerator mechanism - exploded view	105
12.2	Removing and installing accelerator pedal module with accelerator position sender	105
12.3	Adapting kick-down function after renewing accelerator pedal module or engine control unit	107