

001 - Basic equipment with battery in engine compartment	1-39
1. Basic equipment with battery in engine compartment	1-5
2. Earth points, earth connections	6
3. Earth points, earth connections	7
4. Starter, battery, alternator	8
5. Intermittent wiper switch, cruise control system switch	9
6. Turn signal switch, steering angle sender, horn plate	10
7. Ignition/starter switch, terminal 50 voltage supply relay	11
8. Diagnostic connector, data bus diagnostic interface	12
9. Data bus diagnostic interface, drive train CAN bus, infotainment CAN bus	13
10. Data bus diagnostic interface, convenience CAN bus	14
11. Convenience CAN bus, driver door contact switch, front passenger door contact switch	15
12. Parking brake contact switch, luggage compartment light	16
13. Rear lid contact switch, number plate light	17
14. Front and rear interior light, glove compartment light	18
15. Headlight washer system relay, double washer pump relay 2, front windscreen wiper motor	19
16. Washer pump, rear window wiper motor, double washer pump relay 1	20
17. Light switch, illumination regulators - switches and instruments, front and rear fog light switch	21
18. Headlight range control regulator, front left headlight bulbs, left fog light	22
19. Front right headlight bulbs, right fog light	23
20. Tail light bulbs, turn signal, brake light, reversing light	24
21. Hazard warning light switch, treble tone horn, bass tone horn, reversing light switch	25
22. Clutch travel sender, brake light switch	26
23. Fresh air blower switch, potentiometer, temperature selection rotary knob	27
24. Auxiliary heating heater element, fresh air and air recirculation flap switch, auxiliary heater economy (ECON) button	28
25. Heated rear window button, heated rear window relay	29
26. Terminal 15 voltage supply relay 2, terminal 30 voltage supply relay 2, fuses on fuse holder	30
27. Ashtray illumination, cigarette lighter illumination, fuses on fuse holder	31
28. Fuel pump control unit, fuses on fuse holder	32
29. Terminal 15 voltage supply relay, fuses on fuse holder	33
30. Fuel pump relay, fuel gauge sender, fuel pump	34
31. X-contact relief relay, fuses on fuse holder, left and right washer jet heater element	35
32. Radio controlled clock receiver, immobilizer reader coil, control unit with display in dash panel insert	36
33. Oil pressure switch, coolant shortage indicator switch, brake fluid level warning contact, control unit with display in dash panel insert	37
34. Ambient temperature sensor, windscreen washer fluid level sender, front left brake pad wear sender, control unit in dash panel insert	38
35. Oil level and oil temperature sender, control unit in dash panel insert, power steering control unit	39
002 - 1.6 l - Fuel injection engine (75 kW - Simos - 4 cylinder), engine code BGU	40-57
1. 1.6 l - Fuel injection engine (75 kW - Simos - 4 cylinder), engine code BGU	40-43
2. Earth points, earth connections	44
3. Battery, starter, alternator	45
4. Ignition/starter switch, onboard supply control unit, steering column electronics control unit, terminal 50 voltage supply relay	46
5. Secondary air pump relay, simos control unit, current supply relay for Simos control unit, secondary air pump motor	47
6. Lambda probe, lambda probe after catalytic converter, electric fuel pump 2 relay, Simos control unit	48
7. Fuel system (pressurisation pump), fuel pump relay, vacuum pump relay, terminal 15 voltage supply relay	49
8. Brake light switch, brake pedal switch, clutch position sender	50
9. Accelerator position sender, exhaust gas recirculation valve, activated charcoal filter system solenoid valve 1, variable intake manifold change-over valve	51
10. Engine speed sender, Hall sender, knock sensor 1, coolant temperature sender, throttle valve module	52
11. Simos control unit, ignition coil with output stage, heater element (crankcase breather)	53
12. Radiator outlet coolant temperature sender, radiator fan control unit, injectors	54
13. Simos control unit, data bus diagnostic interface	55
14. Data bus diagnostic interface, control unit with display in dash panel insert	56
15. Oil pressure switch, coolant shortage indicator switch, oil level and oil temperature sender	57
003 - 2.0 l - Fuel injection engine (110 kW - FSI - 4 cylinder), engine code AXW	58-79
1. 2.0 l - Fuel injection engine (110 kW - FSI - 4 cylinder). engine code AXW	58-60

2. Earth points, earth connections	61
3. Battery, starter, alternator	62
4. Terminal 15 voltage supply relay, onboard supply control unit, steering column electronics control unit, terminal 50 voltage supply relay	63
5. Fuel system pressurisation pump, Motronic control unit, onboard supply control unit, fuel pump control unit	64
6. Motronic control unit, Motronic current supply relay, radiator fan control unit	65
7. Vacuum pump relay, Motronic control unit, fuse on fuse holder	66
8. Lambda probe, lambda probe 2, Motronic control unit	67
9. Lambda probe after catalytic converter, lambda probe 2 after catalytic converter	68
10. Exhaust gas temperature sender 1, brake servo sender, NOx sensor control unit	69
11. Brake light switch, brake pedal switch, clutch position sender	70
12. Hall sender, accelerator position sender, exhaust gas recirculation potentiometer, fuel pressure sender	71
13. Coolant temperature sender, intake manifold pressure sender, fuel pressure sender, low pressure, throttle valve module	72
14. Map-controlled engine cooling system thermostat, engine speed sender, knock sensor, inlet camshaft control valve 1	73
15. Motronic control unit, ignition coils 1 and 2 with output stage, spark plug connector, spark plugs	74
16. Motronic control unit, fuel metering valve, ignition coils 3 and 4 with output stage	75
17. Injectors	76
18. Drive train CAN bus, K-diagnosis wiring	77
19. Data bus diagnostic interface, control unit with display in dash panel insert	78
20. Oil pressure switch, control unit with display in dash panel insert	79
004 - 1.9l - Diesel engine (unit injectors), 77kW, 4-cylinder with engine code BKC	80-98
1. 1.9l - Diesel engine (unit injectors), 77kW, 4-cylinder with engine code BKC	80-83
2. Earth points, earth connections	84
3. Starter, battery, alternator, fuses on fuse holder/battery	85
4. Terminal 15 voltage supply relay, cruise control system switch, ignition/starter switch	86
5. Terminal 50 voltage supply relay	87
6. Brake light switch, brake pedal switch, clutch position sender, fuses on fuse holder	88
7. Fuses on fuse holder	89
8. Terminal 30 voltage supply relay, unit injector valves	90
9. Glow plugs, automatic glow period control unit	91
10. Hall sender, fuel gauge sender, fuel temperature, coolant temperature sender, engine speed	92
11. Heater element (crankcase breather), intake manifold flap motor	93
12. Air mass meter, exhaust gas recirculation valve, charge pressure control solenoid valve	94
13. Charge air pressure sender, intake air temperature, accelerator position, radiator outlet coolant temperature	95
14. Drive train CAN bus, K-diagnosis wiring	96
15. Data bus diagnostic interface, control unit with display in dash panel insert	97
16. Oil pressure switch, control unit with display in dash panel insert	98
005 - 2.0 l - Diesel engine (100 kW - unit injectors - 4 cylinder), engine code AZV	99-117
1. 2.0 l - Diesel engine (100 kW - unit injectors - 4 cylinder), engine code AZV	99-102
2. Earth points, earth connections	103
3. Starter, battery, alternator, fuses on fuse holder/battery	104
4. Terminal 15 voltage supply relay, cruise control system switch, ignition/starter switch	105
5. Terminal 50 voltage supply relay	106
6. Brake light switch, brake pedal switch, clutch position sender, fuses on fuse holder	107
7. Fuses on fuse holder	108
8. Terminal 30 voltage supply relay, unit injector valves	109
9. Glow plugs, automatic glow period control unit	110
10. Fuel pump, fuel gauge sender, fuel temperature, coolant temperature sender, engine speed	111
11. Heater element (crankcase breather), intake manifold flap motor	112
12. Air mass meter, exhaust gas recirculation valve, charge pressure control solenoid valve	113
13. Charge air pressure sender, intake air temperature sender, accelerator position sender, lambda probe	114
14. Drive train CAN bus, K-diagnosis wiring	115
15. Data bus diagnostic interface, control unit with display in dash panel insert	116
16. Oil pressure switch, control unit with display in dash panel insert	117
006 - Radiator fan control - 520 W (with and without air conditioning system)	118-121
1. Radiator fan control - 520 W (with and without air conditioning system)	118-119
2. Battery, radiator fan	120
3. Coolant temperature sender - radiator outlet	121
007 - Radiator fan control for FSI engines - 340 W. 520 W (with and without air conditioning system)	122-125

1. Radiator fan control for FSI engines - 340 W, 520 W (with and without air conditioning system)	122-123
2. Radiator fan, radiator fan -2-	124
3. Coolant temperature sender - radiator outlet	125
008 - Radiator fan control for diesel engines - 520 W (with and without air conditioning system)	126-129
1. Radiator fan control for diesel engines - 520 W (with and without air conditioning system)	126-127
2. Battery, terminal 30 voltage supply relay, fuses	128
3. Coolant temperature sender - radiator outlet, radiator fan, radiator fan -2-	129
009 - Convenience electrics	130-155
1. Convenience electrics	130-134
2. Battery, battery cut-off relay	135
3. Terminal 15 voltage supply relay 2, fuses on fuse holder	136
4. Terminal 15 voltage supply relay, terminal 30 voltage supply relay 2	137
5. Interior light (front and rear) with reading lights	138
6. Bonnet contact switch, vanity mirrors on driver and front passenger side	139
7. Left and right footwell light, glove compartment light	140
8. Central locking and anti-theft alarm system aerial	141
9. Rear lid contact switch for anti-theft alarm/central locking	142
10. Parking brake contact switch, rear lid release motor and tank filler flap locking motor	143
11. Alarm horn, vehicle inclination sender, glass breakage sensor, rear window, interior monitoring sensor	144
12. Window regulator switch, driver side	145
13. Driver side central locking lock unit	146
14. Front left entry light, interior locking button for central locking system, driver side, door warning lamp, driver side	147
15. Mirror adjustment switch, interior monitoring switch	148
16. Mirror adjustment motor/folding mirror motor, driver side	149
17. Front passenger side central locking lock unit	150
18. Mirror adjustment motor/folding mirror motor, front passenger side	151
19. Front right entry light, door warning lamp, front passenger side, window regulator switch, in front passenger door	152
20. Control unit with display in dash panel insert, data bus diagnostic interface	153
21. Front right entry light, door warning lamp, front passenger side, window regulator switch, in front passenger door	154
22. Control unit with display in dash panel insert, data bus diagnostic interface	155
010 - Airbags for driver and front passenger with belt tensioners and side airbags	156-169
1. Airbags for driver and front passenger with belt tensioners and side airbags	156-159
2. Earth connections, earth points	160
3. Fuse on fuse holder, battery cut-off relay	161
4. Terminal 15 voltage supply relay 2, front passenger side airbag deactivated warning lamp	162
5. Key operated switch to deactivate front passenger side airbag	163
6. Belt switch, terminal 15 voltage supply relay	164
7. Crash sensors	165
8. Seat belt tensioner, curtain airbag igniter	166
9. Side airbag igniter, driver side, side airbag igniter, front passenger side	167
10. Driver side airbag igniter, front passenger side airbag igniter 1	168
11. Control unit with display in dash panel insert	169
011 - Air conditioning system	170-186
1. Air conditioning system	170-173
2. Earth point, earth connections	174
3. Battery, battery cut-off relay	175
4. Fresh air blower control unit, fuses	176
5. X-contact relief relay, fuses	177
6. Terminal 15 voltage supply relay, fuses	178
7. High pressure sender, air quality sensor, compressor regulating valve, air conditioning system	179
8. Ignition/starter switch, convenience CAN bus high	180
9. Auxiliary air heater element, auxiliary air heater control unit, convenience CAN bus	181
10. Heated rear window relay, air conditioning system compressor regulating valve	182
11. Central flap control motor, air flow flap control motor, air recirculation flap control motor	183
12. Defroster flap control motor, left temperature flap control motor, right temperature flap control motor	184
13. Vent temperature sender, fresh air intake duct temperature sensor	185
14. Sunlight penetration photosensor, right vent temperature sender	186
012 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP), traction control system (TCS) and with no hydraulic brake servo (HBS)	187-194
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP), traction control system (TCS) and with no hydraulic brake servo (HBS)	187

2. ABS control unit	188
3. TCS and ESP button, ABS control unit, Onboard supply control unit, Terminal 15 voltage supply relay 2	189
4. ABS control unit, Onboard supply control unit	190
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Onboard supply control unit	191
6. ESP sensor unit, ABS control unit, Onboard supply control unit, ABS hydraulic unit	192
7. Brake pressure sender 1, ABS control unit, Headlight range control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	193
8. Steering angle sender, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, ABS warning lamp, ESP and TCS warning lamp	194
013 - Anti-lock brake system (ABS) with traction control system (TCS)	195-202
1. Anti-lock brake system (ABS) with traction control system (TCS)	195
2. ABS control unit	196
3. TCS and ESP button, ABS control unit, Onboard supply control unit, Terminal 15 voltage supply relay 2	197
4. Front right speed sensor, Front left speed sensor, ABS control unit, Onboard supply control unit	198
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Onboard supply control unit	199
6. ABS control unit, Onboard supply control unit, ABS hydraulic unit	200
7. ABS control unit, Headlight range control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	201
8. Steering angle sender, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, ABS warning lamp, Traction control system warning lamp	202
014 - Navigation system "NS LOW"	203-210
1. Navigation system "NS LOW"	203-205
2. Muting, infotainment CAN bus	206
3. Telephone/navigation (GPS)/auxiliary heater aerial	207
4. Data bus diagnostic interface	208
5. Function selection switch II, control unit with display in dash panel insert	209
6. Function selection switch II, control unit with display in dash panel insert	210
015 - Trailer operation	211-217
1. Trailer operation	211-214
2. Voltage supply relay, trailer socket	215
3. Fuses, trailer detector control unit	216
4. Voltage supply relay, trailer socket	217
016 - Garage door operation - (Homelink)	218-223
1. Garage door operation - (Homelink)	218-220
2. Garage door operating unit	221
3. Garage door operating unit, garage door operation control unit	222
4. Terminal 15 voltage supply relay, terminal 15 voltage supply relay 2	223
017 - Ultra-sonic parking aid, rear	224-229
1. Ultra-sonic parking aid, rear	224-226
2. Parking aid control unit, data bus diagnostic interface, fuses	227
3. Parking aid senders, parking aid warning buzzer, parking aid control unit	228
4. Parking aid senders, parking aid warning buzzer, parking aid control unit	229
018 - Radio without Bose sound system	230-240
1. Radio without Bose sound system	230-232
2. Battery, fuses on fuse holder	233
3. Front loudspeaker	234
4. Rear loudspeaker without amplifier	235
5. Rear loudspeaker with amplifier, infotainment CAN bus	236
6. Muting, infotainment CAN bus	237
7. CD changer	238
8. Left aerial module, rear window aerial 1	239
9. Left aerial module, heated rear window	240
019 - Radio with Bose sound system	241-250
1. Radio with Bose sound system	241-243
2. Battery, fuses on fuse holder	244
3. Front loudspeaker	245
4. Rear loudspeaker with amplifier	246
5. Muting, infotainment CAN bus	247
6. CD changer	248
7. Left aerial module, rear window aerial 1	249
8. Left aerial module, heated rear window	250
020 - Provision for radio (not factory-fitted radios)	251-256

1. Provision for radio (not factory-fitted radios)	251-252
2. Battery, fuse on fuse box	253
3. Front and rear loudspeakers	254
4. Rear loudspeakers	255
5. Left aerial module, rear window aerial 1	256
021 - Headlights with gas discharge (xenon) lamps and automatic headlight range control	257-266
1. Headlights with gas discharge (xenon) lamps and automatic headlight range control	257-259
2. Earth points, earth connections	260
3. Turn signal switch, ignition/starter switch	261
4. Control unit with display in dash panel insert	262
5. Vehicle level senders	263
6. Left headlight	264
7. Right headlight	265
8. Light switch, terminal 15 voltage supply relay	266
022 - Provision for mobile phone	267-271
1. Provision for mobile phone	267
2. Telephone transmitter and receiver unit, telephone/navigation (GPS)/auxiliary heater aerial	268
3. Aerial for Bluetooth	269
4. Telephone microphone	270
5. Telephone bracket	271
023 - Headlights (with coming home function)	272-277
1. Headlights (with coming home function)	272-274
2. Earth points, earth connections	275
3. Lighting switch, fuse on fuse box	276
4. Lighting switch, terminal 15 voltage supply relay	277
024 - Sliding/tilting sunroof	278-279
1. Sliding/tilting sunroof	278
2. Sliding sunroof motor, sliding sunroof adjustment control unit	279
025 - Automatic anti-dazzle interior mirror (without coming home function)	280-286
1. Automatic anti-dazzle interior mirror (without coming home function)	280-283
2. Light sensor, automatic anti-dazzle interior mirror	284
3. Door control units, automatic anti-dazzle interior mirror	285
4. Door control units, automatic anti-dazzle interior mirror	286
026 - Automatic anti-dazzle interior mirror (with coming home function)	287-289
1. Automatic anti-dazzle interior mirror (with coming home function)	287
2. Automatic anti-dazzle interior mirror	288
3. Door control units, automatic anti-dazzle interior mirror	289
027 - Diagnostic connector	290-296
1. Diagnostic connector	290-293
2. Data bus diagnostic interface, diagnostic connector	294
3. Diagnostic connector, terminal 15 voltage supply relay	295
4. Data bus diagnostic interface, diagnostic connector	296
028 - Data bus wires (CAN bus, LIN bus)	297-304
1. Data bus wires (CAN bus, LIN bus)	297
2. Drive train CAN bus	298
3. Drive train CAN bus	299
4. Drive train CAN bus	300
5. Convenience CAN bus	301
6. Convenience CAN bus, LIN bus	302
7. Infotainment CAN bus	303
8. Infotainment CAN bus	304
029 - Heated front seats (models without air conditioning system)	305-313
1. Heated front seats (models without air conditioning system)	305-307
2. Earth points, earth connections	308
3. Heated driver s seat regulator, heated front passenger s seat regulator	309
4. Driver s seat heating control unit, terminal 15 voltage supply relay 2	310
5. Driver s seat heating control unit, fuses	311
6. Driver s seat heating control unit, front left seat heating	312
7. Front passenger s seat heating control unit, front right seat heating	313
030 - Heated front seats (models with air conditioner)	314-320
1. Heated front seats (models with air conditioner)	314-316
2. Earth points, earth connections	317
3. Fuses on fuse box	318
4. Heated driver s seat	319
5. Heated front passenger s seat	320
031 - Heated rear seats (models with and without air conditioning system)	321-327



1. Heated rear seats (models with and without air conditioning system)	321-323
2. Earth points, earth connections	324
3. Fuses on fuse box, heated rear left seat control unit	325
4. Heated rear left seat control unit, rear left seat temperature sensor	326
5. Heated rear right seat control unit, rear right seat temperature sensor	327
032 - Lumbar support adjustment	328-331
1. Lumbar support adjustment	328-329
2. Lumbar support adjustment, driver's seat	330
3. Lumbar support adjustment, front passenger's seat	331
033 - Direct shift gearbox (02E)	332-342
1. Direct shift gearbox (02E)	332-334
2. Earth points and earth connections	335
3. Fuses on fuse holder	336
4. Selector lever, fuses on fuse holder	337
5. Selector lever, selector lever locked in position P switch, selector lever lock solenoid	338
6. Drive train CAN bus, K-diagnosis wiring, selector lever	339
7. Terminal 15 voltage supply relay, selector lever	340
8. Ignition/starter switch, terminal 50 voltage supply relay	341
9. Data bus diagnostic interface, control unit in dash panel insert	342
034 - 1.6 l - Fuel injection engine (85 kW - FSI - 4 cylinder), engine code BAG	343-362
1. 1.6 l - Fuel injection engine (85 kW - FSI - 4 cylinder), engine code BAG	343-345
2. Earth points, earth connections	346
3. Battery, starter, alternator	347
4. Terminal 50 voltage supply relay, ignition/starter switch	348
5. Fuel gauge sender, fuel pump, terminal 15 voltage supply relay, fuses	349
6. Motronic current supply relay, fuses	350
7. Injectors, vacuum pump for brakes	351
8. Solenoid valves	352
9. Engine speed sender, knock sensor 1, lambda probe	353
10. Exhaust gas temperature sender 1, brake servo pressure sensor	354
11. Brake light switch, brake pedal switch, clutch position sender	355
12. Hall sender, accelerator position sender, exhaust gas recirculation potentiometer, fuel pressure sender	356
13. Coolant temperature sender, intake manifold pressure sender, fuel pressure sender, low pressure, throttle valve module	357
14. Ignition coils 1 and 2 with output stage, spark plug connector, spark plugs	358
15. Ignition coils 3 and 4 with output stage, spark plug connector, spark plugs	359
16. Data bus diagnostic interface, drive train CAN bus	360
17. Data bus diagnostic interface, control unit with display in dash panel insert	361
18. Oil pressure switch, oil level and oil temperature sender	362
035 - Haldex coupling with four-wheel drive	363-367
1. Haldex coupling with four-wheel drive	363-365
2. Fuses on fuse holder, terminal 15 voltage supply relay	366
3. Fuses on fuse holder, four-wheel drive control unit	367
036 - Basic equipment with battery in luggage compartment	368-407
1. Basic equipment with battery in luggage compartment	368-372
2. Earth points, earth connections	373
3. Earth points, earth connections	374
4. Battery, alternator	375
5. Starter, suppression filter, battery cut-off relay	376
6. Intermittent wiper switch, cruise control system switch	377
7. Turn signal switch, steering angle sender, horn plate	378
8. Ignition/starter switch, terminal 50 voltage supply relay	379
9. Diagnostic connector, data bus diagnostic interface	380
10. Data bus diagnostic interface, drive train CAN bus, infotainment CAN bus	381
11. Data bus diagnostic interface, convenience CAN bus	382
12. Convenience CAN bus, driver door contact switch, front passenger door contact switch	383
13. Parking brake contact switch, luggage compartment light	384
14. Rear lid contact switch, number plate light	385
15. Front and rear interior light, glove compartment light	386
16. Headlight washer system relay, double washer pump relay 2, front windscreen wiper motor	387
17. Washer pump, windscreen and rear window washer pump, double washer pump relay 1	388
18. Light switch, illumination regulators - switches and instruments, front and rear fog light switch	389
19. Headlight range control regulator, front left headlight bulbs, left fog light	390
20. Front right headlight bulbs, right fog light	391

21. Tail light bulbs, turn signal, brake light, reversing light	392
22. Hazard warning light switch, treble tone horn, bass tone horn, reversing light switch	393
23. Clutch position sender, brake light switch	394
24. Fresh air blower switch, fresh air blower series resistor with overheating fuse	395
25. Fresh air and air recirculation flap switch, regulator for heated driver seat and front passenger seat	396
26. Heated rear window button, heated rear window relay	397
27. Fuses on fuse holder	398
28. Ashtray illumination, cigarette lighter illumination, fuses on fuse holder	399
29. Fuel pump, fuel gauge sender	400
30. Power steering control unit, terminal 15 voltage supply relay 2	401
31. Terminal 15 voltage supply relay, fuses on fuse holder	402
32. X-contact relief relay, fuses on fuse holder, left and right washer jet heater element	403
33. Radio controlled clock receiver, immobilizer reader coil, control unit with display in dash panel insert	404
34. Oil pressure switch, coolant shortage indicator switch, brake fluid level warning contact, control unit with display in dash panel insert	405
35. Ambient temperature sensor, windscreen washer fluid level sender/water level, front left brake pad wear sender, control unit with display in dash panel insert	406
36. Oil level and oil temperature sender, fuel gauge sender 2, control unit with display in dash panel insert	407
037 - 3.2 l Fuel injection engine (184 kW - Motronic - 6 cylinder), engine code BDB	408-435
1. 3.2 l Fuel injection engine (184 kW - Motronic - 6 cylinder), engine code BDB	408-413
2. Earth points, earth connections	414
3. Battery, alternator	415
4. Starter, suppression filter, battery cut-off relay	416
5. Terminal 15 voltage supply relay, cruise control system switch, ignition/starter switch	417
6. Terminal 50 voltage supply relay	418
7. Brake light switch, brake pedal switch, clutch travel sender, fuses on fuse holder	419
8. Terminal 15 voltage supply relay 2, fuses on fuse holder	420
9. Motronic current supply relay, radiator outlet coolant temperature sender	421
10. Variable intake manifold change-over solenoid valves, camshaft timing adjustment, activated charcoal filter system	422
11. Secondary air pump, secondary air inlet valve, suction jet pump valve, exhaust flap valve	423
12. Injectors	424
13. Continued coolant circulation relay, heater element (crankcase breather)	425
14. Ignition coils 1 to 3 with output stage, spark plug connector, spark plugs	426
15. Ignition coils 3 to 6 with output stage, spark plug connector, spark plugs	427
16. Hall sender, accelerator position sender	428
17. Throttle valve module, coolant temperature sender, knock sensors	429
18. Fuel pump, fuel gauge sender, air mass meter	430
19. Lambda probe, lambda probe after catalytic converter	431
20. Lambda probe 2, lambda probe 2 after catalytic converter	432
21. Drive train CAN bus, K-diagnosis wiring	433
22. Data bus diagnostic interface, control unit with display in dash panel insert	434
23. Oil pressure switch, control unit with display in dash panel insert	435
038 - Radiator fan control 520 W (with and without air conditioning system)	436-442
1. Radiator fan control 520 W (with and without air conditioning system)	436-439
2. Battery, fuses on fuse holder	440
3. Radiator fan control unit, Motronic current supply relay	441
4. Radiator fan, continued coolant circulation pump	442
039 - Radio and navigation system RNS-E without Bose sound system	443-453
1. Radio and navigation system RNS-E without Bose sound system	443-444
2. Battery, fuses on fuse holder	445
3. CD changer	446
4. Front loudspeaker	447
5. Rear loudspeaker with amplifier, infotainment CAN bus	448
6. Muting, infotainment CAN bus	449
7. Navigation system tuner for TV	450
8. Left aerial module, telephone, navigation system and auxiliary heater aerial	451
9. Left aerial module, heated rear window with window aerial	452
10. Rear window aerial 1, rear window aerial 2	453
040 - Radio and navigation system RNS-E with Bose sound system	454-465
1. Radio and navigation system RNS-E with Bose sound system	454-455
2. Battery, fuses on fuse holder	456
3. Front loudspeaker	457

4. Rear loudspeaker with amplifier	458
5. CD changer	459
6. Infotainment CAN bus, diagnostic connector	460
7. Infotainment CAN bus, muting	461
8. Navigation system tuner for TV	462
9. Left aerial module, telephone, navigation system and auxiliary heater aerial	463
10. Left aerial module, heated rear window with window aerial	464
11. Rear window aerial 1, rear window aerial 2	465
041 - Auxiliary heater	466-471
1. Auxiliary heater	466-468
2. Heater coolant shut-off valve, metering pump, combustion air blower, circulation pump	469
3. Temperature sensor, heater overheating fuse, glow plug with flame monitor	470
4. Heater coolant shut-off valve, metering pump, combustion air blower, circulation pump	471
042 - Radiator fan control - 60 W, 220 W (without air conditioning system)	472-475
1. Radiator fan control - 60 W, 220 W (without air conditioning system)	472
2. Radiator fan	473
3. Coolant temperature sender - radiator outlet	474
4. Matching resistor	475
043 - Automatic gearbox (09G)	476-486
1. Automatic gearbox (09G)	476-477
2. Earth points and earth connections	478
3. Fuses on fuse holder, multifunction switch	479
4. Fuses on fuse holder, multifunction switch, Tiptronic switch	480
5. Solenoid valves	481
6. Gearbox input speed sender, gearbox output speed sender, hydraulic pressure sender, gearbox oil temperature sender, selector lever lock solenoid	482
7. Drive train CAN bus, K-diagnosis wiring	483
8. Selector lever locked in position P switch, terminal 15 voltage supply relay	484
9. Terminal 50 voltage supply relay, ignition/starter switch	485
10. Data bus diagnostic interface, control unit in dash panel insert	486
044 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP), traction control system (TCS) and hydraulic brake servo (HBS)	487-494
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP), traction control system (TCS) and hydraulic brake servo (HBS)	487
2. ABS control unit	488
3. TCS and ESP button, ABS control unit, Onboard supply control unit, Terminal 15 voltage supply relay 2	489
4. Front right speed sensor, Front left speed sensor, ABS control unit, Onboard supply control unit	490
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Onboard supply control unit	491
6. ESP sensor unit, Brake servo vacuum sender, ABS control unit, Onboard supply control unit, ABS hydraulic unit	492
7. Brake pressure sender 1, ABS control unit, Headlight range control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	493
8. Steering angle sender, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, ABS warning lamp, ESP and TCS warning lamp	494
045 - Battery in luggage compartment (3-door models)	495-498
1. Battery in luggage compartment (3-door models)	495
2. Battery	496
3. Starter, suppression filter, battery cut-off relay	497
4. Alternator	498
046 - Battery in luggage compartment (5-door models)	499-502
1. Battery in luggage compartment (5-door models)	499
2. Battery	500
3. Starter, battery isolation igniter	501
4. Alternator	502
047 - Battery in engine compartment	503-505
1. Battery in engine compartment	503
2. Starter, battery, fuses on fuse holder/battery	504
3. Alternator, voltage regulator	505
048 - Airbags for driver and front passenger with belt tensioners and side airbag (5-door models)	506-516
1. Airbags for driver and front passenger with belt tensioners and side airbag (5-door models)	506
2. Earth connections, earth points	507
3. Fuses on fuse holder, battery isolation igniter	508
4. Terminal 15 voltage supply relay 2, front passenger side airbag deactivated warning lamp	509
5. Belt switch. terminal 15 voltage supply relay. key operated switch to deactivate airbag	510



6. Crash sensors	511
7. Seat belt tensioner, curtain airbag igniter	512
8. Side airbag igniter on driver side, side airbag igniter on front passenger side	513
9. Rear side airbag igniter on driver side, rear side airbag igniter on front passenger side	514
10. Driver side airbag igniter, front passenger side airbag igniter	515
11. Display unit control unit	516
049 - Basic equipment	517-555
1. Basic equipment	517
2. Earth points, earth connections	518
3. Earth points, earth connections	519
4. Intermittent wiper switch, cruise control system switch	520
5. Turn signal switch, steering angle sender, horn plate	521
6. Terminal 50 voltage supply relay, ignition/starter switch	522
7. Diagnostic connector, data bus diagnostic interface	523
8. Data bus diagnostic interface, drive train CAN bus, infotainment CAN bus	524
9. Data bus diagnostic interface, convenience CAN bus	525
10. Convenience CAN bus, driver door contact switch, front passenger door contact switch	526
11. Convenience CAN bus, rear left door contact switch, rear right door contact switch	527
12. Parking brake contact switch, luggage compartment light	528
13. Rear lid contact switch, number plate light	529
14. Front and rear interior light, glove compartment light	530
15. Headlight washer system relay, headlight washer system pump	531
16. Double washer pump relay 2, windscreen wiper motor, rain and light detector sensor	532
17. Rear window wiper motor, double washer pump relay 1	533
18. Light switch, illumination regulators, switches, instruments, front and rear fog light switch	534
19. Headlight range control regulator, front left headlight bulbs	535
20. Fog light, side repeater turn signals	536
21. Front right headlight bulbs, right fog light	537
22. 3-door models rear lid, tail light bulbs, turn signal, brake light, reversing light	538
23. 5-door models rear lid, tail light bulbs, turn signal, brake light, reversing light	539
24. Hazard warning light switch, treble tone horn, bass tone horn, reversing light switch	540
25. Clutch travel sender, brake light switch	541
26. Fresh air blower switch, potentiometer for temperature selection rotary knob	542
27. Auxiliary heating heater element, fresh air and air recirculation flap switch, auxiliary heater economy (ECON) button	543
28. Heated rear window button, heated rear window relay	544
29. Terminal 30 voltage supply relay 2, fuses on fuse holder	545
30. Ashtray illumination, cigarette lighter illumination, fuses on fuse holder	546
31. Fuel pump control unit, fuses on fuse holder	547
32. Terminal 15 voltage supply relay, fuses on fuse holder	548
33. Fuel pump relay, fuel gauge sender, fuel pump	549
34. X-contact relief relay, fuses on fuse holder, left and right washer jet heater element	550
35. Radio controlled clock receiver, immobilizer reader coil, control unit in dash panel insert	551
36. Coolant shortage indicator switch, fuel gauge sender 2, control unit in dash panel insert	552
37. Oil pressure switch, ambient temperature sensor, windscreen washer fluid level sender, control unit in dash panel insert	553
38. Front left brake pad wear sender, oil level and oil temperature sender, control unit in dash panel insert	554
39. Power steering control unit, control unit in dash panel insert	555
050 - Convenience system	556-582
1. Convenience system	556
2. Earth points, earth connections	557
3. Earth points, earth connections	558
4. Battery, window regulator single fuse	559
5. Fuses on fuse holder, terminal 15 voltage supply relay 2	560
6. Terminal 15 voltage supply relay, terminal 30 voltage supply relay 2	561
7. Interior light (front and rear) with reading lights	562
8. Bonnet contact switch, vanity mirrors on driver and front passenger side	563
9. Left and right footwell light, glove compartment light	564
10. Central locking and anti-theft alarm system aerial	565
11. Rear lid central locking motor	566
12. Parking brake contact switch, tank filler flap locking motor, luggage compartment light	567
13. Alarm horn, vehicle inclination sender, glass breakage sensor for rear window, interior monitoring sensor	568
14. Window regulator switch, driver side	569
15. Driver side central locking lock unit	570

16. Front left entry light, driver side interior locking button for central locking system, driver door control unit	571
17. Mirror adjustment switch, interior monitoring switch	572
18. Alarm system off switch, rear lid remote release button	573
19. Mirror adjustment motor/folding mirror motor, driver side	574
20. Front passenger side central locking lock unit	575
21. Mirror adjustment motor/folding mirror motor, front passenger side	576
22. Front right entry light, front passenger side door warning lamp, window regulator switch in front passenger door	577
23. 5-door models rear left, rear left window regulator switch, in door, entry light, door warning lamp	578
24. 5-door models rear left, rear left central locking lock unit	579
25. 5-door models rear right, rear right window regulator switch, in door, entry light, door warning lamp	580
26. 5-door models rear right, rear right central locking lock unit	581
27. Control unit with display in dash panel insert, data bus diagnostic interface	582
051 - 3.2 l Fuel injection engine (184 kW - Motronic - 6 cylinder), engine code BDB, BMJ	583-603
1. 3.2 l Fuel injection engine (184 kW - Motronic - 6 cylinder), engine code BDB, BMJ	583
2. Earth points, earth connections	584
3. Terminal 15 voltage supply relay, cruise control system switch, ignition/starter switch	585
4. Terminal 50 voltage supply relay	586
5. Brake light switch, brake pedal switch, clutch travel sender, fuses on fuse holder	587
6. Terminal 15 voltage supply relay 2	588
7. Motronic current supply relay, radiator outlet coolant temperature sender	589
8. Active charcoal filter system solenoid valve, variable intake manifold change-over, inlet camshaft control	590
9. Secondary air pump, secondary air inlet valve, exhaust flap valve	591
10. Injectors	592
11. Continued coolant circulation relay, heater element for crankcase breather	593
12. Ignition coils 1 to 3 with output stage, spark plug connector, spark plugs	594
13. Ignition coils 3 to 6 with output stage, spark plug connector, spark plugs	595
14. Hall sender, accelerator position sender	596
15. Throttle valve module, coolant temperature sender, knock sensors	597
16. Fuel pump, fuel gauge sender, air mass meter	598
17. Lambda probe, lambda probe after catalytic converter	599
18. Lambda probe 2, lambda probe 2 after catalytic converter	600
19. Drive train CAN bus, K-diagnosis wiring	601
20. Data bus diagnostic interface	602
21. Oil pressure switch, oil level and oil temperature sender	603
052 - Garage door operation - (Homelink)	604-607
1. Garage door operation - (Homelink)	604
2. Garage door operating unit	605
3. Garage door operating unit, garage door operation control unit	606
4. Terminal 15 voltage supply relay, terminal 15 voltage supply relay 2	607
053 - Ultrasonic parking aid, rear	608-611
1. Ultrasonic parking aid, rear	608
2. Voltage supply relay, parking aid control unit, fuses	609
3. Parking aid control unit, data bus diagnostic interface, fuses	610
4. Parking aid sender, parking aid warning buzzer, parking aid control unit	611
054 - Trailer operation	612-615
1. Trailer operation	612
2. Fuses, trailer detector control unit	613
3. Fuses, trailer detector control unit	614
4. Voltage supply relay, trailer socket	615
055 - Heated front seats (models with air conditioning system and manual seat adjustment)	616-619
1. Heated front seats (models with air conditioning system and manual seat adjustment)	616
2. Fuses on fuse box	617
3. Heated driver s seat	618
4. Heated front passenger s seat	619
056 - Heated front seats (models without air conditioning system, with manual seat adjustment)	620-626
1. Heated front seats (models without air conditioning system, with manual seat adjustment)	620
2. Earth points, earth connections	621
3. Heated driver s seat regulator, heated front passenger s seat regulator	622
4. Driver s seat heating control unit, terminal 15 voltage supply relay 2	623
5. Driver s seat heating control unit, fuses	624
6. Driver s seat heating control unit. front left seat heating	625

7. Front passenger s seat heating control unit, front right seat heating	626
057 - Heated rear seats (models with and without air conditioning system)	627-631
1. Heated rear seats (models with and without air conditioning system)	627
2. Earth points, earth connections	628
3. Fuses on fuse box, heated rear left seat control unit	629
4. Heated rear left seat control unit, rear left seat temperature sensor	630
5. Heated rear right seat control unit, rear right seat temperature sensor	631
058 - Lumbar support adjustment (models with manual seat adjustment)	632-634
1. Lumbar support adjustment (models with manual seat adjustment)	632
2. Lumbar support adjustment (driver s seat)	633
3. Lumbar support adjustment (front passenger s seat)	634
059 - Preparation for mobile telephone	635-639
1. Preparation for mobile telephone	635
2. Telephone transmitter and receiver unit, telephone / navigation / auxiliary heater aerial	636
3. Muting	637
4. Telephone microphone	638
5. Telephone bracket	639
060 - Airbags for driver and front passenger with belt tensioners and side airbag (3-door models)	640-649
1. Airbags for driver and front passenger with belt tensioners and side airbag (3-door models)	640
2. Earth connections, earth points	641
3. Fuse on fuse holder, battery cut-off relay	642
4. Terminal 15 voltage supply relay 2, front passenger side airbag deactivated warning lamp	643
5. Belt switch, terminal 15 voltage supply relay	644
6. Crash sensors	645
7. Seat belt tensioner, curtain airbag igniter	646
8. Side airbag igniter on driver side, side airbag igniter on front passenger side	647
9. Driver side airbag igniter, front passenger side airbag igniter 1	648
10. Control unit in dash panel insert	649
061 - Navigation system "NS LOW"	650-655
1. Navigation system "NS LOW"	650
2. Fuses, navigation system with CD drive control unit, onboard power supply control unit	651
3. Muting, infotainment CAN bus	652
4. Telephone/navigation (GPS)/auxiliary heater aerial	653
5. Data bus diagnostic interface	654
6. Function selection switch II, control unit with display in dash panel insert	655
062 - Diagnostic connector	656-659
1. Diagnostic connector	656
2. Diagnostic connector, fuses	657
3. Diagnostic connector, terminal 15 voltage supply relay	658
4. Data bus diagnostic interface, diagnostic connector	659
063 - Headlights with gas discharge lamps and automatic headlight range control	660-667
1. Headlights with gas discharge lamps and automatic headlight range control	660
2. Earth points, earth connections	661
3. Turn signal switch, ignition/starter switch	662
4. Control unit with display in dash panel insert	663
5. Vehicle level senders	664
6. Left headlight	665
7. Right headlight	666
8. Light switch, terminal 15 voltage supply relay	667
064 - Air conditioning system	668-681
1. Air conditioning system	668
2. Earth points, earth connections	669
3. Battery, battery cut-off relay	670
4. Fresh air blower control unit, fuses	671
5. X-contact relief relay, fuses	672
6. Terminal 15 voltage supply relay, fuses	673
7. High pressure sender, air quality sensor, compressor regulating valve, air conditioner	674
8. Ignition/starter switch, convenience CAN bus	675
9. Auxiliary air heater element, axiliary air heater control unit, convenience CAN bus	676
10. Heated rear window relay	677
11. Central flap control motor, air flow flap control motor, air recirculation flap control motor	678
12. Defroster flap control motor, left temperature flap control motor, right temperature flap control motor	679
13. Vent temperature sender, fresh air intake duct temperature sensor	680
14. Sunlight penetration photosensor, right vent temperature sender	681
065 - Automatic anti-dazzle interior mirror	682-685

1. Automatic anti-dazzle interior mirror	682
2. Fuses, terminal 15 voltage supply relay	683
3. Light sensor, automatic anti-dazzle interior mirror	684
4. Door control units, automatic anti-dazzle interior mirror	685
066 - Headlights (with coming home function)	686-689
1. Headlights (with coming home function)	686
2. Earth points, earth connections	687
3. Light switch, fuse on fuse box	688
4. Light switch, terminal 15 voltage supply relay	689
067 - Radio without Bose sound system	690-699
1. Radio without Bose sound system	690
2. Battery, fuses on fuse holder	691
3. Front loudspeaker	692
4. Rear loudspeaker without amplifier	693
5. Rear loudspeaker with amplifier	694
6. Rear loudspeaker with amplifier, infotainment CAN bus	695
7. Muting, infotainment CAN bus	696
8. CD changer	697
9. Left aerial module, rear window aerial 1	698
10. Left aerial module, heated rear window	699
068 - Radio with Bose sound system	700-708
1. Radio with Bose sound system	700
2. Battery, fuses on fuse holder	701
3. Front loudspeaker	702
4. Rear loudspeaker	703
5. Rear loudspeaker	704
6. Muting, infotainment CAN bus	705
7. CD changer	706
8. Left aerial module, rear window aerial 1	707
9. Left aerial module, heated rear window	708
069 - Radio and navigation system RNS-E without Bose sound system	709-720
1. Radio and navigation system RNS-E without Bose sound system	709
2. Battery, fuses on fuse holder	710
3. CD changer	711
4. Front loudspeaker	712
5. Rear loudspeaker with amplifier	713
6. Rear loudspeaker with amplifier, infotainment CAN bus	714
7. Muting, infotainment CAN bus	715
8. Navigation system tuner for TV	716
9. Left aerial module, telephone, navigation system and auxiliary heater aerial	717
10. Left aerial module, heated rear window with window aerial	718
11. Left aerial module, convenience system central control unit	719
12. Rear window aerial 1, rear window aerial 2	720
070 - Radio and navigation system RNS-E with Bose sound system	721-733
1. Radio and navigation system RNS-E with Bose sound system	721
2. Battery, fuses on fuse holder	722
3. Front loudspeaker	723
4. Rear loudspeaker with amplifier	724
5. Rear loudspeaker with amplifier	725
6. CD changer	726
7. Infotainment CAN bus, diagnostic connector	727
8. Infotainment CAN bus, muting	728
9. Navigation system tuner for TV	729
10. Left aerial module, telephone, navigation system and auxiliary heater aerial	730
11. Left aerial module, heated rear window with window aerial	731
12. Convenience system central control unit, left aerial module	732
13. Rear window aerial 1, rear window aerial 2	733
071 - 1.6 l - Fuel injection engine (75 kW - Simos - 4 cylinder), engine code BGU	734-748
1. 1.6 l - Fuel injection engine (75 kW - Simos - 4 cylinder), engine code BGU	734
2. Earth points, earth connections	735
3. Terminal 15 voltage supply relay, cruise control system switch, ignition/starter switch	736
4. Terminal 50 voltage supply relay	737
5. Secondary air pump relay, secondary air pump motor	738
6. Lambda probe, lambda probe after catalytic converter, fuel pump relay	739
7. Current supply relay for Simos control unit, electric fuel pump 2 relay	740
8. Brake light switch. brake pedal switch. clutch position sender	741

9. Accelerator position sender, exhaust gas recirculation valve, active charcoal filter system solenoid valve 1, variable intake manifold change-over valve	742
10. Engine speed sender, Hall sender, knock sensor 1, coolant temperature sender, throttle valve module	743
11. Ignition coils with output stage, heater element for crankcase breather	744
12. Radiator outlet coolant temperature sender, injectors	745
13. Drive train CAN bus, K-diagnosis wiring	746
14. Fuel gauge, reserve fuel warning lamp	747
15. Oil pressure switch, oil level and oil temperature sender	748
072 - 1.6 l - Fuel injection engine (85 kW - FSI - 4 cylinder), engine code BLP	749-767
1. 1.6 l - Fuel injection engine (85 kW - FSI - 4 cylinder), engine code BLP	749
2. Earth points, earth connections	750
3. Terminal 50 voltage supply relay, ignition/starter switch	751
4. Fuel gauge, fuel pump, terminal 15 voltage supply relay, fuse holder	752
5. Fuse holder	753
6. Motronic current supply relay	754
7. Injectors, vacuum pump for brakes	755
8. Solenoid valves	756
9. Lambda probe, lambda probe after catalytic converter	757
10. NOx sensor control unit, brake servo pressure sensor	758
11. Radiator outlet coolant temperature sender, exhaust gas temperature sender 1, engine speed sender, knock sensor 1	759
12. Brake light switch, brake pedal switch, clutch position sender	760
13. Hall sender, accelerator position sender, fuel pressure sender	761
14. Intake air temperature sender, coolant temperature, intake manifold pressure	762
15. Ignition coils 1 and 2 with output stage, spark plug connector, spark plugs	763
16. Ignition coils 3 and 4 with output stage, spark plug connector, spark plugs	764
17. Drive train CAN bus, K-diagnosis wiring	765
18. Fuel gauge, reserve fuel warning lamp	766
19. Oil pressure switch, oil level and oil temperature sender	767
073 - 2.0 l - Fuel injection engine (110 kW - FSI - 4 cylinder), engine code BLX	768-788
1. 2.0 l - Fuel injection engine (110 kW - FSI - 4 cylinder), engine code BLX	768
2. Earth points, earth connections	769
3. Terminal 50 voltage supply relay, ignition/starter switch	770
4. Fuel gauge, fuel pump, terminal 15 voltage supply relay, fuse holder	771
5. Fuse holder	772
6. Motronic current supply relay	773
7. Injectors, vacuum pump for brakes	774
8. Solenoid valves, map-controlled engine cooling system thermostat	775
9. Lambda probe, lambda probe 2	776
10. Lambda probe after catalytic converter, lambda probe 2 after catalytic converter	777
11. NOx sensor control unit, brake servo pressure sensor	778
12. Radiator outlet coolant temperature sender, exhaust gas temperature sender 1	779
13. Brake light switch, brake pedal switch, clutch position sender	780
14. Hall sender, accelerator position sender, fuel pressure sender	781
15. Intake air temperature sender, coolant temperature, intake manifold pressure	782
16. Engine speed sender, knock sensors	783
17. Ignition coils 1 and 2 with output stage, spark plug connector, spark plugs	784
18. Ignition coils 3 and 4 with output stage, spark plug connector, spark plugs	785
19. Drive train CAN bus, K-diagnosis wiring	786
20. Fuel gauge, reserve fuel warning lamp	787
21. Oil pressure switch, oil level and oil temperature sender	788
074 - 2.0 l - Fuel injection engine (147 kW - TFSI - 4 cylinder), engine code AXX, BPY	789-808
1. 2.0 l - Fuel injection engine (147 kW - TFSI - 4 cylinder), engine code AXX, BPY	789
2. Earth points, earth connections	790
3. Terminal 50 voltage supply relay, ignition/starter switch	791
4. Fuel gauge, fuel pump, terminal 15 voltage supply relay, fuse holder	792
5. Fuse holder	793
6. Motronic current supply relay	794
7. Injectors	795
8. Solenoid valves	796
9. Lambda probe, lambda probe after catalytic converter	797
10. Radiator outlet coolant temperature sender, engine component current supply relay	798
11. Brake light switch, brake pedal switch, clutch position sender	799
12. Hall sender, fuel pressure sender	800
13. Intake air temperature sender. coolant temperature. intake manifold pressure	801



14. Engine speed sender, knock sensors	802
15. Air mass meter, continued coolant circulation relay	803
16. Ignition coils 1 and 2 with output stage, spark plug connector, spark plugs	804
17. Ignition coils 3 and 4 with output stage, spark plug connector, spark plugs	805
18. Drive train CAN bus, K-diagnosis wiring	806
19. Data bus diagnostic interface	807
20. Oil pressure switch, oil level and oil temperature sender	808
075 - 2.0 l - Fuel injection engine (110 kW - FSI - 4 cylinder), engine codes BHD, BMB, BLY	809-829
1. 2.0 l - Fuel injection engine (110 kW - FSI - 4 cylinder), engine codes BHD, BMB, BLY	809
2. Earth points, earth connections	810
3. Terminal 50 voltage supply relay, ignition/starter switch	811
4. Fuel gauge, fuel pump, terminal 15 voltage supply relay, fuse holder	812
5. Fuse holder	813
6. Motronic current supply relay	814
7. Injectors, vacuum pump for brakes	815
8. Solenoid valves, map-controlled engine cooling system thermostat	816
9. Lambda probe, lambda probe 2	817
10. Lambda probe after catalytic converter, lambda probe 2 after catalytic converter	818
11. Lambda probe, lambda probe after catalytic converter	819
12. Radiator outlet coolant temperature sender, brake servo pressure sensor	820
13. Brake light switch, brake pedal switch, clutch position sender	821
14. Hall sender, fuel pressure sender	822
15. Intake air temperature sender, coolant temperature, intake manifold pressure	823
16. Engine speed sender, knock sensors	824
17. Ignition coils 1 and 2 with output stage, spark plug connector, spark plugs	825
18. Ignition coils 3 and 4 with output stage, spark plug connector, spark plugs	826
19. Drive train CAN bus, K-diagnosis wiring	827
20. Fuel gauge, reserve fuel warning lamp	828
21. Oil pressure switch, oil level and oil temperature sender	829
076 - 1.9l - Diesel engine (unit injectors), 77kW, 4-cylinder with engine code BKC	830-844
1. 1.9l - Diesel engine (unit injectors), 77kW, 4-cylinder with engine code BKC	830
2. Earth points, earth connections	831
3. Terminal 15 voltage supply relay, cruise control system switch, ignition/starter switch	832
4. Terminal 50 voltage supply relay	833
5. Brake light switch, brake pedal switch, clutch travel sender, fuses on fuse holder	834
6. Fuses on fuse holder	835
7. Terminal 30 voltage supply relay, unit injector valves	836
8. Glow plugs, automatic glow period control unit	837
9. Fuel pump, temperature sender	838
10. Heater element for crankcase breather, intake manifold flap motor	839
11. Air mass meter, exhaust gas recirculation valve, charge pressure control solenoid valve	840
12. Charge air pressure sender, engine speed sender, Hall sender	841
13. Drive train CAN bus, K-diagnosis wiring	842
14. Fuel gauge, reserve fuel warning lamp	843
15. Oil pressure switch, oil level and oil temperature sender	844
077 - 2.0 l - Diesel engine (100 kW - unit injectors - 4 cylinder), engine code AZV	845-859
1. 2.0 l - Diesel engine (100 kW - unit injectors - 4 cylinder), engine code AZV	845
2. Earth points, earth connections	846
3. Terminal 15 voltage supply relay, cruise control system switch, ignition/starter switch	847
4. Terminal 50 voltage supply relay	848
5. Brake light switch, brake pedal switch, clutch travel sender, fuses on fuse holder	849
6. Fuses on fuse holder	850
7. Terminal 30 voltage supply relay, unit injector valves	851
8. Glow plugs, automatic glow period control unit	852
9. Fuel pump, temperature sender	853
10. Heater element for crankcase breather, intake manifold flap motor	854
11. Air mass meter, exhaust gas recirculation valve, charge pressure control solenoid valve	855
12. Charge air pressure sender, engine speed sender, Hall sender	856
13. Drive train CAN bus, K-diagnosis wiring	857
14. Fuel gauge, reserve fuel warning lamp	858
15. Oil pressure switch, oil level and oil temperature sender	859
078 - Radiator fan control 60 W, 220 W (without air conditioning system)	860-863
1. Radiator fan control 60 W, 220 W (without air conditioning system)	860
2. Radiator fan	861
3. Radiator outlet coolant temperature sender	862
4. Terminal resistor	863

079 - Radiator fan control 340 W (with and without air conditioning system)	864-866
1. Radiator fan control 340 W (with and without air conditioning system)	864
2. Radiator fan, radiator fan 2	865
3. Radiator outlet coolant temperature sender	866
080 - Radiator fan control 520 W (with and without air conditioning system)	867-869
1. Radiator fan control 520 W (with and without air conditioning system)	867
2. Radiator fan, radiator fan 2	868
3. Radiator outlet coolant temperature sender	869
081 - Radiator fan control 520 W (with and without air conditioning system)	870-873
1. Radiator fan control 520 W (with and without air conditioning system)	870
2. Radiator fan, radiator fan 2	871
3. Radiator outlet coolant temperature sender	872
4. Continued coolant circulation pump	873
082 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP), traction control system (TCS) and with no hydraulic brake servo (HBS)	874-881
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP), traction control system (TCS) and with no hydraulic brake servo (HBS)	874
2. ABS control unit	875
3. TCS and ESP button, ABS control unit, Onboard supply control unit, Terminal 15 voltage supply relay 2	876
4. ABS control unit, Onboard supply control unit	877
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Onboard supply control unit	878
6. ESP sensor unit, ABS control unit, Onboard supply control unit, ABS hydraulic unit	879
7. Brake pressure sender 1, ABS control unit, Headlight range control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	880
8. Steering angle sender, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, ABS warning lamp, ESP and TCS warning lamp	881
083 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP), traction control system (TCS) and hydraulic brake servo (HBS)	882-889
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP), traction control system (TCS) and hydraulic brake servo (HBS)	882
2. ABS control unit	883
3. TCS and ESP button, ABS control unit, Onboard supply control unit, Terminal 15 voltage supply relay 2	884
4. ABS control unit, Onboard supply control unit	885
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Onboard supply control unit	886
6. ESP sensor unit, Brake servo vacuum sender, ABS control unit, Onboard supply control unit, ABS hydraulic unit	887
7. Brake pressure sender 1, ABS control unit, Headlight range control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	888
8. Steering angle sender, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, ABS warning lamp, ESP and TCS warning lamp	889
084 - Anti-lock brake system (ABS) with traction control system (TCS)	890-897
1. Anti-lock brake system (ABS) with traction control system (TCS)	890
2. ABS control unit	891
3. TCS and ESP button, ABS control unit, Onboard supply control unit, Terminal 15 voltage supply relay 2	892
4. Front right speed sensor, Front left speed sensor, ABS control unit, Onboard supply control unit	893
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Onboard supply control unit	894
6. ABS control unit, Onboard supply control unit, ABS hydraulic unit	895
7. ABS control unit, Headlight range control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	896
8. Steering angle sender, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, ABS warning lamp, Traction control system warning lamp	897
085 - Driving school vehicle	898-900
1. Driving school vehicle	898
2. Footwell light switch, warning buzzer switch	899
3. Combi-processor in dash panel insert, electric socket	900
086 - Haldex coupling with four-wheel drive	901-903
1. Haldex coupling with four-wheel drive	901
2. Fuses on fuse holder, terminal 15 voltage supply relay	902
3. Fuses on fuse holder, four-wheel drive control unit	903
087 - Direct shift gearbox (02E)	904-912

1. Direct shift gearbox (02E)	904
2. Earth points and earth connections	905
3. Fuses on fuse holder	906
4. Selector lever, fuses on fuse holder	907
5. Selector lever, selector lever locked in position P switch, selector lever lock solenoid	908
6. Drive train CAN bus, K-diagnosis wiring, selector lever	909
7. Terminal 15 voltage supply relay, selector lever	910
8. Ignition/starter switch, terminal 50 voltage supply relay	911
9. Data bus diagnostic interface, control unit in dash panel insert	912
088 - Automatic gearbox (09G)	913-922
1. Automatic gearbox (09G)	913
2. Earth points and earth connections	914
3. Fuses, multifunction switch	915
4. Fuses, multifunction switch, Tiptronic switch	916
5. Solenoid valves	917
6. Gearbox input speed sender, gearbox output speed sender	918
7. Drive train CAN bus, K-diagnosis wiring	919
8. Selector lever locked in position P switch, terminal 15 voltage supply relay	920
9. Terminal 50 voltage supply relay, ignition/starter switch	921
10. Data bus diagnostic interface, control unit in dash panel insert	922
089 - Data bus wires (CAN bus, LIN bus)	923-931
1. Data bus wires (CAN bus, LIN bus)	923
2. Drive train CAN bus	924
3. Drive train CAN bus	925
4. Drive train CAN bus	926
5. Convenience CAN bus	927
6. Convenience CAN bus, LIN bus	928
7. Convenience CAN bus	929
8. Infotainment CAN bus	930
9. Infotainment CAN bus	931
090 - Steering wheel with tiptronic buttons	932-934
1. Steering wheel with tiptronic buttons	932
2. Voltage supply, tiptronic switch in steering wheel	933
3. Overheating sensor, horn plate, airbag igniter (driver s side)	934
091 - Steering wheel with tiptronic paddle levers	935-936
1. Steering wheel with tiptronic paddle levers	935
2. Voltage supply, tiptronic switch in steering wheel	936
092 - Airbags for driver and front passenger with belt tensioners and side airbag (5-door models)	937-947
1. Airbags for driver and front passenger with belt tensioners and side airbag (5-door models)	937
2. Earth connections, earth points	938
3. Fuses on fuse holder, battery isolation igniter	939
4. Terminal 15 voltage supply relay 2, front passenger side airbag deactivated warning lamp	940
5. Belt switch, terminal 15 voltage supply relay	941
6. Crash sensors	942
7. Seat belt tensioner, curtain airbag igniter	943
8. Side airbag igniter on driver side, side airbag igniter on front passenger side	944
9. Rear side airbag igniter on driver side, rear side airbag igniter on front passenger side	945
10. Driver side airbag igniter, front passenger side airbag igniter	946
11. Display unit control unit	947
093 - Electric seat adjustment with lumbar support adjustment and seat heating	948-953
1. Electric seat adjustment with lumbar support adjustment and seat heating	948
2. Seat adjustment driver seat	949
3. Lumbar support adjustment	950
4. Seat adjustment front passenger seat	951
5. Seat heating driver seat	952
6. Seat heating front passenger seat	953
094 - Radio and navigation system (models for Japan)	954-967
1. Radio and navigation system (models for Japan)	954
2. Voltage supply, terminal 15 voltage supply relay	955
3. Voltage supply	956
4. CD changer	957
5. Front loudspeaker with Bose sound system	958
6. Rear loudspeaker with Bose sound system	959
7. Internal microphone, bass loudspeaker with Bose sound system	960
8. Front loudspeaker without Bose sound system	961
9. Rear loudspeaker without Bose sound system	962

10. Amplifier with bass loudspeaker, on left in luggage compartment	963
11. Left aerial module	964
12. Left aerial module, telephone, navigation system and auxiliary heater aerial	965
13. Left aerial module, window aerial suppression filter	966
14. Left aerial module, rear window aerial 1, rear window aerial 2	967
095 - Tyre pressure monitor	968-971
1. Tyre pressure monitor	968
2. Terminal 15 voltage supply relay	969
3. Tyre pressure monitor button	970
4. Control unit in dash panel insert	971
096 - Sliding sunroof motor (Open-sky-System)	972-973
1. Sliding sunroof motor (Open-sky-System)	972
2. Sunroof button, sliding sunroof adjustment control unit	973
097 - Multifunction steering wheel	974-976
1. Multifunction steering wheel	974
2. Multifunction buttons on left in steering wheel	975
3. Multifunction buttons on right in steering wheel	976
098 - Radio	977-990
1. Radio	977
2. Battery, fuses on fuse holder	978
3. Front loudspeaker with Bose sound system	979
4. Rear loudspeaker with Bose sound system	980
5. Internal microphone, bass loudspeaker with Bose sound system	981
6. Front loudspeaker	982
7. Rear loudspeaker without amplifier	983
8. Amplifier with bass loudspeaker, on left in luggage compartment, rear loudspeaker	984
9. Amplifier with bass loudspeaker, on left in luggage compartment	985
10. Satellite radio, telephone transmitter and receiver unit, roof aerial	986
11. CD changer with satellite radio	987
12. CD changer without satellite radio	988
13. Left aerial module, rear window aerial 1	989
14. Left aerial module, window aerial suppression filter	990
099 - Radio and navigation system RNS-E	991-1004
1. Radio and navigation system RNS-E	991
2. Battery, fuses on fuse holder	992
3. Front loudspeaker with Bose sound system	993
4. Rear loudspeaker with Bose sound system	994
5. Internal microphone, bass loudspeaker with Bose sound system	995
6. Front loudspeaker	996
7. Amplifier with bass loudspeaker, on left in luggage compartment, rear loudspeaker	997
8. Amplifier with bass loudspeaker, on left in luggage compartment	998
9. Data bus diagnostic interface, telephone transmitter and receiver unit	999
10. Roof aerial, telephone transmitter and receiver unit	1000
11. CD changer with satellite radio	1001
12. CD changer without satellite radio	1002
13. Left aerial module, rear window aerial 1	1003
14. Left aerial module, window aerial suppression filter	1004
100 - Preparation for mobile telephone	1005-1008
1. Preparation for mobile telephone	1005
2. Telephone microphone, aerial for Bluetooth	1006
3. Muting	1007
4. roof aerial	1008
101 - Basic equipment	1009-1043
1. Basic equipment	1009
2. Intermittent wiper switch, cruise control system switch	1010
3. Turn signal switch, horn plate, steering angle sender	1011
4. Ignition/starter switch, terminal 50 voltage supply relay	1012
5. Data bus diagnostic interface, diagnostic connector	1013
6. Drive train CAN bus, infotainment CAN bus	1014
7. Convenience CAN bus, central locking deadlock function warning lamp	1015
8. Convenience CAN bus, door contact switch	1016
9. Convenience CAN bus, rear door contact switch	1017
10. Hazard warning light switch, cigarette lighter, 12 V socket	1018
11. Parking brake contact switch, tank filler flap locking motor	1019
12. Light switch, front and rear fog light switch	1020
13. Switches and instruments illumination regulator. left foa liiht. riht foa liiht	1021



14. Front interior light, rear interior light, glove compartment light	1022
15. Headlight washer system relay, headlight washer system pump	1023
16. Brake pedal switch, clutch position sender	1024
17. Rain and light detector sensor, windscreen wiper motor, double washer pump relay 2	1025
18. Left side ligh, front left turn signal, left side turn signal bulb, left dipped beam, left main beam	1026
19. Reversing light switch, bonnet contact switch, treble tone horn, bass tone horn	1027
20. Right side ligh, front right turn signal, right side turn signal bulb, right dipped beam, right main beam	1028
21. Heated rear window relay, window aerial suppression filter, heated rear window	1029
22. Terminal 30 voltage supply relay 2, fuses on fuse holder	1030
23. Fuel pump control unit, electric socket, fuses on fuse holder	1031
24. Fuses on fuse holder, fuel gauge sender, fuel system pressurisation pump	1032
25. Terminal 15 voltage supply relay, fuses on fuse holder	1033
26. X-contact relief relay, fuses on fuse holder	1034
27. Rear lid contact switch for anti-theft alarm, rear lid central locking motor, number plate light	1035
28. Rear window wiper and washer relay, double washer pump relay 1, washer pump	1036
29. Left tail light, left tail light, rear left turn signal, left brake light, left reversing light	1037
30. Right tail light, rear right turn signal, right brake light, right reversing light	1038
31. Control unit in dash panel insert, radio controlled clock, luggage compartment light	1039
32. Control unit in dash panel insert, fuel gauge, coolant shortage indicator switch	1040
33. Control unit in dash panel insert, ambient temperature sensor, windscreen washer fluid level sender, oil pressure switch, buzzer and gong	1041
34. Control unit in dash panel insert, front left brake pad wear sender, oil level and oil temperature sender	1042
35. Control unit in dash panel insert, steering moment sender, power steering control unit	1043
102 - Basic equipment	1044-1081
1. Basic equipment	1044
2. Earth points, earth connections	1045
3. Earth points, earth connections	1046
4. Intermittent wiper switch, cruise control system switch	1047
5. Turn signal switch	1048
6. Ignition/starter switch	1049
7. Diagnostic connector, data bus diagnostic interface	1050
8. Data bus diagnostic interface, drive train CAN bus, infotainment CAN bus	1051
9. Data bus diagnostic interface, convenience CAN bus	1052
10. Convenience CAN bus, driver door contact switch, front passenger door contact switch	1053
11. Convenience CAN bus, rear door contact switch	1054
12. Parking brake contact switch, luggage compartment light	1055
13. Rear lid contact switch, number plate light	1056
14. Front and rear interior light, glove compartment light	1057
15. Headlight washer system relay, headlight washer system pump	1058
16. Double washer pump relay 2, windscreen wiper motor, rain and light detector sensor	1059
17. Rear window wiper motor, double washer pump relay 1	1060
18. Light switch, switches and instruments illumination regulator, front and rear fog light switch	1061
19. Headlight range control regulator, left headlight bulbs	1062
20. Fog light, side repeater turn signals	1063
21. Right headlight bulbs, right fog light	1064
22. 3-door models rear lid, tail light bulbs, turn signal, brake light, reversing light	1065
23. 5-door models rear lid, tail light bulbs, turn signal, brake light, reversing light	1066
24. Hazard warning light switch, treble tone horn, bass tone horn, reversing light switch	1067
25. Brake light switch, clutch position sender	1068
26. Fresh air blower switch, potentiometer, temperature selection rotary knob	1069
27. Heated driver seat regulator, heated front passenger seat regulator	1070
28. Heated rear window button, heated rear window relay	1071
29. Terminal 30 voltage supply relay 2, fuses on fuse holder	1072
30. Ashtray illumination, cigarette lighter illumination, fuses on fuse holder	1073
31. Fuses on fuse holder	1074
32. Terminal 15 voltage supply relay 2, fuses on fuse holder	1075
33. X-contact relief relay, fuses on fuse holder, left and right washer jet heater element	1076
34. Radio controlled clock receiver, immobilizer reader coil, control unit in dash panel insert	1077
35. Brake fluid level warning contact, control unit in dash panel insert	1078
36. Oil pressure switch, ambient temperature sensor, windscreen washer fluid level sender, control unit in dash panel insert	1079
37. Front left brake pad wear sender, oil level and oil temperature sender, control unit in dash panel insert	1080



38. Steering moment sender, control unit in dash panel insert	1081
103 - German special police, special vehicles (civil vehicle, doctor on call vehicle)	1082-1088
1. German special police, special vehicles (civil vehicle, doctor on call vehicle)	1082
2. Battery, second battery, battery isolation relay, fuses	1083
3. Suppression filter, 2-way radio switch, two-way radio cut-off relay, special vehicle fuse 2	1084
4. Two-way radio 2M, 2-way radio loudspeaker volume control 1, front left loudspeaker, special vehicle fuses	1085
5. Two-way radio 4M, 2-way radio loudspeaker volume control 2, front right loudspeaker, special vehicle fuses	1086
6. Operating unit for special signals, dual tone horn relay, siren system relay	1087
7. Power horn, siren system relay, special vehicle fuse	1088
104 - Battery in engine compartment	1089-1091
1. Battery in engine compartment	1089
2. Starter, battery, fuses on fuse holder A	1090
3. Alternator, voltage regulator	1091
105 - Battery in engine compartment	1092-1094
1. Battery in engine compartment	1092
2. Starter, battery, fuses on fuse holder A	1093
3. Alternator, voltage regulator	1094
106 - Sliding/tilting sunroof	1095-1096
1. Sliding/tilting sunroof	1095
2. Sliding sunroof motor, sliding sunroof adjustment control unit	1096
107 - Battery in luggage compartment	1097-1100
1. Battery in luggage compartment	1097
2. Battery	1098
3. Starter, suppression filter, battery isolation igniter	1099
4. Alternator	1100
108 - Navigation system NS-LOW	1101-1105
1. Navigation system NS-LOW	1101
2. Fuses, navigation system with CD drive control unit, onboard supply control unit	1102
3. Muting, infotainment CAN bus	1103
4. roof aerial	1104
5. Function selection switch 2, control unit in dash panel insert	1105
109 - Radio and navigation system RNS-E without Bose sound system	1106-1118
1. Radio and navigation system RNS-E without Bose sound system	1106
2. Fuses on fuse holder	1107
3. CD changer, iPod holder, USB connection retainer	1108
4. Front loudspeaker	1109
5. Amplifier with bass loudspeaker, on left in luggage compartment, rear loudspeaker	1110
6. Amplifier with bass loudspeaker, on left in luggage compartment	1111
7. Infotainment CAN bus, data bus diagnostic interface	1112
8. Infotainment CAN bus, telephone microphone	1113
9. Navigation system tuner for TV	1114
10. Left aerial module, roof aerial	1115
11. Left aerial module, heated rear window with window aerial	1116
12. Left aerial module, convenience system central control unit	1117
13. Rear window aerial 1, rear window aerial 2	1118
110 - Radio and navigation system RNS-E with Bose sound system	1119-1131
1. Radio and navigation system RNS-E with Bose sound system	1119
2. Fuses on fuse holder	1120
3. Front loudspeaker	1121
4. Rear loudspeaker	1122
5. Bass loudspeaker, internal microphone	1123
6. CD changer, iPod holder, USB connection retainer	1124
7. Infotainment CAN bus, data bus diagnostic interface	1125
8. Infotainment CAN bus, telephone microphone	1126
9. Navigation system tuner for TV	1127
10. Left aerial module, roof aerial	1128
11. Left aerial module, heated rear window with window aerial	1129
12. Convenience system central control unit, left aerial module	1130
13. Rear window aerial 1, rear window aerial 2	1131
111 - 3.2 l Fuel injection engine (184 kW - Motronic - 6 cylinder), engine code BMJ, BUB	1132-1151
1. 3.2 l Fuel injection engine (184 kW - Motronic - 6 cylinder), engine code BMJ, BUB	1132
2. Cruise control system switch, ignition/starter switch	1133
3. Terminal 50 voltage supply relay	1134
4. Brake light switch. brake pedal switch. clutch position sender	1135

5. Terminal 15 voltage supply relay 2	1136
6. Motronic current supply relay, radiator outlet coolant temperature sender	1137
7. Active charcoal filter system solenoid valve 1, variable intake manifold change-over valve, inlet camshaft control valve	1138
8. Secondary air inlet valve, exhaust flap valve	1139
9. Injectors	1140
10. Continued coolant circulation relay, heater element (crankcase breather)	1141
11. Ignition coils 1 to 3 with output stage, spark plug connector, spark plugs	1142
12. Ignition coils 4 to 6 with output stage, spark plug connector, spark plugs	1143
13. Hall sender, accelerator position sender	1144
14. Throttle valve module, coolant temperature sender, knock sensors	1145
15. Fuel pump, fuel gauge sender, air mass meter	1146
16. Lambda probe after catalytic converter, lambda probe 2 after catalytic converter	1147
17. Lambda probe, lambda probe 2	1148
18. Drive train CAN bus, diagnosis	1149
19. Data bus diagnostic interface	1150
20. Oil pressure switch, oil level and oil temperature sender	1151
112 - Basic equipment	1152-1185
1. Basic equipment	1152
2. Intermittent wiper switch, cruise control system switch	1153
3. Turn signal switch, horn plate, steering angle sender	1154
4. Ignition/starter switch	1155
5. Data bus diagnostic interface, diagnostic connector	1156
6. Drive train CAN bus, infotainment CAN bus	1157
7. Convenience CAN bus, central locking deadlock function warning lamp	1158
8. Convenience CAN bus, door contact switch	1159
9. Convenience CAN bus, rear door contact switch	1160
10. Hazard warning light switch, cigarette lighter, 12 V socket	1161
11. Parking brake contact switch, tank filler flap locking motor	1162
12. Light switch, front and rear fog light switch	1163
13. Switches and instruments illumination regulator, left fog light, right fog light	1164
14. Front interior light, rear interior light, glove compartment light	1165
15. Headlight washer system relay, headlight washer system pump	1166
16. Brake pedal switch, clutch position sender	1167
17. Rain and light detector sensor, windscreen wiper motor, double washer pump relay 2	1168
18. Left side light, front left turn signal, left side turn signal bulb, left dipped beam, left main beam	1169
19. Reversing light switch, bonnet contact switch, treble tone horn, bass tone horn	1170
20. Right side light, front right turn signal, right side turn signal bulb, right dipped beam, right main beam	1171
21. Heated rear window relay, window aerial suppression filter, heated rear window	1172
22. Terminal 30 voltage supply relay 2, fuses on fuse holder	1173
23. Fuses on fuse holder	1174
24. Terminal 15 voltage supply relay, fuses on fuse holder	1175
25. X-contact relief relay, fuses on fuse holder	1176
26. Rear lid contact switch for anti-theft alarm, rear lid central locking motor, number plate light	1177
27. Rear window wiper motor, windscreen and rear window washer pump	1178
28. Left tail light, left tail light, rear left turn signal, left brake light, left reversing light	1179
29. Right tail light, rear right turn signal, right brake light, right reversing light	1180
30. Control unit in dash panel insert, radio controlled clock, luggage compartment light	1181
31. Control unit in dash panel insert, fuel gauge, coolant shortage indicator switch	1182
32. Control unit in dash panel insert, ambient temperature sensor, windscreen washer fluid level sender, oil pressure switch, buzzer and gong	1183
33. Control unit in dash panel insert, front left brake pad wear sender, oil level and oil temperature sender	1184
34. Control unit in dash panel insert, steering moment sender, power steering control unit	1185
113 - Preparation for radio trade product	1186-1190
1. Preparation for radio trade product	1186
2. Voltage supply	1187
3. Front and rear loudspeaker	1188
4. Rear loudspeaker	1189
5. Left aerial module, rear window aerial 1	1190
114 - 2.0 l - Fuel injection engine (110 kW - FSI - 4 cylinder), engine code BLR	1191-1209
1. 2.0 l - Fuel injection engine (110 kW - FSI - 4 cylinder), engine code BLR	1191
2. Ignition/starter switch, onboard supply control unit, steering column electronics control unit, terminal 50 voltage supply relay	1192

3. Fuel gauge, fuel system pressurisation pump	1193
4. Fuse holder	1194
5. Motronic current supply relay	1195
6. Injectors, vacuum pump for brakes	1196
7. Solenoid valve, map-controlled engine cooling system thermostat	1197
8. Lambda probe, lambda probe 2	1198
9. Lambda probe after catalytic converter, lambda probe 2 after catalytic converter	1199
10. Radiator outlet coolant temperature sender, brake servo pressure sensor, intake air temperature sender 2	1200
11. Brake light switch, brake pedal switch, clutch position sender	1201
12. Hall sender, accelerator position sender, fuel pressure sender	1202
13. Intake air temperature sender, coolant temperature sender, intake manifold pressure sender	1203
14. Engine speed sender, knock sensors	1204
15. Ignition coils 1 and 2 with output stage, spark plug connector, spark plugs	1205
16. Ignition coils 3 and 4 with output stage, spark plug connector, spark plugs	1206
17. Drive train CAN bus, diagnosis	1207
18. Data bus diagnostic interface	1208
19. Oil pressure switch, oil level and oil temperature sender	1209
115 - Auxiliary heater	1210-1214
1. Auxiliary heater	1210
2. Remote control receiver for auxiliary heating	1211
3. Roof aerial, remote control receiver for auxiliary heating	1212
4. Coolant shut-off valve, heater, metering pump, combustion air blower, circulation pump	1213
5. Data bus diagnostic interface, voltage supply	1214
116 - 2.0 l - Fuel injection engine (147 kW - TFSI - 4 cylinder), engine code AXX, BPY	1215-1233
1. 2.0 l - Fuel injection engine (147 kW - TFSI - 4 cylinder), engine code AXX, BPY	1215
2. Terminal 50 voltage supply relay, ignition/starter switch	1216
3. Fuel gauge sender, fuel system pressurisation pump	1217
4. Fuses on fuse holder	1218
5. Motronic current supply relay	1219
6. Injectors	1220
7. Solenoid valves	1221
8. Lambda probe, lambda probe after catalytic converter	1222
9. Radiator outlet coolant temperature sender, engine component current supply relay	1223
10. Brake light switch, brake pedal switch, clutch position sender	1224
11. Hall sender, fuel pressure sender, accelerator position sender	1225
12. Coolant temperature sender, intake air temperature sender 2, intake manifold flap potentiometer	1226
13. Engine speed sender, knock sensors	1227
14. Air mass meter, continued coolant circulation relay	1228
15. Ignition coils 1 and 2 with output stage, spark plug connector, spark plugs	1229
16. Ignition coils 3 and 4 with output stage, spark plug connector, spark plugs	1230
17. Drive train CAN bus, diagnosis	1231
18. Data bus diagnostic interface	1232
19. Oil pressure switch, oil level and oil temperature sender	1233
117 - 1.6 l - Fuel injection engine (75 kW - Simos - 4 cylinder), engine code BSE, BSF	1234-1247
1. 1.6 l - Fuel injection engine (75 kW - Simos - 4 cylinder), engine code BSE, BSF	1234
2. Cruise control system switch, ignition/starter switch	1235
3. Terminal 50 voltage supply relay	1236
4. Secondary air pump relay, secondary air pump motor	1237
5. Lambda probe, lambda probe after catalytic converter	1238
6. Current supply relay for Simos control unit, electric fuel pump 2 relay	1239
7. Brake light switch, brake pedal switch, clutch position sender	1240
8. Accelerator position sender, active charcoal filter system solenoid valve 1, variable intake manifold change-over valve	1241
9. Engine speed sender, Hall sender, knock sensor 1, coolant temperature sender, throttle valve module	1242
10. Ignition coils with output stage, heater element for crankcase breather	1243
11. Radiator outlet coolant temperature sender, injectors	1244
12. Drive train CAN bus, diagnosis	1245
13. Data bus diagnostic interface	1246
14. Oil pressure switch, oil level and oil temperature sender	1247
118 - 1.6 l - Fuel injection engine (85 kW - FSI - 4 cylinder), engine code BLF	1248-1264
1. 1.6 l - Fuel injection engine (85 kW - FSI - 4 cylinder), engine code BLF	1248
2. Terminal 50 voltage supply relay, ignition/starter switch	1249
3. Fuel gauge sender, fuel system pressurisation pump	1250
4. Fuses on fuse holder	1251

5. Motronic current supply relay	1252
6. Injectors, vacuum pump for brakes	1253
7. Solenoid valves	1254
8. Lambda probe, lambda probe after catalytic converter	1255
9. Radiator outlet coolant temperature sender, brake servo pressure sensor	1256
10. Brake light switch, brake pedal switch, clutch position sender	1257
11. Hall sender, accelerator position sender, fuel pressure sender	1258
12. Intake air temperature sender, coolant temperature sender, intake manifold pressure sender	1259
13. Ignition coils 1 and 2 with output stage, spark plug connector, spark plugs	1260
14. Ignition coils 3 and 4 with output stage, spark plug connector, spark plugs	1261
15. Drive train CAN bus, diagnosis	1262
16. Data bus diagnostic interface	1263
17. Oil pressure switch, oil level and oil temperature sender	1264
119 - 2.0 l - Fuel injection engine (110 kW - FSI - 4 cylinder), engine code BLY	1265-1282
1. 2.0 l - Fuel injection engine (110 kW - FSI - 4 cylinder), engine code BLY	1265
2. Terminal 50 voltage supply relay, ignition/starter switch	1266
3. Fuel gauge sender, fuel system pressurisation pump, fuses on fuse holder	1267
4. Fuses on fuse holder	1268
5. Motronic current supply relay	1269
6. Injectors, vacuum pump for brakes	1270
7. Solenoid valve, map-controlled engine cooling system thermostat	1271
8. Lambda probe, lambda probe after catalytic converter	1272
9. Radiator outlet coolant temperature sender, brake servo pressure sensor	1273
10. Brake light switch, brake pedal switch, clutch position sender	1274
11. Hall sender, fuel pressure sender	1275
12. Intake air temperature sender, coolant temperature sender, intake manifold pressure sender	1276
13. Engine speed sender, knock sensors	1277
14. Ignition coils 1 and 2 with output stage, spark plug connector, spark plugs	1278
15. Ignition coils 3 and 4 with output stage, spark plug connector, spark plugs	1279
16. Drive train CAN bus, diagnosis	1280
17. Data bus diagnostic interface	1281
18. Oil pressure switch, oil level and oil temperature sender	1282
120 - 1.9 l - Diesel engine (77 kW - unit injectors - 4 cylinder), engine code BLS	1283-1297
1. 1.9 l - Diesel engine (77 kW - unit injectors - 4 cylinder), engine code BLS	1283
2. Cruise control system switch, ignition/starter switch	1284
3. Terminal 50 voltage supply relay	1285
4. Brake light switch, brake pedal switch, clutch position sender, fuses on fuse holder	1286
5. Fuses on fuse holder	1287
6. Terminal 30 voltage supply relay, unit injector valves	1288
7. Glow plugs, automatic glow period control unit	1289
8. Fuel pump, temperature sender	1290
9. Heater element for crankcase breather, intake manifold flap motor, air mass meter	1291
10. Lambda probe, exhaust gas pressure sensor 1, temperature sensor	1292
11. Solenoid valves	1293
12. Engine speed sender, charge air pressure sender, hall sender	1294
13. Drive train CAN bus, diagnosis	1295
14. Data bus diagnostic interface	1296
15. Oil pressure switch, oil level and oil temperature sender	1297
121 - 1.9 l - Diesel engine (77 kW - unit injectors - 4 cylinder), engine code BKC	1298-1311
1. 1.9 l - Diesel engine (77 kW - unit injectors - 4 cylinder), engine code BKC	1298
2. Cruise control system switch, ignition/starter switch	1299
3. Terminal 50 voltage supply relay	1300
4. Brake light switch, brake pedal switch, clutch position sender, fuses on fuse holder	1301
5. Fuses on fuse holder	1302
6. Terminal 30 voltage supply relay, unit injector valves	1303
7. Glow plugs, automatic glow period control unit	1304
8. Fuel pump, temperature sender	1305
9. Heater element for crankcase breather, intake manifold flap motor	1306
10. Air mass meter, exhaust gas recirculation valve, charge pressure control solenoid valve	1307
11. Charge air pressure sender, engine speed sender, hall sender	1308
12. Drive train CAN bus, diagnosis	1309
13. Data bus diagnostic interface	1310
14. Oil pressure switch, oil level and oil temperature sender	1311
122 - 2.0 l - Diesel engine (103 kW - unit injectors - 4 cylinder), engine code BMM	1312-1326
1. 2.0 l - Diesel engine (103 kW - unit injectors - 4 cylinder), engine code BMM	1312
2. Cruise control system switch, ignition/starter switch	1313

3. Terminal 50 voltage supply relay	1314
4. Brake light switch, brake pedal switch, clutch position sender, fuses on fuse holder	1315
5. Fuses on fuse holder	1316
6. Terminal 30 voltage supply relay, unit injector valves	1317
7. Glow plugs, automatic glow period control unit	1318
8. Fuel pump, temperature sender	1319
9. Heater element for crankcase breather, intake manifold flap motor, air mass meter	1320
10. Lambda probe, exhaust gas pressure sensor 1, temperature sensor	1321
11. Solenoid valves	1322
12. Engine speed sender, charge air pressure sender, hall sender	1323
13. Drive train CAN bus, diagnosis	1324
14. Data bus diagnostic interface	1325
15. Oil pressure switch, oil level and oil temperature sender	1326
123 - Airbags for driver and front passenger with belt tensioners and side airbags	1327-1336
1. Airbags for driver and front passenger with belt tensioners and side airbags	1327
2. Fuses on fuse holder, battery isolation igniter	1328
3. Terminal 15 voltage supply relay 2	1329
4. Belt switch, airbag control unit	1330
5. Crash sensors	1331
6. Seat belt tensioner, curtain airbag igniter	1332
7. Side airbag igniter on driver side, side airbag igniter on front passenger side	1333
8. Rear side airbag igniter on driver side, rear side airbag igniter on front passenger side	1334
9. Driver side airbag igniter, front passenger side airbag igniter	1335
10. Control unit in dash panel insert, steering column electronics control unit, airbag warning lamp	1336
124 - Airbags for driver and front passenger with belt tensioners and side airbags	1337-1346
1. Airbags for driver and front passenger with belt tensioners and side airbags	1337
2. Fuses on fuse holder, battery isolation igniter	1338
3. Terminal 15 voltage supply relay 2	1339
4. Belt switch, airbag control unit	1340
5. Crash sensors	1341
6. Seat belt tensioner, curtain airbag igniter	1342
7. Side airbag igniter on driver side, side airbag igniter on front passenger side	1343
8. Rear side airbag igniter on driver side, rear side airbag igniter on front passenger side	1344
9. Driver side airbag igniter, front passenger side airbag igniter	1345
10. Control unit in dash panel insert, steering column electronics control unit, airbag warning lamp	1346
125 - Radiator fan control 60 W, 220 W (without air conditioning system)	1347-1350
1. Radiator fan control 60 W, 220 W (without air conditioning system)	1347
2. Radiator fan	1348
3. Radiator outlet coolant temperature sender	1349
4. Terminal resistor	1350
126 - Radiator fan control 340 W (with and without air conditioning system)	1351-1353
1. Radiator fan control 340 W (with and without air conditioning system)	1351
2. Radiator fan, radiator fan 2	1352
3. Radiator outlet coolant temperature sender	1353
127 - Radiator fan control 520 W (with and without air conditioning system)	1354-1356
1. Radiator fan control 520 W (with and without air conditioning system)	1354
2. Radiator fan, radiator fan 2	1355
3. Radiator outlet coolant temperature sender	1356
128 - Radiator fan control 520 W (with and without air conditioning system)	1357-1360
1. Radiator fan control 520 W (with and without air conditioning system)	1357
2. Radiator fan, radiator fan 2	1358
3. Radiator outlet coolant temperature sender	1359
4. Continued coolant circulation pump	1360
129 - Direct shift gearbox (02E)	1361-1369
1. Direct shift gearbox (02E)	1361
2. Fuses on fuse holder	1362
3. Selector lever, fuses on fuse holder	1363
4. Selector lever, selector lever locked in position P switch, selector lever lock solenoid	1364
5. Drive train CAN bus, diagnosis, selector lever	1365
6. Drive train CAN bus, diagnosis, selector lever	1366
7. Selector lever, drive train CAN bus	1367
8. Ignition/starter switch	1368
9. Data bus diagnostic interface, control unit in dash panel insert	1369
130 - Trailer operation	1370-1373
1. Trailer operation	1370
2. Fuse. trailer detector control unit	1371



3. Fuses, trailer detector control unit	1372
4. Trailer detector control unit, trailer socket	1373
131 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP), traction control system (TCS) and with no hydraulic brake servo (HBS)	1374-1381
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP), traction control system (TCS) and with no hydraulic brake servo (HBS)	1374
2. ABS control unit	1375
3. TCS and ESP button, ABS control unit, Onboard supply control unit, Terminal 15 voltage supply relay 2	1376
4. ABS control unit	1377
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	1378
6. ESP sensor unit, ABS control unit, ABS hydraulic unit	1379
7. Brake pressure sender 1, ABS control unit, Headlight range control unit, Steering column electronics control unit, Data bus diagnostic interface	1380
8. Steering angle sender, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, ABS warning lamp, ESP and TCS warning lamp	1381
132 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP), traction control system (TCS) and hydraulic brake servo (HBS)	1382-1389
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP), traction control system (TCS) and hydraulic brake servo (HBS)	1382
2. ABS control unit	1383
3. TCS and ESP button, ABS control unit, Onboard supply control unit, Terminal 15 voltage supply relay 2	1384
4. ABS control unit	1385
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	1386
6. ESP sensor unit, Brake servo vacuum sender, ABS control unit, ABS hydraulic unit	1387
7. Brake pressure sender 1, ABS control unit, Headlight range control unit, Steering column electronics control unit, Data bus diagnostic interface	1388
8. Steering angle sender, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, ABS warning lamp, ESP and TCS warning lamp	1389
133 - Anti-lock brake system (ABS) with traction control system (TCS)	1390-1397
1. Anti-lock brake system (ABS) with traction control system (TCS)	1390
2. ABS control unit	1391
3. TCS and ESP button, ABS control unit, Onboard supply control unit, Terminal 15 voltage supply relay 2	1392
4. Front right speed sensor, Front left speed sensor, ABS control unit	1393
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	1394
6. ABS control unit, ABS hydraulic unit	1395
7. ABS control unit, Headlight range control unit, Steering column electronics control unit, Data bus diagnostic interface	1396
8. Steering angle sender, Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, ABS warning lamp, Traction control system warning lamp	1397
134 - Garage door operation - (Homelink)	1398-1400
1. Garage door operation - (Homelink)	1398
2. Garage door operating unit	1399
3. Garage door operating unit, garage door operation control unit	1400
135 - Automatic gearbox (09G)	1401-1409
1. Automatic gearbox (09G)	1401
2. Fuse on fuse holder, automatic gearbox control unit	1402
3. Fuses on fuse holder, multifunction switch, Tiptronic switch	1403
4. Solenoid valves	1404
5. Gearbox input speed sender, gearbox output speed sender, gearbox oil temperature sender, selector lever lock solenoid	1405
6. Drive train CAN bus, diagnosis	1406
7. Selector lever locked in position P switch, bonnet contact switch 2	1407
8. Ignition/starter switch	1408
9. Data bus diagnostic interface, control unit in dash panel insert	1409
136 - Haldex coupling with four-wheel drive	1410-1412
1. Haldex coupling with four-wheel drive	1410
2. Terminal 15 voltage supply relay 2, fuses on fuse holder	1411
3. Fuses on fuse holder C, four-wheel drive control unit	1412
137 - Diagnostic connector	1413-1415
1. Diagnostic connector	1413

2. Diagnostic connector, terminal 15 voltage supply relay 2, fuses	1414
3. Data bus diagnostic interface, diagnostic connector	1415
138 - Ultrasonic parking aid, rear	1416-1419
1. Ultrasonic parking aid, rear	1416
2. Terminal 15 voltage supply relay 2, parking aid control unit, fuses on fuse holder	1417
3. Parking aid control unit, data bus diagnostic interface	1418
4. Parking aid sender, parking aid warning buzzer, parking aid control unit	1419
139 - Front seat heating with manual seat adjustment	1420-1423
1. Front seat heating with manual seat adjustment	1420
2. Fuses on fuse holder	1421
3. Heated driver seat cushion	1422
4. Heated front passenger seat cushion	1423
140 - Front seat heating, without air conditioning system, with manual seat adjustment	1424-1429
1. Front seat heating, without air conditioning system, with manual seat adjustment	1424
2. Heated driver seat regulator, heated front passenger seat regulator	1425
3. Driver seat heating control unit, terminal 15 voltage supply relay 2	1426
4. Driver seat heating control unit, fuses on fuse holder	1427
5. Driver seat heating control unit, heated seat cushion for front left seat	1428
6. Front passenger seat heating control unit, heated seat cushion for front right seat	1429
141 - Rear heated seat, with and without air conditioning system	1430-1433
1. Rear heated seat, with and without air conditioning system	1430
2. Heated rear left seat control unit, fuse on fuse holder	1431
3. Heated rear left seat control unit, rear left seat temperature sensor	1432
4. Heated rear right seat control unit, rear right seat temperature sensor	1433
142 - Tyre pressure monitor	1434-1437
1. Tyre pressure monitor	1434
2. Terminal 15 voltage supply relay 2	1435
3. Tyre pressure monitor button	1436
4. Control unit in dash panel insert, tyre pressure monitor warning lamp	1437
143 - Air conditioner with automatic regulation	1438-1449
1. Air conditioner with automatic regulation	1438
2. Fresh air blower control unit, fuses on fuse holder	1439
3. X-contact relief relay, fuses on fuse holder	1440
4. Terminal 15 voltage supply relay, fuses on fuse holder	1441
5. High pressure sender, air quality sensor, compressor regulating valve, air conditioning system	1442
6. Ignition/starter switch, convenience CAN bus	1443
7. Auxiliary air heater element, auxiliary air heater control unit, convenience CAN bus	1444
8. Heated rear window relay	1445
9. Central flap control motor, air flow flap control motor, air recirculation flap control motor	1446
10. Control motor potentiometer	1447
11. Fresh air intake duct temperature sensor, vent temperature sender	1448
12. Sunlight penetration photosensor, right vent temperature sender, front seat temperature sender	1449
144 - Convenience system	1450-1476
1. Convenience system	1450
2. Earth points, earth connections	1451
3. Earth points, earth connections	1452
4. Fuses on fuse holder	1453
5. Fuses on fuse holder, terminal 15 voltage supply relay 2	1454
6. Terminal 30 voltage supply relay 2	1455
7. Interior light (front and rear) with reading lights	1456
8. Bonnet contact switch, driver and front passenger vanity mirror contact switch	1457
9. Left and right footwell light, glove compartment light	1458
10. Central locking and anti-theft alarm system aerial	1459
11. Rear lid central locking motor	1460
12. Parking brake contact switch, tank filler flap locking motor, luggage compartment light	1461
13. Alarm horn, vehicle inclination sender, glass breakage sensor for rear window, interior monitoring sensor	1462
14. Window regulator switch, driver side	1463
15. Driver side central locking lock unit, central locking deadlock function warning lamp	1464
16. Front left entry light, interior locking button, driver side, door warning lamp, driver side	1465
17. Mirror adjustment switch, alarm system off switch	1466
18. Alarm system off switch, rear lid remote release button	1467
19. Mirror adjustment motor/fold-in mirror motor, driver side	1468
20. Front passenger side central locking lock unit	1469
21. Mirror adjustment motor/fold-in mirror motor, front passenger side	1470
22. Front right entry light, front passenger side door warning lamp, window regulator switch in	1471

front passenger door	
23. Rear left door control unit	1472
24. Rear left door central locking motor	1473
25. Rear right door control unit	1474
26. Rear right door control unit, rear right central locking lock unit	1475
27. Control unit in dash panel insert, data bus diagnostic interface	1476
145 - Steering wheel with Tiptronic-buttons	1477-1479
1. Steering wheel with Tiptronic-buttons	1477
2. Voltage supply, operating unit in steering wheel	1478
3. Overheating sensor, horn plate, driver side airbag igniter	1479
146 - Steering wheel with Tiptronic-switch rockers	1480-1481
1. Steering wheel with Tiptronic-switch rockers	1480
2. Voltage supply, Tiptronic switch in steering wheel	1481
147 - Multifunction steering wheel	1482-1484
1. Multifunction steering wheel	1482
2. Operating unit in steering wheel	1483
3. Tiptronic switch in steering wheel	1484
148 - Automatic anti-dazzle interior mirror	1485-1487
1. Automatic anti-dazzle interior mirror	1485
2. Fuses on fuse holder, terminal 15 voltage supply relay 2	1486
3. Door control units, automatic anti-dazzle interior mirror	1487
149 - Headlight with Coming-Home	1488-1490
1. Headlight with Coming-Home	1488
2. Light switch, fuse on fuse holder	1489
3. Light switch	1490
150 - Lumbar support adjustment, with manual seat adjustment	1491-1493
1. Lumbar support adjustment, with manual seat adjustment	1491
2. Driver seat lumbar support adjustment	1492
3. Front passenger seat lumbar support adjustment	1493
151 - Electric seat adjustment with lumbar support adjustment and seat heating	1494-1499
1. Electric seat adjustment with lumbar support adjustment and seat heating	1494
2. Seat adjustment driver seat	1495
3. Seat lumbar support adjustment	1496
4. Seat adjustment front passenger seat	1497
5. Seat heating driver seat	1498
6. Seat heating front passenger seat	1499
152 - Headlight for gaseous discharge light and automatic headlight range control	1500-1506
1. Headlight for gaseous discharge light and automatic headlight range control	1500
2. Ignition/starter switch, turn signal switch	1501
3. Control unit in dash panel insert	1502
4. Vehicle inclination sender	1503
5. Left headlight	1504
6. Right headlight	1505
7. Light switch, terminal 15 voltage supply relay	1506
153 - Headlight for gaseous discharge light (Xenon plus) and automatic headlight range control	1507-1516
1. Headlight for gaseous discharge light (Xenon plus) and automatic headlight range control	1507
2. Ignition/starter switch, turn signal switch	1508
3. Control unit in dash panel insert	1509
4. Vehicle inclination sender	1510
5. Terminal 15 voltage supply relay 2	1511
6. Light switch	1512
7. Left gas discharge (xenon) bulb	1513
8. Left side light bulb, front left turn signal bulb, left day driving light bulb	1514
9. Right gas discharge (xenon) bulb	1515
10. Right side light bulb, front right turn signal bulb, right day driving light bulb	1516
154 - Headlight for gaseous discharge light (Xenon, plus), dynamic cornering lights and automatic headlight range control	1517-1526
1. Headlight for gaseous discharge light (Xenon, plus), dynamic cornering lights and automatic headlight range control	1517
2. Ignition/starter switch, turn signal switch	1518
3. Control unit in dash panel insert	1519
4. Vehicle inclination sender	1520
5. Terminal 15 voltage supply relay 2	1521
6. Light switch	1522
7. Left gas discharge (xenon) bulb	1523
8. Left side light bulb, front left turn signal bulb, left day driving light bulb	1524

9. Right gas discharge (xenon) bulb	1525
10. Right side light bulb, front right turn signal bulb, right day driving light bulb	1526
155 - Data bus wires (CAN bus, LIN bus)	1527-1536
1. Data bus wires (CAN bus, LIN bus)	1527
2. Drive train CAN bus	1528
3. Drive train CAN bus	1529
4. Drive train CAN bus	1530
5. Convenience CAN bus	1531
6. Convenience CAN bus, LIN bus	1532
7. Convenience CAN bus	1533
8. Infotainment CAN bus	1534
9. Infotainment CAN bus	1535
10. Infotainment CAN bus	1536
156 - Driving school vehicle	1537-1538
1. Driving school vehicle	1537
2. Footwell light switch, warning buzzer switch	1538
157 - Preparation for mobile telephone with hands-free system	1539-1544
1. Preparation for mobile telephone with hands-free system	1539
2. roof aerial	1540
3. Aerial for Bluetooth, aerial for Bluetooth	1541
4. Muting	1542
5. Telephone microphone	1543
6. Telephone bracket	1544
158 - Preparation for mobile telephone with hands-free system	1545-1548
1. Preparation for mobile telephone with hands-free system	1545
2. Telephone microphone, aerial for Bluetooth	1546
3. Muting, infotainment CAN bus	1547
4. Roof aerial, telephone bracket	1548
159 - Sliding sunroof motor (Open-sky-System)	1549-1550
1. Sliding sunroof motor (Open-sky-System)	1549
2. Sunroof button, sliding sunroof adjustment control unit	1550
160 - Radio without Bose sound system	1551-1561
1. Radio without Bose sound system	1551
2. Voltage supply	1552
3. Front loudspeaker without amplifier	1553
4. Rear loudspeaker without amplifier	1554
5. Front loudspeaker with amplifier	1555
6. 5-door models rear loudspeaker with amplifier	1556
7. 3-door models rear loudspeaker with amplifier, infotainment CAN bus	1557
8. Muting, infotainment CAN bus	1558
9. CD changer, iPod holder, USB connection retainer	1559
10. Left aerial module, rear window aerial 1	1560
11. Left aerial module, heated rear window	1561
161 - Radio with Bose sound system	1562-1570
1. Radio with Bose sound system	1562
2. Fuses on fuse holder	1563
3. Front loudspeaker	1564
4. Rear loudspeaker	1565
5. Bass loudspeaker, internal microphone	1566
6. Muting, infotainment CAN bus	1567
7. CD changer, iPod holder, USB connection retainer	1568
8. Aerial amplifier, heated rear window with window aerial	1569
9. Left aerial module, heated rear window	1570
162 - Radio and navigation system (models for Japan)	1571-1584
1. Radio and navigation system (models for Japan)	1571
2. Voltage supply, onboard supply control unit	1572
3. Voltage supply, onboard supply control unit	1573
4. CD changer	1574
5. Front loudspeaker with Bose sound system	1575
6. Rear loudspeaker with Bose sound system	1576
7. Internal microphone, bass loudspeaker with Bose sound system	1577
8. Front loudspeaker without Bose sound system	1578
9. Rear loudspeaker without Bose sound system	1579
10. Amplifier with bass loudspeaker, on left in luggage compartment	1580
11. Left aerial module	1581
12. Left aerial module. telephone. navigation system and auxiliary heater aerial	1582

13. Left aerial module, window aerial suppression filter	1583
14. Left aerial module, rear window aerial 1, rear window aerial 2	1584
163 - Radio	1585-1600
1. Radio	1585
2. Radio, voltage supply	1586
3. Front loudspeaker with Bose sound system	1587
4. Rear loudspeaker with Bose sound system	1588
5. Internal microphone, bass loudspeaker with Bose sound system	1589
6. Front loudspeaker without amplifier	1590
7. Rear loudspeaker without amplifier	1591
8. Front loudspeaker with amplifier	1592
9. Amplifier with rear loudspeaker	1593
10. Amplifier with bass loudspeaker, on left in luggage compartment	1594
11. Data bus diagnostic interface, telephone transmitter and receiver unit	1595
12. roof aerial	1596
13. CD changer, iPod holder, USB connection retainer with satellite radio only	1597
14. CD changer, iPod holder, USB connection retainer without satellite radio only	1598
15. Left aerial module, rear window aerial 1	1599
16. Left aerial module, window aerial suppression filter	1600
164 - Radio and navigation system RNS-E	1601-1614
1. Radio and navigation system RNS-E	1601
2. Fuses on fuse holder	1602
3. Front loudspeaker with Bose sound system	1603
4. Rear loudspeaker with Bose sound system	1604
5. Internal microphone, bass loudspeaker with Bose sound system	1605
6. Front loudspeaker	1606
7. Amplifier with bass loudspeaker, on left in luggage compartment, rear loudspeaker	1607
8. Amplifier with bass loudspeaker, on left in luggage compartment	1608
9. Data bus diagnostic interface, telephone transmitter and receiver unit	1609
10. roof aerial	1610
11. CD changer, iPod holder, USB connection retainer with satellite radio only	1611
12. CD changer, iPod holder, USB connection retainer without satellite radio only	1612
13. Left aerial module, rear window aerial 1	1613
14. Left aerial module, window aerial suppression filter	1614
165 - Radio and navigation system RNS-low	1615-1626
1. Radio and navigation system RNS-low	1615
2. Fuses on fuse holder	1616
3. Front loudspeaker with Bose sound system	1617
4. Rear loudspeaker with Bose sound system	1618
5. Internal microphone, bass loudspeaker with Bose sound system	1619
6. Front loudspeaker with amplifier	1620
7. Amplifier with bass loudspeaker, on left in luggage compartment, rear loudspeaker	1621
8. Amplifier with bass loudspeaker, on left in luggage compartment	1622
9. Data bus diagnostic interface, telephone transmitter and receiver unit	1623
10. CD changer, iPod holder, USB connection retainer	1624
11. roof aerial	1625
12. Left aerial module, rear window aerial 1	1626
166 - 2.0 I - Diesel engine (120 kW - unit injectors - 4 cylinder), engine code BUY	1627-1645
1. 2.0 I - Diesel engine (120 kW - unit injectors - 4 cylinder), engine code BUY	1627
2. Cruise control system switch, ignition/starter switch	1628
3. Terminal 50 voltage supply relay	1629
4. Clutch position sender	1630
5. Brake light switch, brake pedal switch	1631
6. Terminal 15 voltage supply relay 2	1632
7. Alternator	1633
8. Terminal 30 voltage supply relay	1634
9. Glow plugs, automatic glow period control unit	1635
10. Fuel pump, lambda probe	1636
11. Heater element for crankcase breather, intake manifold flap motor, air mass meter	1637
12. Exhaust gas pressure sensor 1, temperature sensor	1638
13. Unit injector valves	1639
14. Solenoid valves	1640
15. Exhaust gas recirculation potentiometer, position sender for charge pressure positioner	1641
16. Engine speed sender, charge air pressure sender, hall sender	1642
17. Drive train CAN bus, diagnosis	1643
18. Data bus diagnostic interface	1644



19. Oil pressure switch, oil level and oil temperature sender	1645
801 - - Fitting locations: Earth points - 3	1646-1656
1. Earth points	1646-1656
1.1 Overview of earth points in front part of vehicle	1646-1647
1.2 Overview of earth points in interior of vehicle	1648
1.3 Overview of earth points in rear part of vehicle (3-door models)	1649
1.4 Overview of earth points in rear part of vehicle (5-door models)	1650
1.5 Earth point, in engine compartment	1651-1653
1.6 Earth points, in interior	1654
1.7 Earth point, in luggage compartment	1655-1656
802 - - Fitting locations: Fuses - 3	1657-1705
1. Fuses	1657-1705
1.1 Overview of fuses	1657-1658
1.2 Main fuse holder: Positionfuse holder A -SA- on electronics box low, from model year 2006	1659
1.2.1 Main supply connection:	1659
1.3 Position of fuses electronics box low, from model year 2006	1660
1.4 Position of fuses electronics box low, from model year 2007	1660-1661
1.5 Main fuse holder: Positionfuse holder A -SA- on electronics box low, from November 2008	1662
1.5.1 Main supply connection:	1662
1.6 Position of fuses in electronics box low, from November 2008	1663
1.7 Main fuse holder: Positionfuse holder A -SA- on electronics box high	1664
1.7.1 Main supply connection:	1664
1.8 Position of fuses electronics box high, from model year 2004	1665
1.9 Position of fuses electronics box high, from model year 2005	1665
1.10 Position of fuses electronics box high, engine codes AXX, BWA, BPY, BHZ, BZC, CDLA, CDLC, from model year 2006	1666
1.11 Position of fuses electronics box high, engine codes BMJ, BUB, CBRA, from model year 2006	1667
1.12 LocationFuse holder B -SB- on electronics box low, in left engine compartment	1668
1.12.1 Fuse colours	1668
1.13 Position of fuses electronics box low, from model year 2006	1669-1670
1.14 Position of fuses electronics box low, from model year 2007	1671-1676
1.15 LocationFuse holder B -SB- on electronics box high, in left engine compartment	1677
1.15.1 Fuse colours	1677
1.16 Position of fuses electronics box high, from model year 2004	1678-1681
1.17 Position of fuses electronics box high, from model year 2006	1682-1683
1.18 Position of fuses electronics box high, from model year 2007	1684-1689
1.19 LocationFuse holder C -SC-, under left dash panel	1690
1.19.1 Fuse colours	1690
1.20 Position of fuses, fuse holder, from model year 2004	1691-1692
1.21 Position of fuses, fuse holder, from model year 2006	1693-1696
1.22 Position of fuses, fuse holder, from model year 2007	1697-1702
1.23 Main fuse box: LocationFuse holder D -SD- in luggage compartment, rear right	1703
1.23.1 Fuse locations:	1703
1.24 Position of fuses, main fuse box, from model year 2004	1704
1.25 Position of fuses, main fuse box, from model year 2006	1704
1.26 Fuses on left under dash panel	1705
803 - - Fitting locations: Relays - 3	1706-1719
1. Relay	1706-1719
1.1 Overview of relay	1706
1.2 Position of relays on electronics box low, from model year 2006	1707
1.3 Position of relays on electronics box high, from model year 2004	1708
1.4 Position of relays on electronics box high, from model year 2006	1709
1.5 Relay positions relay carrier on onboard supply control unit, under left dash panel, from model year 2004	1710
1.6 Relay positions relay carrier on onboard supply control unit, under left dash panel, from model year 2010	1711
1.7 Relay positions under left dash panel, from model year 2004	1712-1714
1.8 Relay positions under left dash panel, from model year 2009	1715-1716
1.9 Position of relays under electronics box	1717
1.10 Position of relays under electronics box	1718
1.11 Position of relays on main fuse box, in luggage compartment, rear right	1719
804 - - Fitting locations: Control units in front part of vehicle - 3	1720-1737
1. Control units in front part of vehicle	1720-1737
1.1 Overview of control units	1720
1.2 Automatic gearbox control unit -J217-	1721-1722
1.2.2 Connector assignment.	1722

1.3 Wiper motor control unit -J400-	1723
1.4 Mechatronic unit for dual clutch gearbox -J743-	1723-1724
1.4.1 Location:	1723
1.4.2 Connector assignment.	1724
1.5 Mechatronic unit for dual clutch gearbox -J743-	1725-1726
1.5.2 Connector assignment.	1726
1.6 Power steering control unit -J500-	1727-1728
1.6.2 Connector assignment.	1728
1.7 Left gas discharge light control unit -J343-/Right gas discharge light control unit -J344-	1729
1.8 Garage door operation control unit -J530-	1729-1730
1.8.1 Location:	1729
1.8.2 Connector assignment.	1730
1.9 Radiator fan control unit -J293-	1731
1.10 Simos control unit -J361-/Motronic control unit -J220-/Diesel direct injection system control unit -J248-/Engine control unit -J623-	1731-1733
1.10.1 Location:	1731
1.10.2 Connector assignment, 121 pin:	1732
1.10.3 Connector assignment, 154 pin:	1733
1.11 ABS control unit -J104-	1734-1736
1.11.2 Connector assignment:	1735
1.11.3 Connector assignment:	1736
1.12 Auxiliary heater control unit -J364-	1737
1.12.1 Connector assignment.	1737
805 - -Fitting location: Control units in interior of vehicle - 3	1738-1781
1. Control units in interior of vehicle	1738-1781
1.1 Overview of control units	1738-1740
1.2 Headlight range control, control unit -J431-	1741-1742
1.2.2 Connector assignment.	1742
1.3 Front passenger seat heating control unit -J727-	1743-1744
1.3.2 Connector assignment.	1744
1.4 Sliding sunroof adjustment control unit -J245-	1745-1746
1.4.2 Connector assignment.	1746
1.5 NOx sensor control unit -J583-	1747
1.5.1 Location:	1747
1.6 Rear left door control unit -J388-/Rear right door control unit -J389-	1747-1749
1.6.1 Location:	1747
1.6.2 Connector assignment.	1748
1.6.3 Connector assignment.	1749
1.7 Control unit in dash panel insert -J285-	1750-1751
1.7.2 Connector assignment.	1751
1.8 Fuel pump control unit -J538-	1752-1753
1.8.2 Connector assignment.	1753
1.9 Driver seat heating control unit -J726-	1754-1755
1.9.2 Connector assignment.	1755
1.10 Steering column electronics control unit -J527-	1756-1757
1.10.2 Connector assignment.	1757
1.11 Driver door control unit -J386-	1758-1759
1.11.2 Connector assignment.	1759
1.12 Onboard supply control unit -J519-	1760-1761
1.12.2 Connector assignment.	1761
1.13 Onboard supply control unit -J519-	1762-1763
1.13.2 Connector assignment.	1763
1.14 Heater control unit -J65-/Heater control unit -J162-	1764
1.14.1 Location:	1764
1.15 Climatronic control unit -J255-	1764-1765
1.15.1 Location:	1764
1.15.2 Connector assignment.	1765
1.16 Data bus diagnostic interface -J533-	1766-1767
1.16.2 Connector assignment.	1767
1.17 Fresh air blower control unit -J126-	1768
1.17.1 Location:	1768
1.18 Front passenger door control unit -J387-	1768-1769
1.18.1 Location:	1768
1.18.2 Connector assignment.	1769
1.19 Airbag control unit -J234-	1770-1773
1.19.2 Connector assignment.	1771

1.19.3 Connector assignment.	1772
1.19.4 Connector assignment.	1773
1.20 Auxiliary air heater control unit -J604-	1774-1775
1.20.2 Connector assignment.	1775
1.21 Radio -R-/Control unit with display for radio and navigation system -J503- (RNS-low)	1776
1.21.1 Location:	1776
1.22 Navigation operating electronics control unit -J402- (RNS-E)	1776
1.22.1 Location:	1776
1.23 CD changer -R41-	1777
1.23.1 Location:	1777
1.24 Electronically controlled damping control unit -J250-	1777-1778
1.24.1 Location:	1777
1.24.2 Connector assignment.	1778
1.25 Tyre pressure monitor control unit -J502-	1779-1780
1.25.2 Connector assignment.	1780
1.26 Voltage stabiliser -J532-	1781
806 - Fitting location: Control units in rear part of vehicle - 3	1782-1790
1. Control units in rear part of vehicle	1782-1790
1.1 Overview of control units	1782
1.2 Control units on right in luggage compartment	1783-1786
1.2.2 Connector assignment.	1784
1.2.3 Connector assignment.	1785
1.2.4 Connector assignment.	1786
1.3 Control units on left in luggage compartment	1787-1788
1.4 All-wheel drive control unit -J492-	1789-1790
1.4.2 Connector assignment.	1790