

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety information for handling gas discharge bulbs	1
1.4 Notes on use and safety for LED headlights and Audi laser lights	2
2 Repair instructions	3
2.1 Identification plates	3
2.2 Use of impact wrenches	3
2.3 Rules for cleanliness	4
2.4 General notes	4
2.5 Contact corrosion	4
2.6 ESD (electrostatic discharge) workplace	5
2.7 Routing and attachment of pipes, hoses and wiring	5
3 Battery	6
3.1 Battery - general notes	6
3.2 Battery types	6
27 - Starter, current supply, CCS	7
1 Battery	7
1.1 Assembly overview - battery	7
1.2 Disconnecting and connecting battery	18
1.3 Removing and installing earth cable with battery monitor control unit J367	24
1.4 Removing and installing battery	26
1.5 Removing and installing protective housing	42
1.6 Removing and installing battery tray	45
1.7 Inspecting and classifying second battery A1	46
1.8 Inspecting and classifying battery, 48 V A6	48
1.9 Charging battery	49
1.10 Removing and installing battery cut-off relay/battery isolation igniter	50
2 Voltage converter	51
2.1 Assembly overview - voltage converter	51
2.2 Removing and installing voltage converter (48 V/12 V) A7	52
3 Jump-start connection point	54
3.1 Assembly overview - jump-start connection point	54
4 Alternator	55
4.1 Assembly overview - alternator	55
4.2 Removing and installing alternator	63
4.3 Checking alternator	79
5 Starter	81
5.1 Assembly overview - starter	81
5.2 Removing and installing starter	82
6 Adaptive cruise control	90
6.1 Overview of fitting locations - adaptive cruise control	90
6.2 Removing and installing adaptive cruise control unit	92
90 - Gauges, instruments	96
1 Dash panel insert	96
1.1 Assembly overview - dash panel insert	96
1.2 Assembly overview - head-up display	98
1.3 Removing and installing dash panel insert with control unit in dash panel insert J285	100
1.4 Removing and installing control unit for head-up display	104

1.5	Calibrating control unit for head-up display	107
2	Horn	109
2.1	Assembly overview - horn	109
2.2	Removing and installing treble horn H2 / bass horn H7	109
92	Windscreen wash/wipe system	111
1	Windscreen wiper system	111
1.1	Overview of fitting locations - windscreen wiper system	111
1.2	Assembly overview - windscreen wiper system	112
1.3	Moving wipers to service position	114
1.4	Removing and installing wiper blade	115
1.5	Removing and installing wiper arms	115
1.6	Adjusting wiper arms	117
1.7	Removing and installing wiper motor V	118
1.8	Removing and installing rain and light sensor	118
2	Windscreen washer system	123
2.1	Assembly overview - windscreen washer system	123
2.2	Removing and installing washer fluid reservoir	124
2.3	Removing and installing windscreen washer fluid level sender	126
2.4	Removing and installing washer pump	126
2.5	Removing and installing washer jets	126
2.6	Adjusting washer jets	127
3	Rear window wiper system	128
3.1	Overview of fitting locations - rear window wiper system	128
3.2	Assembly overview - rear window wiper system	128
3.3	Removing and installing wiper blade	129
3.4	Removing and installing wiper arm	129
3.5	Adjusting wiper arm	131
3.6	Removing and installing rear window wiper motor V12	132
4	Rear window washer system	133
4.1	Assembly overview - rear window washer system	133
4.2	Removing and installing washer jet	134
4.3	Adjusting washer jet	135
5	Headlight washer system	136
5.1	Assembly overview - headlight washer system	136
5.2	Removing and installing headlight washer system pump V11	137
5.3	Removing and installing washer jets	137
5.4	Adjusting washer jets	139
94	Lights, bulbs, switches - exterior	140
1	Headlights	140
1.1	Assembly overview - headlight	140
1.2	Removing and installing headlights	149
1.3	Adjusting headlights	153
1.4	Removing and installing front turn signal bulb M5 / M7	178
1.5	Removing and installing fog light bulb L22 / L23	179
1.6	Removing and installing gas discharge bulb L13 / L14	180
1.7	Removing and installing output module for headlight	181
1.8	Adapting headlights for driving on the left side of the road	186
1.9	Adapting headlights for driving on the right side of the road	186
2	Side marker lights	187
2.1	Assembly overview - side marker lights	187
3	Lights in exterior mirror	188
3.1	Assembly overview - lights in exterior mirror	188
3.2	Removing and installing turn signal	189

4	Lights in exterior door handle	190
4.1	Assembly overview - lights in exterior door handle	190
4.2	Removing and installing exterior door handle illumination bulb	190
5	Lights in sill panel moulding	192
5.1	Assembly overview - entry light	192
6	Tail light clusters	193
6.1	Assembly overview - tail light cluster on body	193
6.2	Assembly overview - tail light cluster on rear lid	197
6.3	Removing and installing tail light cluster	201
6.4	Removing and installing tail light cluster on rear lid	204
6.5	Removing and installing bulb carrier	209
6.6	Correcting installation position of tail light cluster	211
7	High-level brake light	214
7.1	Assembly overview - high-level brake light	214
7.2	Removing and installing high-level brake light bulb	214
8	Number plate light	217
8.1	Removing and installing number plate light X4 / X5	217
9	Entry and start authorisation	218
9.1	Overview of fitting locations - entry and start authorisation system	218
9.2	Overview of fitting locations - keyless entry system	219
9.3	Assembly overview - exterior door handle for keyless entry system	220
9.4	Removing and installing front exterior door handle switches	221
9.5	Removing and installing rear exterior door handle switches	222
9.6	Removing and installing aerial for entry and start system	223
9.7	Alcohol interlock	224
10	Steering column switch module	235
10.1	Assembly overview - steering column switch module	235
10.2	Removing and installing steering column switch module	235
11	Parking aid	237
11.1	Assembly overview - parking aid	237
11.2	Removing and installing front parking aid warning buzzer H22	239
11.3	Removing and installing rear parking aid warning buzzer H15	239
11.4	Removing and installing front parking aid sender	240
11.5	Removing and installing rear parking aid sender	241
12	Park assist steering	243
12.1	Assembly overview - park assist steering	243
12.2	Removing and installing front sender	244
12.3	Removing and installing rear sender	244
96	Lights, bulbs, switches - interior	245
1	Lights	246
1.1	Overview of fitting locations - lights in dash panel	247
1.2	Overview of fitting locations - lights in front doors	247
1.3	Overview of fitting locations - lights in rear doors	248
1.4	Overview of fitting locations - background lighting in doors	249
1.5	Overview of fitting locations - lights in centre console	253
1.6	Overview of fitting locations - lights in luggage compartment	254
1.7	Overview of fitting locations - lights in roof trim	255
1.8	Removing and installing glove compartment light W6	256
1.9	Renewing bulb for glove compartment light W6	256
1.10	Removing and installing front footwell light K268 / K269	257
1.11	Removing and installing central locking SAFELOCK function warning lamp K133	257
1.12	Removing and installing light for interior door handle illumination L219 / L220	257
1.13	Removing and installing entry light W92 / W93	258



1.14	Removing and installing light for rear interior door handle illumination	258
1.15	Removing and installing rear entry light	259
1.16	Removing and installing front door background lighting bulb L164 / L165	259
1.17	Removing and installing door storage compartment illumination bulb L160 / L161	261
1.18	Removing and installing rear door background lighting bulb	262
1.19	Removing and installing light for cup holder background lighting	264
1.20	Removing and installing light for centre console background lighting L193 / L194	265
1.21	Removing and installing light for rear door storage compartment illumination L257 / L258	266
1.22	Removing and installing selector lever position display Y5	266
1.23	Removing and installing rear footwell light W45 / W46	267
1.24	Removing and installing luggage compartment light	267
1.25	Removing and installing illuminated vanity mirror W20 / W14	268
2	Controls	270
2.1	Overview of fitting locations - controls in dash panel	271
2.2	Overview of fitting locations - controls in front doors	273
2.3	Overview of fitting locations - controls in rear doors	275
2.4	Overview of fitting locations - controls in centre console	275
2.5	Overview of fitting locations - controls in luggage compartment	276
2.6	Overview of fitting locations - controls in roof trim	277
2.7	Assembly overview - front roof module WX3	278
2.8	Removing and installing light switch E1	279
2.9	Removing and installing buttons/switches in dash panel	280
2.10	Removing and installing hazard warning lights button E229	281
2.11	Removing and installing valet parking button E536	281
2.12	Removing and installing glove compartment light switch E26	282
2.13	Removing and installing mirror adjustment switch E43 / E168	282
2.14	Removing and installing operating unit for window regulator in driver door E512	282
2.15	Removing and installing window regulator switch in front passenger door E107	283
2.16	Removing and installing driver side interior locking button for central locking system E308	283
2.17	Removing and installing operating unit for memory settings E464 / E465	283
2.18	Removing and installing rear lid remote release button E233	284
2.19	Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616	285
2.20	Removing and installing rear window regulator button in rear door	285
2.21	Removing and installing rear interior locking switch E273 / E274	285
2.22	Removing and installing entry and start authorisation button E408	286
2.23	Removing and installing electromechanical parking brake button E540 / auto hold button E538	286
2.24	Removing and installing button for electric swivelling towing bracket E474	287
2.25	Removing and installing rear lid handle release button E234	288
2.26	Removing and installing button to close rear lid in luggage compartment E406	289
2.27	Removing and installing rear lid warning buzzer H32	290
2.28	Removing and installing sunroof button E325	290
2.29	Removing and installing front interior light/reading light	290
2.30	Removing and installing rear interior light/reading light	294
2.31	Removing and installing garage door operating unit E284	294
3	Anti-theft alarm system	295
3.1	Assembly overview - interior monitoring	295
3.2	Removing and installing alarm horn H12	296
3.3	Removing and installing anti-theft alarm sensor G578	296
4	Lane change assist	297
4.1	Assembly overview - lane change assist	297
4.2	Removing and installing lane change assist warning lamp in exterior mirror K233 / K234	298
4.3	Removing and installing lane change assist control unit J769 / J770	298
4.4	Calibrating lane change assist	298

5	Front camera for driver assist systems	306
5.1	Overview of fitting locations - front camera for driver assist systems	306
5.2	Removing and installing front camera for driver assist systems	307
6	Towing bracket	312
6.1	Trailer socket	312
7	Cigarette lighter, socket	313
7.1	Assembly overview - cigarette lighter, 12 V socket	313
7.2	Removing and installing cigarette lighter U1	315
7.3	Removing and installing cigarette lighter illumination bulb L28	316
7.4	Removing and installing socket illumination bulb L42	317
7.5	Removing and installing 12 V socket U5	317
7.6	Removing and installing 12 V socket 2 U18 / 12 V socket 3 U19	319
7.7	Removing and installing 12 V socket 4 U20 / 12 V socket 5 U26	320
7.8	Renewing 12 V socket 4 U20 / 12 V socket 5 U26	320
97 - Wiring		323
1	Relay carriers, fuse carriers, electronics boxes	323
1.1	Overview of fitting locations - relay carriers, fuse carriers, electronics boxes	323
1.2	Assembly overview - main fuse carrier	333
1.3	Removing and installing relay and fuse carrier (front left)	334
1.4	Removing and installing suppression capacitor C24	338
1.5	Removing and installing wiring junction	338
1.6	Removing and installing fuse holder C SC	345
1.7	Removing and installing relay and fuse holders in luggage compartment (left-side)	346
1.8	Removing and installing main fuse carrier on battery	348
2	Control units	352
2.1	Overview of fitting locations - control units	352
2.2	Assembly overview - data bus diagnostic interface	352
2.3	Removing and installing onboard supply control unit J519	353
2.4	Removing and installing garage door operation control unit	355
2.5	Removing and installing data bus diagnostic interface J533	355
3	Connectors	357
3.1	Overview of fitting locations - connectors	357
3.2	Unplugging door coupling point	358
3.3	Removing and installing coupling station at right A-pillar	358
3.4	Repairing electrical wiring harnesses and electrical connectors	358
4	Releasing and dismantling connector housings	359
5	Cleaning contact surfaces	360
6	Repairing aerial wires	361
7	Fibre optic cables	362
8	Vehicle diagnostic, testing and information systems	363