

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
2.1 Safety precautions when working on vehicles with natural gas systems	2
2.2 Safety precautions for all vehicles	3
3 Repair instructions	4
10 - Removing and installing engine	5
1 Removing and installing engine	5
1.1 Removing engine	5
1.2 Securing engine to engine and gearbox support	68
1.3 Installing engine	68
2 Assembly mountings	73
2.1 Assembly overview - assembly mountings	73
2.2 Supporting engine in installation position	77
2.3 Removing and installing engine mountings	79
2.4 Removing and installing gearbox mounting	84
3 Engine cover panel	86
13 - Crankshaft group	87
1 Cylinder block (pulley end)	87
1.1 Assembly overview - cylinder block (pulley end)	87
1.2 Removing and installing poly V-belt	87
1.3 Removing and installing poly V-belt tensioner	87
1.4 Removing and installing vibration damper	87
1.5 Removing and installing bracket for ancillaries	88
1.6 Removing and installing engine support	88
2 Cylinder block (gearbox end)	92
3 Crankshaft	93
4 Balance shaft	94
5 Pistons and conrods	95
15 - Cylinder head, valve gear	96
1 Timing chain cover	96
1.1 Assembly overview - timing chain cover	96
1.2 Removing and installing timing chain cover	96
2 Chain drive	97
3 Cylinder head	98
3.1 Assembly overview - cylinder head	98
3.2 Removing and installing cylinder head	98
3.3 Checking compression	104
4 Valve gear	105
4.1 Assembly overview - valve gear	105
4.2 Removing and installing camshaft	105
4.3 Installing ball for slider	107
4.4 Removing and installing cam adjustment actuators	107
4.5 Removing and installing camshaft control valve 1 N205	107
4.6 Removing and installing valve stem oil seals	108
5 Inlet and exhaust valves	109
17 - Lubrication	110



1	Sump/oil pump	110
1.1	Assembly overview - sump/oil pump	110
1.2	Engine oil	110
1.3	Removing and installing lower part of sump	110
1.4	Removing and installing oil pump	112
1.5	Removing and installing upper part of sump	113
1.6	Removing and installing oil level and oil temperature sender G266	113
2	Engine oil cooler	114
3	Crankcase breather	115
4	Oil filter/oil pressure switches	116
4.1	Assembly overview - oil filter	116
4.2	Assembly overview - oil pressure switches/oil pressure control	116
4.3	Removing and installing oil pressure switch F22	116
4.4	Removing and installing oil pressure switch for reduced oil pressure F378	116
4.5	Removing and installing stage 3 oil pressure switch F447	116
4.6	Removing and installing valve for oil pressure control N428	118
4.7	Removing and installing piston cooling jet control valve N522	118
4.8	Checking oil pressure	118
19 - Cooling		119
1	Cooling system/coolant	119
1.1	Connection diagram - coolant hoses	119
1.2	Checking cooling system for leaks	124
1.3	Draining and filling cooling system	124
2	Coolant pump/thermostat assembly	132
2.1	Assembly overview - coolant pump/thermostat	132
2.2	Assembly overview - electric coolant pump	132
2.3	Assembly overview - coolant temperature senders	134
2.4	Removing and installing electric coolant pump	134
2.5	Removing and installing coolant pump	142
2.6	Removing and installing toothed belt for coolant pump	144
2.7	Removing and installing actuator for engine temperature regulation N493	146
2.8	Removing and installing coolant temperature sender G62	147
2.9	Removing and installing radiator outlet coolant temperature sender G83	149
3	Coolant pipes	151
3.1	Assembly overview - coolant pipes	151
3.2	Removing and installing coolant pipes	154
3.3	Removing and installing coolant pipes for gearbox	162
4	Radiator/radiator fan	165
4.1	Assembly overview - radiator/radiator fan	165
4.2	Removing and installing radiator	170
4.3	Removing and installing radiator blind	176
4.4	Removing and installing radiator blind control motor	177
4.5	Removing and installing radiator cowl	179
4.6	Removing and installing radiator fan V7	181
21 - Turbocharging/supercharging		182
1	Turbocharger	182
1.1	Assembly overview - turbocharger	182
1.2	Removing and installing turbocharger	182
2	Charge air system	185
2.1	Assembly overview - charge air system	185
2.2	Assembly overview - hose connections for charge air system	186
2.3	Removing and installing charge air cooler	186

2.4	Removing and installing charge pressure sender G31	187
2.5	Checking charge air system for leaks	187
24	Mixture preparation - injection	192
1	Injection system	192
1.1	Overview of fitting locations - injection system	192
2	Air filter	209
2.1	Assembly overview - air filter housing	209
2.2	Removing and installing air filter housing	211
3	Intake manifold	214
3.1	Assembly overview - intake manifold	214
3.2	Removing and installing intake manifold	214
3.3	Removing and installing throttle valve module GX3	221
4	Injectors	222
4.1	Assembly overview - fuel rail with injectors	222
4.2	Removing and installing fuel rail	222
4.3	Removing and installing injectors	223
4.4	Cleaning injectors	225
5	Gas injection valves	226
5.1	Assembly overview - gas rail	226
5.2	Removing and installing gas rail with gas injection valve N366/N367/N368/N369	228
5.3	Removing and installing gas injection valve	231
6	Gas pressure regulator	233
6.1	Assembly overview - gas pressure regulator	233
6.2	Removing and installing gas pressure regulator	235
7	Senders and sensors	239
7.1	Removing and installing intake air temperature sender G42/intake manifold pressure sender G71	239
7.2	Removing and installing air mass meter G70	239
7.3	Removing and installing fuel pressure sender G247	240
7.4	Checking fuel pressure sender G247	241
7.5	Removing and installing fuel pressure sender for low pressure G410	241
7.6	Removing and installing gas rail temperature and pressure sensor GX21	242
7.7	Removing and installing sensor module GX23	243
8	High-pressure pump	246
8.1	Assembly overview - high-pressure pump	246
8.2	Removing and installing high-pressure pump	248
9	Lambda probe	250
10	Engine control unit	251
10.1	Assembly overview - engine control unit	251
10.2	Removing and installing engine control unit J623	252
26	Exhaust system	254
1	Exhaust pipes/silencers	254
1.1	Assembly overview - silencers	254
1.2	Removing and installing front exhaust pipe	262
1.3	Separating exhaust pipes/silencers	263
1.4	Removing and installing front silencers	264
1.5	Removing and installing silencers	268
1.6	Stress-free alignment of exhaust system	271
1.7	Checking exhaust system for leaks	272
2	Emission control system	273
28	Ignition system	274



1	Ignition system	274
----------	------------------------------	------------