

## Contents

<b>27</b>	<b>- Starter, current supply, CCS</b>	<b>1</b>
1	<b>Contact corrosion</b>	1
2	<b>Battery</b>	2
2.1	Battery - general notes	2
2.2	Maintenance-free batteries	2
2.3	Disconnecting and connecting battery	2
2.4	Removing and installing battery	4
2.5	Checking battery	9
2.6	Charging battery	9
2.7	Preparations before charging battery	9
2.8	Preparations for back-up power supply of battery	11
3	<b>Removing and installing alternator</b>	12
3.1	Vehicles with 1.8 ltr. turbo and 2.0 ltr. MPI engine	12
3.2	Vehicles with 2.4 ltr. MPI engine	15
3.3	Vehicles with 3.0 ltr. MPI engine	16
3.4	Vehicles with 3.2 ltr. FSI engine	18
3.5	Vehicles with 4.2 ltr. MPI engine	18
3.6	Vehicles with 2.0 ltr. TDI engine	26
3.7	Vehicles with 2.5 ltr. TDI engine	26
3.8	Vehicles with 2.7 ltr. or 3.0 ltr. TDI engine	27
4	<b>Checking alternator</b>	30
4.1	Checking alternator	30
5	<b>Removing and installing starter</b>	31
5.1	Vehicles with 1.8 ltr. turbo and 2.0 ltr. MPI engine	31
5.2	Vehicles with 2.4 ltr. and 3.0 ltr. MPI engine	32
5.3	Vehicles with 3.2 ltr. FSI engine	33
5.4	Vehicles with 4.2 ltr. MPI engine	34
5.5	Vehicles with 2.0 ltr. TDI engine	38
5.6	Vehicles with 2.5 ltr. TDI engine	40
5.7	Vehicles with 2.7 ltr. or 3.0 ltr. 6-cyl. TDI engine	41
<b>90</b>	<b>- Gauges, instruments</b>	<b>43</b>
1	<b>Contact corrosion</b>	43
2	<b>Instrument cluster</b>	44
2.1	Fault message "dEF" in trip recorder display	44
2.2	Removing and installing instrument cluster	44
2.3	Multi-pin connectors on instrument cluster	46
2.4	Pin assignment at multi-pin connectors on instrument cluster	47
2.5	Pin assignment on fuel gauge sender G - vehicles with front-wheel drive	49
2.6	Pin assignment at fuel gauge senders - vehicles with all-wheel drive	49
2.7	Pin assignment at coolant temperature display sender G2	50
2.8	Pin assignment at coolant temperature sender G62	55
2.9	Removing and installing radio-controlled clock receiver J489	58
3	<b>Cigarette lighter, 12 V electric socket</b>	59
3.1	Removing and installing cigarette lighter U1	59
3.2	Removing and installing cigarette lighter illumination bulb L28	62
3.3	Removing and installing electric socket U	62
4	<b>Horns</b>	63
4.1	Removing and installing horn - vehicles up to model year 2006	63
4.2	Removing and installing horn - vehicles from model year 2007 onwards	63
<b>92</b>	<b>- Windscreen wash/wipe system</b>	<b>65</b>



<b>1</b>	<b>Contact corrosion</b>	<b>65</b>
<b>2</b>	<b>Windscreen wiper system</b>	<b>66</b>
2.1	Renewing wiper blade	66
2.2	Removing and installing wiper arms	66
2.3	Adjusting wiper arms	67
2.4	Removing and installing wiper motor	68
<b>3</b>	<b>Removing and installing rain and light sensor</b>	<b>71</b>
3.1	Removing and installing rain and light sensor G397	71
3.2	Renewing rain and light sensor G397	73
<b>4</b>	<b>Windscreen washer system</b>	<b>75</b>
4.1	Removing and installing washer fluid reservoir	75
4.2	Removing and installing washer jets	76
4.3	Adjusting washer jets	77
<b>5</b>	<b>Headlight washer system</b>	<b>78</b>
5.1	Removing and installing headlight washer jets - vehicles up to model year 2006	78
5.2	Removing and installing headlight washer jets - vehicles from model year 2007 onwards	78
5.3	Adjusting washer jets	79
5.4	Removing and installing washer fluid reservoir	79
<b>6</b>	<b>Washer fluid hoses</b>	<b>80</b>
<b>94</b>	<b>Lights, bulbs, switches - exterior</b>	<b>81</b>
<b>1</b>	<b>Contact corrosion</b>	<b>81</b>
<b>2</b>	<b>Halogen headlights - vehicles up to model year 2006</b>	<b>82</b>
2.1	Assembly overview - halogen headlight	82
2.2	Removing and installing headlights	83
2.3	Adjusting headlights	84
2.4	Renewing bulb for dipped beam headlights	86
2.5	Renewing bulb for main beam headlights	87
2.6	Renewing bulb for side lights	87
2.7	Renewing bulb for turn signal	88
2.8	Removing and installing headlight range control motor	88
2.9	Installing repair kit for headlight housing	89
2.10	Adapting headlights for driving on the left or right side of the road	89
<b>3</b>	<b>Halogen headlights - vehicles from model year 2007 onwards</b>	<b>91</b>
3.1	Assembly overview - halogen headlight	91
3.2	Removing and installing headlights	92
3.3	Adjusting headlights	93
3.4	Renewing bulb for dipped beam headlights	95
3.5	Renewing bulb for main beam headlights	96
3.6	Renewing bulb for side lights	97
3.7	Renewing bulb for turn signal	98
3.8	Installing repair kit for headlight range control motor	99
3.9	Installing repair kit for headlight housing	100
3.10	Adapting headlights for driving on the left side of the road	100
3.11	Adapting headlights for driving on the right side of the road	101
<b>4</b>	<b>Gas discharge headlights - vehicles up to model year 2006</b>	<b>102</b>
4.1	Safety information for handling gas discharge bulbs	102
4.2	Assembly overview - gas discharge headlight	102
4.3	Removing and installing headlights	104
4.4	Adjusting headlights	105
4.5	Renewing gas discharge bulb	108
4.6	Renewing bulb for main beam headlights	109
4.7	Renewing bulb for side lights	110
4.8	Renewing bulb for turn signal	111

4.9	Removing and installing gas discharge bulb control unit J343 / J344	111
4.10	Removing and installing headlight range control motor V48 / V49	112
4.11	Installing repair kit for headlight housing	113
4.12	Adapting headlights for driving on the left or right side of the road	113
<b>5</b>	<b>Gas discharge headlights - vehicles from model year 2007 onwards</b>	<b>115</b>
5.1	Safety information for handling gas discharge bulbs	115
5.2	Assembly overview - gas discharge headlight	115
5.3	Removing and installing headlights	117
5.4	Adjusting headlights	118
5.5	Preparations before working on headlights	122
5.6	Renewing gas discharge bulb	126
5.7	Renewing bulb for daytime running light	127
5.8	Renewing bulb for side lights	128
5.9	Removing and installing main and dip beam switch-over solenoid N347 / N348	129
5.10	Renewing bulb for turn signal	129
5.11	Removing and installing gas discharge bulb control unit J343 / J344	130
5.12	Removing and installing swivel module position sensor G474 / G475	131
5.13	Removing and installing output module for headlight J667 / J668	131
5.14	Removing and installing dynamic cornering light control motor V318 / V319	131
5.15	Removing and installing headlight range control motor V48 / V49	131
5.16	Installing repair kit for headlight housing	131
5.17	Adapting headlights for driving on the left or right side of the road - vehicles with adjustment lever	132
5.18	Adapting headlights for driving on the left or right side of the road - vehicles without adjustment lever	133
<b>6</b>	<b>Fog lights - vehicles up to model year 2006</b>	<b>134</b>
6.1	Removing and installing fog lights	134
6.2	Renewing fog light bulbs	134
6.3	Adjusting fog lights	134
<b>7</b>	<b>Fog lights - vehicles from model year 2007 onwards</b>	<b>136</b>
7.1	Removing and installing fog lights - Audi A4	136
7.2	Removing and installing fog lights - Audi S line	137
7.3	Renewing fog light bulb - Audi A4	137
7.4	Renewing fog light bulb - Audi S line	138
7.5	Adjusting fog lights	138
<b>8</b>	<b>Turn signal repeaters</b>	<b>140</b>
8.1	Removing and installing turn signal repeater	140
<b>9</b>	<b>Tail light cluster - vehicles up to model year 2006</b>	<b>141</b>
9.1	Assembly overview - tail light cluster	141
9.2	Removing and installing tail light and bulb carrier	142
9.3	Aligning tail light cluster with body contour	143
<b>10</b>	<b>Tail light cluster - vehicles from model year 2007 onwards</b>	<b>144</b>
10.1	Assembly overview - tail light cluster	144
10.2	Removing and installing tail light and bulb carrier	146
10.3	Aligning tail light cluster with body contour	147
<b>11</b>	<b>High-level brake light</b>	<b>148</b>
11.1	Removing and installing high-level brake light	148
<b>12</b>	<b>Number plate light</b>	<b>149</b>
12.1	Removing and installing number plate light	149
<b>13</b>	<b>Steering column switch module</b>	<b>150</b>
13.1	Steering column switch module	150
13.2	Assembly overview - steering column switch module	150
13.3	Removing and installing steering column switch module	151
13.4	Removing and installing return ring with slip ring	152
13.5	Removing and installing steering angle sender G85	153

13.6	Removing and installing steering column electronics control unit J527	154
13.7	Pin assignment at steering column electronics control unit J527 (front)	154
13.8	Pin assignment at steering column electronics control unit J527 (reverse side)	156
13.9	Removing and installing turn signal switch E2	157
13.10	Removing and installing cruise control system switch E45	158
13.11	Removing and installing intermittent wiper switch E22	158
<b>14</b>	<b>Lock cylinder and ignition/starter switch</b>	<b>160</b>
14.1	Removing and installing lock cylinder	160
14.2	Removing and installing ignition/starter switch	162
14.3	Pin assignment on ignition/starter switch	162
<b>15</b>	<b>Parking aid</b>	<b>163</b>
15.1	Assembly overview - parking aid	163
15.2	Removing and installing parking aid control unit J446	164
15.3	Removing and installing front parking aid warning buzzer H22 - 8-channel parking aid	165
15.4	Removing and installing rear parking aid warning buzzer H15 - vehicles up to 02.2007	165
15.5	Removing and installing rear parking aid warning buzzer H15 - vehicles from 02.2007 onwards	166
15.6	Removing and installing front parking aid senders - vehicles up to model year 2006	166
15.7	Removing and installing front parking aid senders - vehicles from model year 2007 onwards	167
15.8	Removing and installing rear parking aid sender	168
<b>16</b>	<b>Automatic headlight range control</b>	<b>169</b>
16.1	Assembly overview - automatic headlight range control	169
16.2	Removing and installing control unit for headlight range control J431	170
<b>96</b>	<b>Lights, bulbs, switches - interior</b>	<b>171</b>
<b>1</b>	<b>Contact corrosion</b>	<b>171</b>
<b>2</b>	<b>Switches</b>	<b>172</b>
2.1	Removing and installing light switch	172
2.2	Removing and installing headlight range control adjuster and "coming home" switch	172
2.3	Removing and installing switches in centre console	173
2.4	Removing and installing seat heating switches (front)	174
2.5	Removing and installing heated rear seat switch with regulator E128 / E129	174
2.6	Removing and installing glove compartment light switch E26	174
2.7	Removing and installing convertible roof actuation button E137	175
2.8	Removing and installing mirror adjustment switch E43	177
2.9	Removing and installing window regulator switches E40 / E41 / E53 / E55	177
2.10	Removing and installing door contact switch	178
2.11	Removing and installing driver side interior locking switch E150 / front passenger side interior locking switch E198	178
2.12	Removing and installing interior monitor deactivation switch E183 and rear lid release switch E165	179
2.13	Removing and installing driver seat memory operating unit E97	179
2.14	Removing and installing garage door operation control unit J530 - vehicles up to model year 2006	180
2.15	Removing and installing garage door operation control unit J530 - vehicles from model year 2007 onwards	181
2.16	Removing and installing garage door operating unit E284 - vehicles up to 05.2006	181
2.17	Removing and installing garage door operating unit E284 - vehicles from 06.2006 onwards	181
2.18	Removing and installing rear lid contact switch	183
<b>3</b>	<b>Immobiliser</b>	<b>184</b>
<b>4</b>	<b>Ultrasonic interior monitoring</b>	<b>185</b>
4.1	Removing and installing interior monitor send and receive module 1 G303	185
4.2	Removing and installing interior monitor send and receive module 2 G305 - vehicles up to 06.2006	185

4.3	Removing and installing anti-theft alarm sensor G578 - vehicles from 07.2006 onwards	186
4.4	Removing and installing alarm horn H12	186
<b>5</b>	<b>Interior lights</b>	<b>188</b>
5.1	Removing and installing vanity mirror light	188
5.2	Removing and installing front interior light/reading light - vehicles up to 05.2006	188
5.3	Removing and installing front interior light/reading light - vehicles from 06.2006 onwards	188
5.4	Removing and installing LED for background lighting	189
5.5	Renewing interior light/reading light bulbs (front) - vehicles up to 05.2006	189
5.6	Renewing interior light/reading light bulbs (front) - vehicles from 06.2006 onwards	190
5.7	Removing and installing warning lamp for airbag deactivated on front passenger side K145 - up to 05.2004	190
5.8	Removing and installing warning lamp for airbag deactivated on front passenger side K145 - from 06.2004 onwards	190
5.9	Removing and installing glove compartment light	191
5.10	Removing and installing ashtray light (front)	191
5.11	Removing and installing footwell light (front)	192
5.12	Removing and installing bulb for door opener light	192
5.13	Removing and installing door warning lamp and entry light	193
5.14	Removing and installing luggage compartment lights	193
<b>6</b>	<b>Towing bracket</b>	<b>194</b>
6.1	Socket for towing bracket	194
6.2	Removing and installing trailer detector control unit J345	194
<b>97</b>	<b>- Wiring</b>	<b>195</b>
<b>1</b>	<b>Contact corrosion</b>	<b>195</b>
<b>2</b>	<b>Relay carriers, fuse carriers</b>	<b>196</b>
2.1	Removing and installing fuse holder	196
2.2	Unplugging left door coupling point	197
2.3	Removing and installing onboard supply control unit J519	197
2.4	Removing and installing 9-position relay carrier	198
2.5	Removing and installing 3-position relay carrier	199
2.6	Removing and installing 4-position relay carrier	199
2.7	Removing and installing coupling station at left A-pillar	201
2.8	Removing and installing convenience system central control unit J393	201
2.9	Unplugging right door coupling point	202
2.10	Removing and installing coupling station at right A-pillar	203
2.11	Removing and installing main fuse holder	203
2.12	Removing and installing electronics box (plenum chamber)	204
2.13	Removing and installing fan for electronics box (plenum chamber)	206
2.14	Removing and installing 4-position relay carrier in electronics box (plenum chamber)	206
2.15	Removing and installing coupling station in electronics box (plenum chamber)	208
<b>3</b>	<b>Repairing wiring harnesses and electrical connectors</b>	<b>211</b>
<b>4</b>	<b>Releasing and dismantling connector housings</b>	<b>212</b>
<b>5</b>	<b>Cleaning contact surfaces</b>	<b>213</b>
<b>6</b>	<b>Repairing aerial wires</b>	<b>214</b>
<b>7</b>	<b>Vehicle diagnostic, testing and information systems</b>	<b>215</b>