

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Repair instructions	2
2.1 General repair instructions	2
30 - Clutch	7
1 Clutch mechanism	7
1.1 Exploded view - clutch release mechanism	7
1.2 Servicing clutch release mechanism	9
2 Clutch	10
2.1 General notes on clutch	10
2.2 Exploded view - clutch unit	13
2.3 Removing and installing clutch module	16
2.4 Removing and installing clutch	20
2.5 Resetting adjuster ring in pressure plate	24
2.6 Renewing needle bearing for dual-mass flywheel	26
34 - Controls, housing	30
1 Transporting gearbox	30
2 Securing to engine and gearbox support	31
3 Dismantling and assembling gearbox	33
3.1 Schematic overview - gearbox	33
3.2 Exploded view - gearbox	34
3.3 Exploded view - gear cluster, reverse gear wheel, selector mechanism	37
3.4 Exploded view - selector forks	38
3.5 Dismantling and assembling gearbox	39
3.6 Removing and installing selector shaft	53
4 Gearbox housing, clutch housing	56
4.1 Exploded view - end cover	56
4.2 Exploded view - gearbox cover	57
4.3 Exploded view - gearbox housing	59
4.4 Servicing end cover	61
4.5 Servicing gearbox cover	63
4.6 Servicing gearbox housing	70
35 - Gears, shafts	74
1 Dismantling and assembling gears and shafts	74
1.1 Exploded view - gear cluster	74
1.2 Dismantling and assembling gear cluster	76
1.3 Servicing bearings for spur gear	81
1.4 Determining preload of tapered roller bearings for spur gear	84
2 Input shaft	87
2.1 Exploded view - input shaft	87
2.2 Dismantling and assembling input shaft	90
3 Output shaft	100
3.1 Exploded view - output shaft	100
3.2 Dismantling and assembling output shaft	105
39 - Final drive - differential	110
1 Final drive	110
1.1 Exploded view - final drive	110



1.2	Renewing cover for final drive	111
2	Oil seals	117
2.1	Renewing oil seal (left-side)	117
2.2	Renewing oil seal (right-side)	122
2.3	Renewing input shaft oil seal	124
3	Differential	126
3.1	Renewing mounting bracket and ball bearing for flange shaft (left-side)	126