

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Safety information	2
2.1 Safety precautions when working on vehicle	2
2.2 Safety precautions when working on vehicles with start/stop system	3
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Notes on tow-starting and towing	3
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General notes	5
3.3 General repair instructions	5
3.4 Contact corrosion	7
4 Technical data	8
4.1 Capacities	8
37 - Controls, housing	10
1 Selector mechanism	10
1.1 Assembly overview - selector mechanism	10
1.2 Assembly overview - selector lever handle	12
1.3 Assembly overview - selector lever cable	14
1.4 Checking selector mechanism	15
1.5 Manual release from position P	18
1.6 Removing and installing selector mechanism	19
1.7 Dismantling and assembling selector mechanism	22
1.8 Removing and installing selector lever handle	27
1.9 Removing and installing selector lever position display Y26	40
1.10 Removing and installing selector lever cable	41
1.11 Checking and adjusting selector lever cable	47
1.12 Adjusting selector lever cable to basic setting	49
1.13 Renewing selector shaft oil seal	54
2 Removing and installing gearbox	55
2.1 Removing gearbox	55
2.2 Installing gearbox	117
2.3 Tightening torques for gearbox	147
3 Assembly mountings	153
3.1 Assembly overview - assembly mountings	153
3.2 Removing and installing tunnel cross member	153
3.3 Removing and installing gearbox support with gearbox mounting	156
4 Transporting gearbox	158
5 Securing to engine and gearbox support	159
6 ATF	160
6.1 Assembly overview - ATF drain and inspection plugs in gearbox	160
6.2 Checking ATF level	160
6.3 Draining and filling ATF	170
7 ATF circuit	179
7.1 Assembly overview - ATF circuit	179
7.2 Removing and installing ATF filter	181
7.3 Cleaning ATF lines	184
7.4 Removing and installing ATF lines	184
38 - Gears, control	189



1	Dismantling and assembling gearbox	189
1.1	Assembly overview - dual-mass flywheel	189
1.2	Assembly overview - end cover	189
1.3	Removing and installing dual-mass flywheel	190
1.4	Removing and installing end cover	190
39	- Final drive - differential	196
1	Final drive	196
1.1	Assembly overview - final drive	196
2	Gear oil	199
2.1	Checking gear oil level	199
2.2	Draining and filling gear oil	202
3	Oil seals	205
3.1	Renewing left oil seal	205
3.2	Renewing right oil seal	205
3.3	Renewing oil seal for input shaft	205
4	Differential	206
4.1	Removing and installing left flange shaft	206
4.2	Removing and installing right flange shaft	206
5	Gearbox control system	210
5.1	Overview of fitting locations - gearbox control system	210
5.2	Removing and installing gearbox control unit	214
5.3	Removing and installing hydraulic control unit	214