

## Contents

<b>24 - Mixture preparation - injection</b> .....	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b> .....	<b>1</b>
1.1 General notes on self-diagnosis .....	1
1.2 Safety precautions when working on the fuel system .....	2
1.3 Safety precautions when working on the injection and ignition system .....	2
1.4 Safety precautions when working on vehicles with start/stop system .....	3
1.5 Safety precautions when using testers and measuring instruments during a road test .....	3
1.6 Rules for cleanliness and instructions for working on fuel system .....	3
1.7 Reducing pressure in high-pressure section of injection system .....	4
1.8 Checking for leaks in the fuel system .....	5
1.9 Checking vacuum system .....	5
<b>2 Injection system</b> .....	<b>7</b>
2.1 Technical data .....	7
2.2 Overview of fitting locations - injection system .....	7
2.3 Exploded view - vacuum system .....	14
<b>3 Air cleaner</b> .....	<b>16</b>
3.1 Exploded view - air cleaner housing .....	16
3.2 Removing and installing engine cover panel .....	17
3.3 Removing and installing air filter element .....	18
3.4 Removing and installing air cleaner housing .....	19
<b>4 Intake manifold</b> .....	<b>20</b>
4.1 Exploded view - intake manifold (top section) .....	20
4.2 Removing and installing throttle valve module J338 / J544 .....	21
4.3 Removing and installing intake manifold (top section) .....	22
4.4 Exploded view - intake manifold (bottom section), fuel rail and injectors .....	24
4.5 Removing and installing intake manifold (bottom section) with fuel rail .....	27
<b>5 High-pressure pump</b> .....	<b>31</b>
5.1 Exploded view - high-pressure pump .....	31
5.2 Removing and installing high-pressure pump .....	32
5.3 Removing and installing high-pressure pipe .....	34
<b>6 Injectors</b> .....	<b>38</b>
6.1 Removing and installing injectors .....	38
6.2 Cleaning injectors .....	42
<b>7 Senders and sensors</b> .....	<b>44</b>
7.1 Removing and installing fuel pressure sender G247 / G624 .....	44
7.2 Checking fuel pressure and residual pressure (up to high-pressure pump) .....	44
<b>8 Lambda probes</b> .....	<b>49</b>
8.1 Overview - Lambda probes .....	49
8.2 Removing and installing Lambda probes .....	49
<b>9 Engine control unit</b> .....	<b>52</b>
9.1 Wiring and component check with isolator boxes VAS 6606 .....	52
9.2 Removing and installing engine control unit J623 .....	53
<b>28 - Ignition system</b> .....	<b>57</b>
<b>1 General notes and safety precautions</b> .....	<b>57</b>
1.1 General notes on ignition system .....	57
1.2 Safety precautions .....	57
<b>2 Ignition system</b> .....	<b>59</b>
2.1 Test data .....	59
2.2 Exploded view - ignition system .....	59
2.3 Removing and installing ignition coils .....	61



2.4	Removing and installing knock sensors G61 / G66 / G198 / G199	62
2.5	Removing and installing Hall senders G40 / G163	63
2.6	Removing and installing Hall senders G300 / G301	64
2.7	Removing and installing engine speed sender G28	65