

001 - Basic equipment , (L0L)	1-24
1. Basic equipment , (L0L)	1
2. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Horn plate, Steering column electronics control unit, Fuse holder C	2
3. Relay and fuse carrier 1, Coupling point on left A-pillar, bottom	3
4. Relay and fuse carrier 1, Diagnostic connection	4
5. Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	5
6. Light switch, Onboard supply control unit	6
7. Hazard warning lights button, Operating unit 1 for driver and convenience functions, Onboard supply control unit	7
8. Treble horn, Bass horn, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	8
9. Front left brake pad wear sender, Front right brake pad wear sender, Rear right brake pad wear sender, Rain and light sensor, Onboard supply control unit, Washer pump	9
10. Glove compartment light switch, Onboard supply control unit, Valet parking warning lamp, Switch illumination bulb, Glove compartment release motor, Glove compartment light	10
11. Brake fluid level warning contact, Bonnet contact switch, Bonnet contact switch 2, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit	11
12. Heated rear window relay, Onboard supply control unit, Relay and fuse carrier 2	12
13. Convenience system central control unit, Relay and fuse carrier 2	13
14. Rear lid handle release button, Rear lid contact switch for anti-theft alarm, Contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system, Convenience system central control unit, Rear lid central locking motor, Tank filler flap locking motor, Left number plate light, Right number plate light	14
15. Suppression capacitor for heated rear window, Convenience system central control unit, Left luggage compartment light, Right luggage compartment light, Rear lid light	15
16. Window aerial suppression filter, Brake light switch, Convenience system central control unit, Heated rear window	16
17. Suppression capacitor, Convenience system central control unit, Left tail light cluster, Right tail light cluster, High-level brake light bulb	17
18. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	18
19. Cigarette lighter, 12 V socket, 12 V socket 2, 12 V socket 3, 12 V socket 4	19
20. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Rear vent illumination bulb, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	20
21. Front left reading light button, Front right reading light button, Warning lamp for airbag deactivated on front passenger side, Rear interior light, Front roof module, Front left reading light, Front right reading light	21
22. Dash panel insert operating button, Control unit in dash panel insert, Display in dash panel insert	22
23. Control unit in dash panel insert, Control unit 1 for information electronics	23
24. Data bus diagnostic interface	24
002 - Basic equipment, right-hand drive , (L0R)	25-48
1. Basic equipment, right-hand drive , (L0R)	25
2. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Horn plate, Steering column electronics control unit, Fuse holder C	26
3. Relay and fuse carrier 1, Coupling point on left A-pillar, bottom	27
4. Relay and fuse carrier 1, Diagnostic connection	28
5. Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	29
6. Light switch, Onboard supply control unit	30
7. Hazard warning lights button, Operating unit 1 for driver and convenience functions, Onboard supply control unit	31
8. Treble horn, Bass horn, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	32
9. Front left brake pad wear sender, Front right brake pad wear sender, Rear right brake pad wear sender, Rain and light sensor, Onboard supply control unit, Washer pump	33
10. Glove compartment light switch, Onboard supply control unit, Valet parking warning lamp, Switch illumination bulb, Glove compartment release motor, Glove compartment light	34
11. Brake fluid level warning contact, Bonnet contact switch, Bonnet contact switch 2, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit	35
12. Heated rear window relay, Onboard supply control unit, Relay and fuse carrier 2	36
13. Convenience system central control unit, Relay and fuse carrier 2	37
14. Rear lid handle release button, Rear lid contact switch for anti-theft alarm, Contact switch in lock cylinder for rear lid. anti-theft alarm svstem and central locking svstem. Convenience svstem	38

central control unit, Rear lid central locking motor, Tank filler flap locking motor, Left number plate light, Right number plate light	
15. Suppression capacitor for heated rear window, Convenience system central control unit, Left luggage compartment light, Right luggage compartment light, Rear lid light	39
16. Window aerial suppression filter, Brake light switch, Convenience system central control unit, Heated rear window	40
17. Suppression capacitor, Convenience system central control unit, Left tail light cluster, Right tail light cluster, High-level brake light bulb	41
18. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	42
19. Cigarette lighter, 12 V socket, 12 V socket 2, 12 V socket 3, 12 V socket 4	43
20. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Rear vent illumination bulb, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	44
21. Front left reading light button, Front right reading light button, Warning lamp for airbag deactivated on front passenger side, Rear interior light, Front roof module, Front left reading light, Front right reading light	45
22. Dash panel insert operating button, Control unit in dash panel insert, Display in dash panel insert	46
23. Control unit in dash panel insert, Control unit 1 for information electronics	47
24. Data bus diagnostic interface	48
003 - Convenience system , (L0L)	49-80
1. Convenience system , (L0L)	49
2. Convenience system central control unit, Relay and fuse carrier 2	50
3. Rear lid handle release button, Alarm horn, Convenience system central control unit, Rear lid central locking motor, Left number plate light, Right number plate light	51
4. Convenience system central control unit, Rear lid power opening control unit	52
5. Interior monitoring sensor, Vehicle inclination sender, Anti-theft alarm sensor, Rear lid power opening sender, Rear lid power opening sender 2, Convenience system central control unit, Rear lid power opening control unit	53
6. Convenience system central control unit	54
7. Relay and fuse carrier 1	55
8. Onboard supply control unit, Rear left footwell light	56
9. Onboard supply control unit, Light for cup holder background lighting, Light 2 for cup holder background lighting, Rear right footwell light	57
10. Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting	58
11. Onboard supply control unit, Front left footwell light, Front right footwell light	59
12. Driver door control unit, Coupling point for front left door, Light for sill panel moulding background lighting, driver side	60
13. Contact sensor for front left exterior door handle, Driver door control unit, Light for exterior door handle illumination, driver side, Driver door lock unit	61
14. Rear lid remote release button, Driver side interior locking button for central locking system, Driver operating unit for memory settings, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit	62
15. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	63
16. Mirror adjustment switch, Mirror adjustment changeover switch, Driver door control unit, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Light for driver door background lighting, Driver side entry light	64
17. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side exterior mirror, Exit warning lamp, driver side	65
18. Driver door control unit, Light 1 for front left door background lighting, Light for left door storage compartment illumination, Coupling point in front left door, Driver side exterior mirror	66
19. Light 1 for front left door background lighting, Light for front left door contour lighting, Light for sill panel moulding background lighting, front passenger side	67
20. Front passenger door control unit, Front passenger door lock unit	68
21. Front passenger operating unit for memory settings, Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	69
22. Front passenger side interior locking button for central locking system, Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Light for passenger door background lighting, Passenger side entry light, Exit warning lamp, front passenger side	70
23. Front passenger door control unit, Passenger side exterior mirror	71
24. Front passenger door control unit, Light 1 for front right door background lighting, Light for front right door contour lighting, Light for right door storage compartment illumination, Coupling point in front right door. Passenger side exterior mirror	72

25. Contact sensor for rear left exterior door handle, Rear driver side door control unit, Light for rear exterior door handle illumination, driver side, Coupling point for rear left door	73
26. Rear driver side door control unit, Rear door lock unit, driver side, Rear driver side window regulator motor	74
27. Rear driver side window regulator button, Rear driver side interior locking button for central locking system, Rear driver side door control unit, Light for rear driver side interior door handle illumination, Light for rear door background lighting, driver side	75
28. Rear driver side door control unit, Light 1 for rear left door background lighting, Light for rear left door contour lighting, Light for rear left door storage compartment illumination, Rear exit warning lamp, driver side	76
29. Contact sensor for rear right exterior door handle, Rear passenger side door control unit, Light for rear exterior door handle illumination, passenger side	77
30. Rear door contact switch, passenger side, Rear passenger side door control unit, Rear door lock unit, passenger side, Rear childproof lock motor, passenger side, Rear central locking SAFELOCK function motor, passenger side, Rear central locking motor, passenger side	78
31. Rear passenger side window regulator button, Rear passenger side interior locking button for central locking system, Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Rear passenger side entry light, Light for rear door background lighting, passenger side	79
32. Rear passenger side door control unit, Light 1 for rear right door background lighting, Light for rear right door contour lighting, Light for rear right door storage compartment illumination, Rear exit warning lamp, passenger side	80
004 - Convenience system, right-hand drive , (LOR)	81-112
1. Convenience system, right-hand drive , (LOR)	81
2. Convenience system central control unit, Relay and fuse carrier 2	82
3. Interior monitoring sensor, Vehicle inclination sender, Anti-theft alarm sensor, Alarm horn, Convenience system central control unit, Rear lid central locking motor	83
4. Rear lid handle release button, Convenience system central control unit, Left number plate light, Right number plate light	84
5. Rear lid power opening sender, Rear lid power opening sender 2, Convenience system central control unit, Rear lid power opening control unit	85
6. Convenience system central control unit	86
7. Relay and fuse carrier 1	87
8. Onboard supply control unit, Rear left footwell light	88
9. Onboard supply control unit, Light for cup holder background lighting, Light 2 for cup holder background lighting, Rear right footwell light	89
10. Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting	90
11. Onboard supply control unit, Front left footwell light, Front right footwell light	91
12. Driver door control unit, Light for sill panel moulding background lighting, driver side	92
13. Driver door control unit, Driver door lock unit	93
14. Rear lid remote release button, Driver side interior locking button for central locking system, Driver operating unit for memory settings, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit	94
15. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	95
16. Mirror adjustment switch, Mirror adjustment changeover switch, Driver door control unit, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Light for driver door background lighting, Driver side entry light	96
17. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side exterior mirror, Exit warning lamp, driver side	97
18. Driver door control unit, Light 1 for front right door background lighting, Light for right door storage compartment illumination, Coupling point in front right door, Driver side exterior mirror	98
19. Light 1 for front right door background lighting, Light for front right door contour lighting, Coupling point for front left door, Light for sill panel moulding background lighting, front passenger side	99
20. Contact sensor for front left exterior door handle, Front passenger door control unit, Front passenger door lock unit	100
21. Front passenger operating unit for memory settings, Front passenger side window regulator button, Front passenger door control unit, Light for exterior door handle illumination, front passenger side, Front passenger side window regulator motor	101
22. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Light for passenger door background lighting, Passenger side entry light, Exit warning lamp, front passenger side	102
23. Front passenger door control unit, Passenger side exterior mirror	103
24. Front passenger door control unit. Light 1 for front left door background lighting. Light for	104

front left door contour lighting, Light for left door storage compartment illumination, Coupling point in front left door, Passenger side exterior mirror	
25. Contact sensor for rear right exterior door handle, Rear driver side door control unit, Light for rear exterior door handle illumination, driver side	105
26. Rear driver side door control unit, Rear door lock unit, driver side, Rear driver side window regulator motor	106
27. Rear driver side window regulator button, Rear driver side door control unit, Light for rear driver side interior door handle illumination, Light for rear door background lighting, driver side	107
28. Rear driver side door control unit, Light 1 for rear right door background lighting, Light for rear right door contour lighting, Light for rear right door storage compartment illumination, Rear exit warning lamp, driver side	108
29. Contact sensor for rear left exterior door handle, Rear passenger side door control unit, Light for rear exterior door handle illumination, passenger side, Coupling point for rear left door	109
30. Rear door contact switch, passenger side, Rear passenger side door control unit, Rear door lock unit, passenger side, Rear childproof lock motor, passenger side, Rear central locking SAFELOCK function motor, passenger side, Rear central locking motor, passenger side	110
31. Rear passenger side window regulator button, Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Rear passenger side entry light, Light for rear door background lighting, passenger side	111
32. Rear passenger side door control unit, Light 1 for rear left door background lighting, Light for rear left door contour lighting, Light for rear left door storage compartment illumination, Rear exit warning lamp, passenger side	112
005 - Fuse assignment	113-172
1. Fuse assignment	113
2. Battery, Starter, Alternator, Fuses in fuse holder	114
3. Second battery, Battery isolation igniter, Fuses in fuse holder	115
4. Fuse holder A	116
5. Suppression capacitor, Radiator fan control unit, Fuse holder A, Jump start socket	117
6. Starter relay 1, Relay and fuse carrier 3, Fuse holder H, Terminal 30 wiring junction 3	118
7. Starter relay 2, Relay and fuse carrier 3	119
8. Main relay, Relay and fuse carrier 1	120
9. Relay and fuse carrier 1, Fuse carrier 1	121
10. NOx sender 3, Relay and fuse carrier 1, Fuse carrier 1	122
11. Relay and fuse carrier 1, Fuse carrier 1	123
12. Relay and fuse carrier 1, Fuse carrier 1	124
13. Relay and fuse carrier 1, Fuse carrier 1	125
14. Starter-alternator, Control unit for electric compressor, Relay and fuse carrier 1, Fuse carrier 1	126
15. Relay and fuse carrier 1, Fuse carrier 1	127
16. Relay and fuse carrier 1, Fuse carrier 1	128
17. Relay and fuse carrier 1, Fuse carrier 1	129
18. Terminal 15 voltage supply relay, Relay and fuse carrier 1, Fuse carrier 1, Lambda probe heater 2, Lambda probe 1 heater after catalytic converter	130
19. Relay and fuse carrier 1, Fuse carrier 2, ABS control unit fuse 1, ABS control unit fuse 2	131
20. Toll collection sender, Relay and fuse carrier 1, Fuse carrier 2	132
21. Relay and fuse carrier 1, Fuse carrier 2	133
22. Relay and fuse carrier 1, Fuse carrier 2, Fuse carrier 3	134
23. Relay and fuse carrier 1, Fuse carrier 3	135
24. Relay and fuse carrier 1, Fuse carrier 3, Automatic gearbox control unit fuse	136
25. Relay and fuse carrier 1, Fuse carrier 4	137
26. Relay and fuse carrier 1, Fuse carrier 4	138
27. Driving school mode relay, Relay and fuse carrier 1, Fuse carrier 4	139
28. Engine component power supply relay, Relay and fuse carrier 1, Fuse carrier 5	140
29. Relay and fuse carrier 1, Fuse carrier 5	141
30. Relay for left neck heating, Relay and fuse carrier 1, Driver seat adjustment thermal fuse 1, Coupling point for front left seat	142
31. Coupling point for front passenger seat backrest, Coupling point for driver seat backrest, Coupling point for front left seat, Coupling point for front right seat	143
32. Coupling point in engine compartment, left, Coupling point for front right seat	144
33. Coupling point in engine compartment, left	145
34. Coupling point in engine compartment, left	146
35. Coupling point in engine compartment, left, Connection 4 (87a) in engine wiring harness, Connection 5 (87a) in engine wiring harness, Connection 6 (87a) in engine wiring harness	147
36. Coolant changeover valve 1	148
37. Coupling point in interior, left	149
38. Connection 7 in engine compartment wiring harness. Connection (87a). in engine wiring harness	150



39. Coupling point in engine compartment, centre, Connection 7 in engine compartment wiring harness	151
40. Coolant pump for high-temperature circuit, Coolant pump for low-temperature circuit	152
41. Connection 2 in engine compartment wiring harness, Connection 3 in engine compartment wiring harness	153
42. Connection 2 in engine compartment wiring harness, Connection 3 in engine compartment wiring harness	154
43. Coupling point on engine, top	155
44. Connection 1, in engine prewiring harness, Connection (87a) in engine prewiring harness, Connection 2 (87a) in engine prewiring harness	156
45. Coupling point on left A-pillar, bottom	157
46. Fuse holder C	158
47. Fuse holder C	159
48. Heated windscreen relay, Relay and fuse carrier 2	160
49. Heated windscreen relay for left side, Heated windscreen relay for right side, Relay and fuse carrier 2, Heated windscreen	161
50. Fuse carrier 1, Relay and fuse carrier 2	162
51. Fuse carrier 1, Relay and fuse carrier 2	163
52. Fuse carrier 1, Relay and fuse carrier 2	164
53. Relay and fuse carrier 2, Fuse carrier 3	165
54. Relay and fuse carrier 2, Fuse carrier 3	166
55. Relay and fuse carrier 2, Fuse carrier 3, Front passenger seat adjustment thermal fuse 1	167
56. Relay and fuse carrier 2, Fuse carrier 5	168
57. Relay and fuse carrier 2, Fuse carrier 5, Fuse carrier 6, Heated rear window fuse, Automatic gearbox control unit fuse	169
58. Relay and fuse carrier 2, Fuse carrier 6	170
59. Relay for right neck heating, Relay and fuse carrier 2	171
60. Low heat output relay, High heat output relay, Relay and fuse carrier 4	172
006 - Airbag systems , (L0L)	173-183
1. Airbag systems , (L0L)	173
2. Airbag control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag, Fuses in fuse holder	174
3. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Data bus diagnostic interface, Front passenger airbag unit	175
4. Driver side belt switch, Twin belt buckle, Driver side seat position sensor, Airbag control unit, Side airbag igniter on driver side	176
5. Front passenger side belt switch, Rear belt switch, passenger side, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Side airbag igniter on front passenger side	177
6. Rear side airbag crash sensor on driver side, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	178
7. Rear side airbag crash sensor on passenger side, Driver side belt force limiter, Airbag control unit, Front left seat belt, Driver seat belt tensioner igniter 1	179
8. Front passenger side belt force limiter, Airbag control unit, Front right seat belt, Front passenger seat belt tensioner igniter 1, Driver side knee airbag igniter, Front passenger side knee airbag igniter	180
9. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Driver side crash sensor 2 for pedestrian protection, Airbag control unit	181
10. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Centre crash sensor for pedestrian protection, Front passenger side crash sensor 2 for pedestrian protection, Airbag control unit	182
11. Second battery, Battery, 48 V, Airbag control unit	183
007 - Airbag systems for RHD vehicles , (L0R)	184-194
1. Airbag systems for RHD vehicles , (L0R)	184
2. Coil connector, Airbag control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag, Fuses in fuse holder	185
3. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Data bus diagnostic interface, Front passenger airbag unit	186
4. Driver side belt switch, Rear belt switch, driver side, Twin belt buckle, Driver side seat position sensor, Airbag control unit, Side airbag igniter on driver side	187
5. Front passenger side belt switch, Twin belt buckle, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Side airbag igniter on front passenger side	188
6. Rear side airbaa crash sensor on driver side. Airbaa control unit. Rear belt tensioner ianiter on	189

driver side, Rear belt tensioner igniter on passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	
7. Rear side airbag crash sensor on passenger side, Driver side belt force limiter, Airbag control unit, Front right seat belt, Driver seat belt tensioner igniter 1	190
8. Front passenger side belt force limiter, Trigger 1 for pedestrian protection, Driver side crash sensor 2 for pedestrian protection, Airbag control unit, Front left seat belt, Front passenger seat belt tensioner igniter 1	191
9. Front airbag crash sensor for driver side, Trigger 2 for pedestrian protection, Centre crash sensor for pedestrian protection, Front passenger side crash sensor 2 for pedestrian protection, Airbag control unit	192
10. Second battery, Battery, 48 V, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	193
11. Airbag control unit	194
008 - Anti-lock brake system (ABS)	195-202
1. Anti-lock brake system (ABS)	195
2.	196
3. Front left speed sensor, Vacuum sender, ABS control unit, Engine/motor control unit, ABS hydraulic pump	197
4. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, ABS control unit, Left parking brake motor, Right parking brake motor	198
5. Clutch position sender, ABS control unit, Rear left ABS outlet valve, Vehicle stabilization program high-pressure valve 1	199
6. Electromechanical parking brake button, Auto-hold button, Electromechanical parking brake warning lamp	200
7. Electromechanical parking brake button, Auto-hold button, Onboard supply control unit	201
8. Button for TCS and electronic stabilisation program, Hill descent control button, Operating unit 1 for driver and convenience functions, Onboard supply control unit	202
009 - Electromechanical steering , (1N8),(QZ7),(L0L)	203-207
1. Electromechanical steering , (1N8),(QZ7),(L0L)	203
2. Steering moment sender, Power steering control unit, Electromechanical power steering motor	204
3. Data bus diagnostic interface, Active steering control unit, Electromechanical power steering warning lamp	205
4. Rotor position sender for active steering motor, Active steering control unit, Active steering motor	206
5. Active steering safety lock actuator, Active steering control unit, Active steering motor	207
010 - Automatic adaptive suspension, adjustable dampers , (1BC),(1BL),(2MC),(2MS),(2MT),(2MV)	208-211
1. Automatic adaptive suspension, adjustable dampers , (1BC),(1BL),(2MC),(2MS),(2MT),(2MV)	208
2. Driving mode selection button, Operating unit 1 for driver and convenience functions, Front left vehicle level sender, Onboard supply control unit, Running gear control unit, Front left shock absorber damping adjustment valve	209
3. Rear left vehicle level sender, Rear right vehicle level sender, Front left vehicle level sender, Front right vehicle level sender, Running gear control unit, Front right shock absorber damping adjustment valve, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	210
4. Rear right vehicle level sender, Steering column electronics control unit, Data bus diagnostic interface, Running gear control unit, Front camera for driver assist systems	211
011 - Data bus diagnostic interface and diagnostic connector	212-231
1. Data bus diagnostic interface and diagnostic connector	212
2. Data bus diagnostic interface, Diagnostic connection, Connection 3 (LIN bus) in main wiring harness	213
3. Data bus diagnostic interface, Diagnostic connection	214
4. Data bus diagnostic interface, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 3 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness, Connection 3 (convenience CAN bus, low), in main wiring harness	215
5. Data bus diagnostic interface, Coupling point for front left seat, Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 3 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness, Connection 3 (convenience CAN bus, low), in main wiring harness	216
6. Data bus diagnostic interface, Connection (infotainment CAN bus, high), in dash panel wiring harness, Connection (infotainment CAN bus, low), in dash panel wiring harness, Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness	217
7. Data bus diagnostic interface, Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness	218

8. Data bus diagnostic interface, Connection 2 (infotainment CAN bus, high) in dash panel wiring harness, Connection 2 (infotainment CAN bus, low) in dash panel wiring harness, Connection 1 (CAN bus extended high), in main wiring harness, Connection 1 (CAN bus extended low), in main wiring harness	219
9. Data bus diagnostic interface, Connection 3 (CAN bus extended high), in main wiring harness, Connection 3 (CAN bus extended low), in main wiring harness	220
10. Data bus diagnostic interface, Connection 3 (CAN bus extended high), in main wiring harness, Connection 3 (CAN bus extended low), in main wiring harness	221
11. Data bus diagnostic interface, Connection 1 (CAN bus, onboard supply control unit, high), Connection 1 (CAN bus, onboard supply control unit, low)	222
12. Data bus diagnostic interface, Connection 2 (CAN bus, control unit 1 for information electronics, high), Connection 2 (CAN bus, control unit 1 for information electronics, low)	223
13. Data bus diagnostic interface, Connection (high bus), in interior wiring harness, Connection (low bus), in interior wiring harness, Connection 2 (high bus), in interior wiring harness, Connection 2 (low bus), in interior wiring harness	224
14. Connection 2 (high bus), in interior wiring harness, Connection 2 (low bus), in interior wiring harness, Connection (high bus), in engine compartment wiring harness, Connection (low bus), in engine compartment wiring harness	225
15. Connection 2 (LIN bus) in dash panel wiring harness, Connection 4 (LIN bus) in main wiring harness	226
16. Onboard supply control unit, Connection 2 (LIN bus) in main wiring harness	227
17. Onboard supply control unit, Connection 6 (LIN bus) in main wiring harness, Connection 7 (LIN bus) in main wiring harness	228
18. Onboard supply control unit, Connection 5 (LIN bus) in main wiring harness, Connection 6 (LIN bus) in main wiring harness	229
19. Convenience system central control unit, Connection 8 (LIN bus) in main wiring harness, Connection 1 (CAN bus extended high), in rear bumper wiring harness, Connection 1 (CAN bus extended low), in rear bumper wiring harness	230
20. Coupling point for front right seat	231
012 - 1.4l petrol engine , CVNA	232-250
1. 1.4l petrol engine , CVNA	232
2. Battery, Starter, Alternator, Fuses in fuse holder, Coupling point in engine compartment, right	233
3. Starter relay 1, Fuse holder A, Relay and fuse carrier 3, Fuse (50), Jump start socket	234
4. Starter relay 1, Starter relay 2, Relay and fuse carrier 3, Radiator fan	235
5. Main relay, Relay and fuse carrier 1	236
6. Relay and fuse carrier 1	237
7. Terminal 15 voltage supply relay, Engine/motor control unit, Relay and fuse carrier 1	238
8. Engine/motor control unit, Auxiliary pump for heating	239
9. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve	240
10. Oil level and oil temperature sender, Engine/motor control unit, Charge air cooling pump	241
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	242
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	243
13. Engine speed sender, Coolant temperature sender, Fuel pressure sender, Engine/motor control unit, Exhaust camshaft control valve 1, Valve for oil pressure control, Charge pressure positioner	244
14. Charge pressure sender, Hall sender, Intake manifold pressure sender, Hall sender 3, Engine/motor control unit, Fuel pressure regulating valve	245
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Throttle valve module, Gear detection sensor, Engine/motor control unit	246
16. Brake light switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	247
17. Clutch pedal switch, Clutch pedal switch for engine start, Knock sensor 1, Clutch position sender, Data bus diagnostic interface, Engine/motor control unit	248
18. Fuel delivery unit, Mechatronic unit for dual clutch gearbox	249
19. Coolant shortage indicator sender, Control unit in dash panel insert, Onboard supply control unit, Air conditioner compressor regulating valve	250
013 - 2.0l petrol engine , CVKB,CVKC	251-275
1. 2.0l petrol engine , CVKB,CVKC	251
2. Battery, Starter, Alternator, Fuses in fuse holder, Coupling point in engine compartment, right	252
3. Starter relay 1, Fuse holder A, Relay and fuse carrier 3, Fuse (50), Jump start socket, Radiator fan	253
4. Starter relay 1, Starter relay 2, Relay and fuse carrier 3	254
5. Main relav. Engine component power supply relav. Relay and fuse carrier 1. Coolant circulation	255

pump	
6. Relay and fuse carrier 1, Continued coolant circulation pump	256
7. Terminal 15 voltage supply relay, Engine/motor control unit, Relay and fuse carrier 1	257
8. Engine/motor control unit	258
9. Accelerator pedal module, Radiator outlet coolant temperature sender, Steering column electronics control unit, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	259
10. Oil level and oil temperature sender, Engine/motor control unit	260
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	261
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Actuator for engine temperature regulation	262
13. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Charge pressure positioner	263
14. Hall sender, Coolant temperature sender, Fuel pressure sender, Intake manifold flap potentiometer, Fuel pressure sender for low pressure, Engine/motor control unit	264
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	265
16. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Engine/motor control unit, Piston cooling jet control valve	266
17. Oil pressure switch, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine speed sender, Engine/motor control unit	267
18. Throttle valve module, Knock sensor 1, Hall sender 3, Pressure differential sender, Engine/motor control unit	268
19. Charge pressure sender, Intake manifold pressure sender, Tank pressure sensor 2, Engine/motor control unit, Fuel metering valve	269
20. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Gear detection sensor, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	270
21. Brake light switch, Clutch pedal switch, Clutch pedal switch for engine start, Clutch position sender, Engine/motor control unit	271
22. Air mass meter, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit, Coolant shut-off valve, Air conditioner compressor regulating valve	272
23. Ambient temperature sensor, Coolant shortage indicator sender, Tank pressure sensor, Onboard supply control unit, Control unit for fuel tank leak detection, Relay and fuse carrier 2	273
24. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit	274
25. Control unit in dash panel insert, Mechatronic unit for dual clutch gearbox	275
014 - 2.0l petrol engine , CYRB,CYRC	276-298
1. 2.0l petrol engine , CYRB,CYRC	276
2. Battery, Starter, Alternator, Fuses in fuse holder, Coupling point in engine compartment, right	277
3. Starter relay 1, Fuse holder A, Relay and fuse carrier 3, Fuse (50), Jump start socket, Radiator fan	278
4. Starter relay 1, Starter relay 2, Relay and fuse carrier 3	279
5. Main relay, Engine component power supply relay, Relay and fuse carrier 1, Coolant circulation pump	280
6. Relay and fuse carrier 1	281
7. Terminal 15 voltage supply relay, Engine/motor control unit, Relay and fuse carrier 1	282
8. Engine/motor control unit, Right electrohydraulic engine mounting solenoid valve	283
9. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Continued coolant circulation pump	284
10. Oil level and oil temperature sender, Engine/motor control unit	285
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	286
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Actuator for engine temperature regulation	287
13. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Charge pressure positioner	288
14. Hall sender, Intake manifold pressure sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	289
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve	290
16. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7.	291



Engine/motor control unit	
17. Oil pressure switch, Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine speed sender, Coolant temperature sender, Hall sender 3, Engine/motor control unit	292
18. Throttle valve module, Knock sensor 1, Fuel pressure sender for low pressure, Engine/motor control unit, Fuel metering valve	293
19. Lambda probe 1 before catalytic converter, Charge pressure sender, Gear detection sensor, Engine/motor control unit, Lambda probe heater	294
20. Brake light switch, Clutch pedal switch, Clutch pedal switch for engine start, Lambda probe 1 after catalytic converter, Clutch position sender, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	295
21. Radiator outlet coolant temperature sender, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	296
22. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit	297
23. Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Mechatronic unit for dual clutch gearbox, Coolant shut-off valve, Air conditioner compressor regulating valve	298
015 - 2.0l diesel engine , CZHA,DESA,DETA,DET,DEUA,DEUB,DEUC	299-325
1. 2.0l diesel engine , CZHA,DESA,DETA,DET,DEUA,DEUB,DEUC	299
2. Battery, Starter, Alternator, Battery monitor control unit, Battery isolation igniter, Fuses in fuse holder	300
3. Suppression capacitor, Radiator fan control unit, Fuse holder A, Relay and fuse carrier 3, Jump start socket, Radiator fan	301
4. Main relay, Starter relay 1, Starter relay 2, Relay and fuse carrier 1, Relay and fuse carrier 3	302
5. Relay and fuse carrier 1, Fuse carrier 1	303
6. Terminal 15 voltage supply relay, Relay and fuse carrier 1, Fuse carrier 1	304
7. Automatic glow period control unit, Relay and fuse carrier 1	305
8. Automatic glow period control unit, Engine/motor control unit, Air filter bypass flap valve	306
9. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Auxiliary pump for heating	307
10. Engine/motor control unit	308
11. Ambient temperature sensor, Coolant shortage indicator sender, Air mass meter, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor regulating valve	309
12. Accelerator pedal module, Oil level and oil temperature sender, Engine/motor control unit	310
13. Fuel pressure sender, Position sender for charge pressure positioner, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	311
14. Throttle valve module, Charge pressure sender, Exhaust gas pressure sensor 1, Pressure differential sender, Engine/motor control unit	312
15. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	313
16. Fuel temperature sender, Fuel pressure sender for low pressure, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	314
17. Water level sender, Engine/motor control unit, Radiator blind control motor, Radiator blind control motor 2	315
18. Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Gear detection sensor, Engine/motor control unit	316
19. Engine speed sender, Hall sender, Coolant temperature sender, Exhaust gas temperature sender 4, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	317
20. Brake light switch, Engine/motor control unit, Charge pressure control solenoid valve, Valve for oil pressure control, Coolant valve for cylinder head	318
21. Lambda probe 1 before catalytic converter, Lambda probe, Engine/motor control unit, Exhaust flap control unit, Lambda probe heater	319
22. NOx sender, Data bus diagnostic interface, Control unit for NOx sender, Engine/motor control unit, Control unit for NOx sender 2	320
23. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Convenience system central control unit, Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit	321
24. Control unit for reducing agent metering system, Injector for reducing agent	322
25. Delivery unit for reducing agent metering system, Tank sender for reducing agent, Temperature sender for reducing agent, Pressure sender for reducing agent metering system, Reducing agent quality sensor, Control unit for reducing agent metering system, Heater for reducing agent tank (heater circuit 1)	323
26. Delivery unit for reducing agent metering system, Biodiesel concentration sender, Control unit for reducing agent metering system, Pump for reducing agent, Heater 2 for reducing agent tank (heater circuit 3)	324

27. Control unit for reducing agent metering system, Heater for reducing agent line (heater circuit 2)	325
016 - 2.0l diesel engine , DFVA	326-350
1. 2.0l diesel engine , DFVA	326
2. Battery, Starter, Alternator, Battery monitor control unit, Battery isolation igniter, Fuses in fuse holder	327
3. Suppression capacitor, Radiator fan control unit, Fuse holder A, Relay and fuse carrier 3, Jump start socket, Radiator fan	328
4. Main relay, Starter relay 1, Starter relay 2, Relay and fuse carrier 1, Fuse carrier 1, Relay and fuse carrier 3	329
5. Relay and fuse carrier 1, Fuse carrier 1	330
6. Terminal 15 voltage supply relay, Glow plug 1, Relay and fuse carrier 1	331
7. Automatic glow period control unit, Glow plug 2, Glow plug 3, Glow plug 4	332
8. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Air filter bypass flap valve	333
9. Engine/motor control unit, Auxiliary pump for heating	334
10. Ambient temperature sensor, Coolant shortage indicator sender, Air mass meter, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor regulating valve	335
11. Accelerator pedal module, Oil level and oil temperature sender, Engine/motor control unit	336
12. Fuel pressure sender, Position sender for charge pressure positioner, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	337
13. Throttle valve module, Charge pressure sender, Exhaust gas pressure sensor 1, Pressure differential sender, Engine/motor control unit	338
14. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	339
15. Fuel temperature sender, Fuel pressure sender for low pressure, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	340
16. Water level sender, Gear detection sensor, Engine/motor control unit, Radiator blind control motor, Radiator blind control motor 2	341
17. Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Gear detection sensor, Exhaust gas temperature sender 4, Engine/motor control unit	342
18. Engine speed sender, Hall sender, Coolant temperature sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	343
19. Brake light switch, Engine/motor control unit, Charge pressure control solenoid valve, Valve for oil pressure control, Coolant valve for cylinder head	344
20. Lambda probe 1 before catalytic converter, Lambda probe, Engine/motor control unit, Exhaust flap control unit, Lambda probe heater	345
21. NOx sender, Data bus diagnostic interface, Control unit for NOx sender, Engine/motor control unit	346
22. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Convenience system central control unit, Fuel pump control unit, Engine/motor control unit	347
23. Control unit for reducing agent metering system, Injector for reducing agent	348
24. Delivery unit for reducing agent metering system, Tank sender for reducing agent, Temperature sender for reducing agent, Pressure sender for reducing agent metering system, Reducing agent quality sensor, Control unit for reducing agent metering system, Heater for reducing agent tank (heater circuit 1)	349
25. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Control unit for reducing agent metering system, Pump for reducing agent, Heater for reducing agent line (heater circuit 2), Heater 2 for reducing agent tank (heater circuit 3)	350
017 - 3.0l diesel engine , CRTC,CSWB	351-375
1. 3.0l diesel engine , CRTC,CSWB	351
2. Battery, Starter, Alternator, Battery monitor control unit, Battery isolation igniter, Fuses in fuse holder	352
3. Suppression capacitor, Radiator fan control unit, Relay and fuse carrier 3, Fuse holder A, Jump start socket, Radiator fan	353
4. Main relay, Starter relay 1, Starter relay 2, Relay and fuse carrier 1, Fuse carrier 1, Relay and fuse carrier 3	354
5. Relay and fuse carrier 1, Fuse carrier 1	355
6. Terminal 15 voltage supply relay, Relay and fuse carrier 1	356
7. Automatic glow period control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	357
8. Air mass meter, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve	358
9. Engine/motor control unit, Coolant circulation pump	359
10. Coolant shortage indicator sender, Intake air temperature sender, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor regulating valve	360

11. Accelerator pedal module, Oil level and oil temperature sender, Engine/motor control unit	361
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6, Air filter bypass flap valve	362
13. Throttle valve module, Intake manifold flap control unit, Charge pressure sender, Engine/motor control unit	363
14. Oil pressure sender, Fuel pressure sender, Fuel pressure sender for low pressure, Engine/motor control unit, Turbocharger 1 control unit	364
15. Map-controlled engine cooling system thermostat, Exhaust gas recirculation valve 1, Fuel temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit, Fuel metering valve	365
16. Coolant temperature sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit, Valve for oil pressure control	366
17. Catalytic converter temperature sensor 1, Hall sender, Pressure differential sender, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit, Valve for oil pressure control	367
18. Brake light switch, Engine speed sender, Engine/motor control unit, Fuel pressure regulating valve, Exhaust gas recirculation cooler changeover valve, Coolant valve for cylinder head	368
19. NOx sender, NOx sender 2, Control unit for NOx sender, Engine/motor control unit, Control unit for NOx sender 2	369
20. Particulate sensor, Data bus diagnostic interface, Engine/motor control unit	370
21. Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Convenience system central control unit, Fuel pump control unit, Engine/motor control unit	371
22. Lambda probe 1 before catalytic converter, Lambda probe, Engine/motor control unit, Control unit for reducing agent metering system	372
23. Delivery unit for reducing agent metering system, Tank sender for reducing agent, Temperature sender for reducing agent, Pressure sender for reducing agent metering system, Control unit for reducing agent metering system, Injector for reducing agent	373
24. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Control unit for reducing agent metering system, Pump for reducing agent, Heater for reducing agent tank (heater circuit 1), Heater 2 for reducing agent tank (heater circuit 3)	374
25. Control unit for reducing agent metering system, Heater for reducing agent line (heater circuit 2)	375
018 - 7-speed dual clutch gearbox 0CK , (G1C),(G1D)	376-380
1. 7-speed dual clutch gearbox 0CK , (G1C),(G1D)	376
2. Gear selector movement sensor 2, Gear selector movement sensor 4, Automatic gearbox control unit, Mechatronic unit for dual clutch gearbox, Electric pump 2 for gearbox	377
3. Gearbox input speed sender 2, Automatic gearbox control unit, Mechatronic unit for dual clutch gearbox, Solenoid valve 4, Solenoid valve 5, Solenoid valve 6, Automatic gearbox pressure regulating valve 1	378
4. Selector lever, Selector lever position sender, Automatic gearbox control unit, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Parking lock solenoid, Selector lever position display	379
5. Selector lever, Button for selector lever release, Parking lock button, Parking lock indicator lamp, Motor for lateral selector lever lock	380
019 - Automatic gearbox , (G1G)	381-386
1. Automatic gearbox , (G1G)	381
2. Gearbox input speed sender, Gearbox output speed sender, Parking lock sender, Automatic gearbox control unit, Parking lock solenoid	382
3. Gearbox oil temperature sender, Temperature sender in control unit, Automatic gearbox control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1	383
4. Selector lever, Selector lever position sender, Selector lever sensors control unit, Selector lever position display	384
5. Selector lever, Button for selector lever release, Parking lock button, Parking lock indicator lamp, Selector lever lock solenoid, Motor for lateral selector lever lock	385
6.	386
020 - Electrically operated rear lid	387-390
1. Electrically operated rear lid	387
2. Button to close rear lid in luggage compartment, Rear lid warning buzzer, Rear lid control unit, Power latching motor for rear lid	388
3. Operating unit for rear lid control, Data bus diagnostic interface, Rear lid control unit, Rear lid drive unit	389
4. Convenience system central control unit, Rear lid control unit, Rear lid drive unit 2	390
021 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (8IH)	391-395
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light .	391

(8IH)	
2. Rear left vehicle level sender, Convenience system central control unit, Onboard supply control unit	392
3. Onboard supply control unit, Left light control unit, Left gas discharge (xenon) bulb, Left fog light bulb, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Front left side marker bulb, Left dip beam screen motor	393
4. Onboard supply control unit, Left light control unit, Right light control unit, Front left headlight, Front right headlight, Front right turn signal bulb, Left headlight range control motor, Right headlight range control motor	394
5. Onboard supply control unit, Right gas discharge (xenon) bulb, Right fog light bulb, Right LED module for daytime running light and side light, Front right headlight, Front right side marker bulb, Right dip beam screen motor	395
022 - LED headlights , (8G0),(8G1)	396-402
1. LED headlights , (8G0),(8G1)	396
2. Onboard supply control unit	397
3. Onboard supply control unit, Left light control unit, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Front left side marker bulb, Left headlight range control motor	398
4. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight, Left headlight dipped beam bulb	399
5. Onboard supply control unit, Right light control unit, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Front right side marker bulb, Right headlight range control motor	400
6. Output module 1 for right LED headlight, Onboard supply control unit, Front right headlight, Right static cornering light	401
7. Rear left vehicle level sender, Convenience system central control unit	402
023 - LED matrix beam headlights , (8G4)	403-409
1. LED matrix beam headlights , (8G4)	403
2. Onboard supply control unit	404
3. Output module 1 for left LED headlight, Onboard supply control unit, Left light control unit, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight range control motor	405
4. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight, Left headlight dipped beam bulb, Front camera for driver assist systems	406
5. Output module 1 for right LED headlight, Onboard supply control unit, Right light control unit, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight range control motor	407
6. Output module 1 for right LED headlight, Onboard supply control unit, Front right headlight, Right static cornering light	408
7. Rear left vehicle level sender, Convenience system central control unit	409
024 - Tail light clusters with LEDs , (5C0),(8SP)	410-413
1. Tail light clusters with LEDs , (5C0),(8SP)	410
2. Convenience system central control unit, Left tail light cluster, Right tail light cluster	411
3. Convenience system central control unit, Right tail light cluster, Left tail light cluster 2	412
4. Convenience system central control unit, Right tail light cluster 2	413
025 - Automatic anti-dazzle interior mirror	414-417
1. Automatic anti-dazzle interior mirror	414
2. Onboard supply control unit, Fuse 1 on fuse holder B	415
3. Rain and light sensor, Data bus diagnostic interface, Automatic anti-dazzle interior mirror	416
4. Rain and light sensor	417
026 - Air conditioning system , (9AK)	418-424
1. Air conditioning system , (9AK)	418
2. Operating and display unit for front air conditioning system, Fresh air blower control unit, Fresh air blower	419
3. Operating and display unit for front air conditioning system, High-pressure sender, Air quality sensor, Humidity sender in fresh air intake duct, Data bus diagnostic interface	420
4. Operating and display unit for front air conditioning system, Sunlight penetration photosensor, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender	421
5. Operating and display unit for front air conditioning system, Air recirculation flap control motor, Air distribution flap control motor, Fresh air flap control motor	422
6. Operating and display unit for front air conditioning system, Temperature flap control motor, Defroster flap control motor	423
7. Onboard supply control unit, Dash panel left vent illumination bulb, Dash panel right vent illumination bulb, Light for left air vent illumination, Light for right air vent illumination, Air conditioning system magnetic clutch. Air conditioner compressor regulating valve	424



027 - Air conditioning system , (9AQ)	425-434
1. Air conditioning system , (9AQ)	425
2. Operating and display unit for front air conditioning system, Fresh air blower control unit, Fresh air blower	426
3. Operating and display unit for front air conditioning system, High-pressure sender, Air quality sensor, Humidity sender in fresh air intake duct, Data bus diagnostic interface	427
4. Operating and display unit for front air conditioning system, Sunlight penetration photosensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor	428
5. Operating and display unit for front air conditioning system, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Air recirculation flap control motor, Fresh air flap control motor	429
6. Operating and display unit for front air conditioning system, Right temperature flap control motor, Right side vent control motor, Rear air distribution flap control motor	430
7. Operating and display unit for front air conditioning system, Defroster flap control motor, Left temperature flap control motor, Left side vent control motor	431
8. Operating and display unit for front air conditioning system, Operating and display unit for rear air conditioning system, Rear chest vent temperature sensor, Rear temperature flap control motor	432
9. Onboard supply control unit, Dash panel left vent illumination bulb, Light for left air vent illumination, Light for right air vent illumination	433
10. Onboard supply control unit, Air conditioning system magnetic clutch, Air conditioner compressor regulating valve	434
028 - Rear parking aid (PDC) , (7X1)	435-437
1. Rear parking aid (PDC) , (7X1)	435
2. Parking aid button, Operating unit 1 for driver and convenience functions, Rear parking aid warning buzzer, Onboard supply control unit	436
3. Rear left parking aid sender, Rear centre right parking aid sender, Onboard supply control unit	437
029 - Front and rear parking aid (PDC) , (7X2)	438-441
1. Front and rear parking aid (PDC) , (7X2)	438
2. Parking aid button, Operating unit 1 for driver and convenience functions, Rear parking aid warning buzzer, Front parking aid warning buzzer, Onboard supply control unit	439
3. Front right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Onboard supply control unit	440
4. Rear left parking aid sender, Rear centre right parking aid sender, Onboard supply control unit	441
030 - Parking aid (PDC) with park assist steering (Park Assist) , (7X5)	442-446
1. Parking aid (PDC) with park assist steering (Park Assist) , (7X5)	442
2. Parking aid button, Operating unit 1 for driver and convenience functions, Rear parking aid warning buzzer, Front parking aid warning buzzer, Onboard supply control unit	443
3. Front right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Onboard supply control unit	444
4. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Rear left park assist steering sender, Rear right park assist steering sender, Onboard supply control unit	445
5. Rear left parking aid sender, Rear centre right parking aid sender, Onboard supply control unit	446
031 - Reversing camera (Rear Assist) , (KA2)	447-448
1. Reversing camera (Rear Assist) , (KA2)	447
2. Reversing camera system control unit, Reversing camera	448
032 - Overhead view camera , (KA6)	449-453
1. Overhead view camera , (KA6)	449
2. Data bus diagnostic interface, Control unit for overhead view camera, Fuse carrier 3	450
3. Control unit for overhead view camera, Left overhead view camera	451
4. Control unit for overhead view camera, Right overhead view camera	452
5. Control unit for overhead view camera, Front overhead view camera, Rear overhead view camera	453
033 - Front camera for driver assist systems , (QK1)	454-455
1. Front camera for driver assist systems , (QK1)	454
2. Front camera for driver assist systems, Windscreen heater for front sensors	455
034 - Head-up display , (KS1)	456-457
1. Head-up display , (KS1)	456
2. Light switch, Switch for head-up display, Onboard supply control unit, Control unit for head-up display	457
035 - Lane change assist , (7Y1)	458-461
1. Lane change assist , (7Y1)	458
2. Lane change assist control unit	459
3. Lane change assist control unit 2	460
4. Driver side exterior mirror, Passenger side exterior mirror	461
036 - Adaptive cruise control , (8T3),(8T8)	462-463
1. Adaptive cruise control . (8T3).(8T8)	462

2. Adaptive cruise control unit, Control unit 2 for adaptive cruise control	463
037 - Trailer coupling , (1D4),(1D8),(1D9)	464-468
1. Trailer coupling , (1D4),(1D8),(1D9)	464
2. Trailer detector control unit	465
3. Towing bracket release button, Trailer detector control unit	466
4. Trailer detector control unit, Trailer socket	467
5. Trailer articulation angle sensor, Trailer detector control unit, Hinged tow attachment ball head motor	468
038 - Entry and start authorisation , (2F0)	469-473
1. Entry and start authorisation , (2F0)	469
2. Convenience system central control unit, Onboard supply control unit, Fuse holder C	470
3. Entry and start authorisation button, Convenience system central control unit, Control unit for electronic steering column lock	471
4. Convenience system central control unit, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Left aerial for entry and start authorisation	472
5. Convenience system central control unit, Data bus diagnostic interface, Right aerial for entry and start authorisation	473
039 - Garage door opener , (VC1),(VC2)	474-475
1. Garage door opener , (VC1),(VC2)	474
2. Garage door operating unit, Garage door opener button 1, Garage door operation control unit	475
040 - Sliding sunroof (open-sky system) , (3FB),(3FE),(3FU)	476-478
1. Sliding sunroof (open-sky system) , (3FB),(3FE),(3FU)	476
2. Sunroof button, Sliding sunroof adjustment control unit	477
3. Sliding sunroof adjustment control unit, Sliding sunroof motor, Sunroof roller blind motor	478
041 - Auxiliary heater , (9M1),(9M5),(9M9)	479-482
1. Auxiliary heater , (9M1),(9M5),(9M9)	479
2. Auxiliary heater control unit, Heater coolant shut-off valve	480
3. Auxiliary heater control unit, Remote control receiver for auxiliary heater	481
4. Remote control receiver for auxiliary heater, Auxiliary heater aerial, Roof aerial, Metering pump	482
042 - Radio , (I7Y)	483-498
1. Radio , (I7Y)	483
2. Driver side volume regulator, Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	484
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	485
4. Control unit 1 for information electronics, Rear left treble loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	486
5. Control unit 1 for information electronics, Rear right treble loudspeaker	487
6. Data bus diagnostic interface, Control unit 1 for information electronics, Rear right bass loudspeaker	488
7. Data bus diagnostic interface, Control unit 1 for information electronics, Loudspeaker for emergency call module	489
8. Control unit 1 for information electronics	490
9. Control unit 1 for information electronics, Front left microphone, Front right microphone, Microphone unit in front roof module	491
10. Control unit 1 for information electronics	492
11. Control unit 1 for information electronics, Aerial amplifier 2	493
12. Control unit 1 for information electronics, Aerial amplifier 2	494
13. Control unit 1 for information electronics, Aerial amplifier, Emergency call module aerial	495
14. Control unit 1 for information electronics, Connection for external audio sources	496
15. Rear left bass loudspeaker, Telephone bracket	497
16. Control unit for seat belt microphone, Aerial amplifier for mobile telephone, Telephone bracket	498
043 - MMI with radio , (I8E),(I8S)	499-519
1. MMI with radio , (I8E),(I8S)	499
2. Driver side volume regulator, Multimedia system operating unit, Multimedia system button module, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	500
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Front left bass loudspeaker	501
4. Control unit 1 for information electronics, Rear left treble loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	502
5. Control unit 1 for information electronics, Rear right treble loudspeaker, Centre loudspeaker	503
6. Data bus diagnostic interface, Control unit 1 for information electronics, Rear right bass loudspeaker, Front left treble loudspeaker	504
7. Control unit in dash panel insert, Data bus diagnostic interface, Control unit 1 for information electronics. TV tuner	505

8. Control unit 1 for information electronics, Subwoofer	506
9. Control unit 1 for information electronics, Telephone microphone, Front left microphone, Front right microphone, Microphone unit in front roof module	507
10. Control unit 1 for information electronics	508
11. Control unit 1 for information electronics	509
12. Control unit 1 for information electronics	510
13. Control unit 1 for information electronics, Aerial amplifier 2	511
14. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 2	512
15. Control unit 1 for information electronics, Aerial amplifier	513
16. Onboard supply control unit, Control unit 1 for information electronics, Connection for external audio sources	514
17. Control unit 1 for information electronics, Connection for external audio sources	515
18. Airbag control unit, Rear left bass loudspeaker	516
19. Control unit for seat belt microphone, Microphone 1 on driver side, Microphone 2 on driver side, Microphone 3 on driver side, Microphone 1 on front passenger side, Microphone 2 on front passenger side, Microphone 3 on front passenger side	517
20. Control unit for seat belt microphone, Satellite tuner aerial, Roof aerial, LTE aerial 1	518
21. Aerial amplifier 3	519
044 - MMI navigation plus , (I8H)	520-542
1. MMI navigation plus , (I8H)	520
2. Driver side volume regulator, Multimedia system operating unit, Multimedia system button module, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	521
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	522
4. Control unit 1 for information electronics, Rear left treble loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	523
5. Control unit 1 for information electronics, Rear right treble loudspeaker, Centre loudspeaker	524
6. Control unit 1 for information electronics, Rear left bass loudspeaker, Rear right bass loudspeaker	525
7. Data bus diagnostic interface, Control unit 1 for information electronics, Rear left bass loudspeaker	526
8. Control unit in dash panel insert, Data bus diagnostic interface, Control unit 1 for information electronics, TV tuner, Subwoofer	527
9. Control unit 1 for information electronics	528
10. Control unit 1 for information electronics, Telephone microphone, Front left microphone, Front right microphone, Microphone unit in front roof module	529
11. Control unit 1 for information electronics, Traffic data aerial, LTE aerial 2	530
12. Control unit 1 for information electronics, LTE aerial 1	531
13. Control unit 1 for information electronics	532
14. Control unit 1 for information electronics, GPS aerial	533
15. Control unit 1 for information electronics, Aerial amplifier 2	534
16. Control unit 1 for information electronics, Aerial amplifier	535
17. Onboard supply control unit, Control unit 1 for information electronics, Connection for external audio sources	536
18. Chip card reader control unit, Control unit 1 for information electronics, Connection for external audio sources	537
19. Chip card reader control unit, Connection for external audio sources, Dedicated short-range communication aerial	538
20. GPS aerial, Satellite tuner aerial, Roof aerial	539
21. Control unit for seat belt microphone, Microphone 1 on driver side, Microphone 2 on driver side, Microphone 3 on driver side	540
22. Control unit for seat belt microphone, Microphone 1 on front passenger side, Microphone 2 on front passenger side, Microphone 3 on front passenger side	541
23. Airbag control unit, Loudspeaker for emergency call module	542
045 - Bang & Olufsen sound system , (9VS)	543-553
1. Bang & Olufsen sound system , (9VS)	543
2. Digital sound package control unit, Left effect loudspeaker	544
3. Digital sound package control unit, Subwoofer, Front right treble loudspeaker 2, Rear left subwoofer, Rear right subwoofer	545
4. Digital sound package control unit, Subwoofer	546
5. Digital sound package control unit, Front left treble loudspeaker, Subwoofer, Front left treble loudspeaker 2	547
6. Digital sound package control unit, Front right treble loudspeaker, Centre loudspeaker, Centre loudspeaker 2, Front left mid-range loudspeaker 2, Front right mid-range loudspeaker 2	548
7. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker	549

8. Digital sound package control unit, Microphone unit in front roof module, Right effect loudspeaker	550
9. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics, Rear right treble loudspeaker	551
10. Digital sound package control unit, Rear right bass loudspeaker	552
11. Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	553
046 - TV tuner , (QU1),(QV1)	554-556
1. TV tuner , (QU1),(QV1)	554
2. TV aerial 2, TV tuner, Aerial amplifier 2 for TV	555
3. Aerial amplifier, TV aerial 1, TV tuner, Aerial amplifier 1 for TV, Aerial amplifier 3 for TV	556
047 - Seat heating , (4A3),(4A4)	557-565
1. Seat heating , (4A3),(4A4)	557
2. Operating and display unit for front air conditioning system, Button for left seat heating, Onboard supply control unit, Relay and fuse carrier 1	558
3. Front left seat temperature sender, Heated seat cushion for front left seat, Heated backrest for front left seat, Left bolster heater for front left seat, Right bolster heater for front left seat	559
4. Left bolster heater for front right seat, Right bolster heater for front right seat, Heater element for front left seat extension	560
5. Heated backrest for front right seat, Heater element for front right seat extension	561
6. Front right seat temperature sender, Relay and fuse carrier 2, Heated seat cushion for front right seat	562
7. Operating and display unit for rear air conditioning system, Button for rear left seat heating, Button for rear right seat heating, Data bus diagnostic interface	563
8. Rear left seat temperature sensor, Heated bench seat cushion for rear left seat, Heated backrest for rear left seat	564
9. Rear right seat temperature sensor, Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	565
048 - Seat ventilation , (4D3),(L0L)	566-569
1. Seat ventilation , (4D3),(L0L)	566
2. Onboard supply control unit, Relay and fuse carrier 1	567
3. Operating and display unit for front air conditioning system, Seat ventilation switch, Seat ventilation switch 2, Data bus diagnostic interface, Front left seat backrest fan 1, Front left seat cushion fan 1	568
4. Front right seat backrest fan 1, Front right seat cushion fan 1, Earth connection 1, in main wiring harness, Earth point 1, on right rear wheel housing	569
049 - Adjustable driver and front passenger seats , (3L5),(7P1),(7P7)	570-575
1. Adjustable driver and front passenger seats , (3L5),(7P1),(7P7)	570
2. Driver seat adjustment operating unit, Driver seat adjustment thermal fuse 1, Coupling point for front left seat	571
3. Driver seat adjustment operating unit, Driver seat backrest adjustment motor	572
4. Front passenger seat adjustment operating unit, Coupling point for front right seat	573
5. Front passenger seat adjustment operating unit, Switch module for front passenger seat, Lumbar support for front passenger seat, Front passenger seat backrest adjustment motor	574
6. Airbag control unit	575
050 - Seat and mirror adjustment with memory function , (3L4)	576-582
1. Seat and mirror adjustment with memory function , (3L4)	576
2. Driver seat memory function button, Control unit for seat and steering column adjustment with memory function, Driver door control unit	577
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat height adjustment motor	578
4. Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat rake adjustment motor	579
5. Switch module for driver seat, Lumbar support for driver seat	580
6. Front passenger seat adjustment operating unit, Coupling point for front right seat	581
7. Front passenger seat adjustment operating unit, Switch module for front passenger seat, Lumbar support for front passenger seat, Front passenger seat backrest adjustment motor	582
051 - Heater , (9AC)	583-589
1. Heater , (9AC)	583
2. Heater control unit, Fresh air blower control unit, Fresh air blower	584
3. Sunlight penetration photosensor, Air quality sensor, Left footwell vent temperature sender, Right footwell vent temperature sender, Humidity sender in fresh air intake duct, Heater control unit, Data bus diagnostic interface	585
4. Evaporator output temperature sender, Heater control unit, Air recirculation flap control motor, Rear air distribution flap control motor. Fresh air flap control motor	586



5. Heater control unit, Defroster flap control motor, Right temperature flap control motor, Right side vent control motor	587
6. Heater control unit, Rear temperature flap control motor, Left temperature flap control motor, Left side vent control motor	588
7. Onboard supply control unit, Dash panel left vent illumination bulb, Dash panel right vent illumination bulb, Light for left air vent illumination, Light for right air vent illumination	589
052 - All-wheel drive , (GH2)	590-592
1. All-wheel drive , (GH2)	590
2. Oil pressure and oil temperature sender, Differential lock control unit, Onboard supply control unit, Data bus diagnostic interface	591
3. Oil pressure and oil temperature sender 2, Differential lock control unit, Clutch valve for all-wheel drive, Clutch valve 2 for all-wheel drive, All-wheel drive pump	592
053 - Auxiliary air heater (PTC) , (7E6)	593-594
1. Auxiliary air heater (PTC) , (7E6)	593
2. Low heat output relay, High heat output relay, Onboard supply control unit, Relay and fuse carrier 4	594
054 - Multifunction steering wheel	595-600
1. Multifunction steering wheel	595
2. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit, Data bus diagnostic interface, Fuse holder C	596
3. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	597
4. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit	598
5. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift down), Multifunction steering wheel control unit, Control unit for steering wheel contact detection	599
6. Tiptronic switch (shift up), Multifunction steering wheel control unit	600
055 - Infotainment MOST bus	601-603
1. Infotainment MOST bus	601
2. Connection (diagnosis), in interior wiring harness, Connection 1 (diagnosis), in main wiring harness	602
3. Connection 1 (diagnosis), in main wiring harness	603
056 - 2.0l petrol engine , CYMC	604-627
1. 2.0l petrol engine , CYMC	604
2. Battery, Starter, Alternator, Fuses in fuse holder, Coupling point in engine compartment, right	605
3. Fuse holder A, Jump start socket, Radiator fan	606
4. Starter relay 1, Starter relay 2, Fuse holder A, Relay and fuse carrier 3	607
5. Main relay, Engine component power supply relay, Relay and fuse carrier 1, Relay and fuse carrier 3, Fuse (50), Coolant circulation pump	608
6. Relay and fuse carrier 1	609
7. Terminal 15 voltage supply relay, Relay and fuse carrier 1	610
8. Engine/motor control unit	611
9. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Continued coolant circulation pump	612
10. Oil level and oil temperature sender, Engine/motor control unit	613
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	614
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Actuator for engine temperature regulation	615
13. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Charge pressure positioner	616
14. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve	617
15. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Intake manifold pressure sender, Engine/motor control unit	618
16. Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine speed sender, Coolant temperature sender, Hall sender 3, Engine/motor control unit	619
17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Throttle valve module, Knock sensor 1, Engine/motor control unit	620
18. Charge pressure sender, Radiator outlet coolant temperature sender, Gear detection sensor, Engine/motor control unit, Fuel metering valve	621
19. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Sender 2 for secondary air pressure, Engine/motor control unit, Secondary air inlet valve, Lambda probe heater, Lambda probe 1 heater after catalytic converter	622
20. Brake light switch. Clutch pedal switch. Clutch pedal switch for engine start. Clutch position	623

sender, Engine/motor control unit	
21. Tank pressure sensor, Data bus diagnostic interface, Engine/motor control unit, Control unit for fuel tank leak detection, Relay and fuse carrier 2	624
22. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit	625
23. Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Mechatronic unit for dual clutch gearbox, Coolant shut-off valve, Air conditioner compressor regulating valve	626
24. Control unit in dash panel insert	627
057 - Airbag systems (US equipment)	628-639
1. Airbag systems (US equipment)	628
2. Coil connector, Airbag control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag, Fuses in fuse holder	629
3. Rear belt switch, driver side, Rear belt switch, passenger side, Airbag control unit, Front passenger airbag unit	630
4. Front passenger side belt switch, Rear belt switch, passenger side, Twin belt buckle, Front passenger side seat position sensor, Airbag control unit, Side airbag igniter on front passenger side	631
5. Airbag control unit, Seat occupied recognition control unit	632
6. Airbag control unit, Rear belt tensioner igniter on driver side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	633
7. Driver side belt force limiter, Airbag control unit, Front left seat belt, Driver seat belt tensioner igniter 1, Rear belt tensioner igniter on passenger side	634
8. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Front passenger side belt force limiter, Driver side crash sensor 2 for pedestrian protection, Airbag control unit, Front right seat belt, Front passenger seat belt tensioner igniter 1	635
9. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Centre crash sensor for pedestrian protection, Front passenger side crash sensor 2 for pedestrian protection, Airbag control unit	636
10. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Centre crash sensor for pedestrian protection, Airbag control unit, Driver side knee airbag igniter, Front passenger side knee airbag igniter	637
11. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	638
12. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Side airbag igniter on driver side	639
058 - Tail light clusters with LEDs, only models with US equipment , (5C1),(8SP)	640-642
1. Tail light clusters with LEDs, only models with US equipment , (5C1),(8SP)	640
2. Convenience system central control unit, Left tail light cluster, Right tail light cluster	641
3. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	642
059 - 3.0l petrol engine , CWGD	643-667
1. 3.0l petrol engine , CWGD	643
2. Battery, Starter, Alternator, Fuses in fuse holder, Coupling point in engine compartment, right	644
3. Suppression capacitor, Fuse holder A, Jump start socket, Radiator fan	645
4. Starter relay 1, Starter relay 2, Relay and fuse carrier 3, Fuse (50)	646
5. Main relay, Engine component power supply relay, Relay and fuse carrier 1, Relay and fuse carrier 2	647
6. Relay and fuse carrier 1	648
7. Terminal 15 voltage supply relay, Relay and fuse carrier 1	649
8. Engine/motor control unit	650
9. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	651
10. Oil level and oil temperature sender, Engine/motor control unit	652
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	653
12. Engine/motor control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Spark plug 4, Spark plug 5, Spark plug 6	654
13. Coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	655
14. Hall sender, Engine outlet coolant temperature sender, Hall sender 3, Hall sender 4, Temperature sender for engine temperature regulation, Engine/motor control unit	656
15. Engine/motor control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2. Overrun air recirculation valve for bank 1	657

16. Inlet cam actuator 1 for cylinder 1, Inlet cam actuator 1 for cylinder 2, Inlet cam actuator 1 for cylinder 3, Inlet cam actuator 1 for cylinder 4, Inlet cam actuator 1 for cylinder 5, Inlet cam actuator 1 for cylinder 6, Engine/motor control unit	658
17. Map-controlled engine cooling system thermostat, Oil temperature sender, Engine speed sender, Engine/motor control unit, Valve for oil pressure control, Switch valve for mechanical coolant pump, Continued coolant circulation pump	659
18. Throttle valve module, Knock sensor 1, Knock sensor 2, Hall sender 2, Engine/motor control unit	660
19. Oil pressure sender, Charge pressure sender, Intake manifold pressure sender, Temperature sender for engine cover panel, Engine/motor control unit, Fuel metering valve	661
20. Radiator outlet coolant temperature sender, Fuel pressure sender, Fuel pressure sender for low pressure, Tank breather pressure sensor 1, Engine/motor control unit, Coolant valve for cylinder head	662
21. Oil pressure switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Coolant circulation pump, Lambda probe heater, Lambda probe 1 heater after catalytic converter	663
22. Brake light switch, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	664
23. Tank pressure sensor, Data bus diagnostic interface, Engine/motor control unit, Control unit for fuel tank leak detection	665
24. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit	666
25. Coolant shortage indicator sender, Automatic gearbox control unit, Control unit in dash panel insert, Onboard supply control unit, Coolant shut-off valve, Air conditioner compressor regulating valve	667
060 - 3.0l diesel engine , DCPC,DCPE	668-693
1. 3.0l diesel engine , DCPC,DCPE	668
2. Battery, Starter, Alternator, Battery monitor control unit, Battery isolation igniter, Fuses in fuse holder	669
3. Suppression capacitor, Fuse holder A, Relay and fuse carrier 3, Jump start socket, Radiator fan	670
4. Main relay, Starter relay 1, Starter relay 2, Relay and fuse carrier 1, Fuse carrier 1, Relay and fuse carrier 3	671
5. Relay and fuse carrier 1, Fuse carrier 1	672
6. Terminal 15 voltage supply relay, Relay and fuse carrier 1	673
7. Automatic glow period control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	674
8. Air mass meter, Exhaust gas temperature sender 4, Engine/motor control unit	675
9. Charge air temperature sender after charge air cooler, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Air filter bypass flap valve	676
10. Engine/motor control unit, Coolant valve for cylinder head	677
11. Coolant shortage indicator sender, Oil level and oil temperature sender, Sender 1 for turbocharger speed, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor regulating valve	678
12. Accelerator pedal module, Exhaust gas recirculation valve 2, Engine/motor control unit	679
13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Exhaust gas recirculation cooler changeover valve, Coolant circulation pump	680
14. Throttle valve module, Intake manifold flap control unit, Engine/motor control unit, Injector, cylinder 5, Injector, cylinder 6	681
15. Charge pressure sender, Fuel pressure sender, Fuel pressure sender for low pressure, Engine/motor control unit, Turbocharger 1 control unit	682
16. Exhaust gas recirculation valve 1, Coolant temperature sender, Fuel temperature sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	683
17. Oil pressure sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Pressure differential sender 2, Engine/motor control unit	684
18. Hall sender, Intake air temperature sender, Pressure differential sender, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit, Valve for oil pressure control	685
19. Exhaust cam actuator 1 for cylinder 1, Exhaust cam actuator 1 for cylinder 2, Exhaust cam actuator 1 for cylinder 3, Exhaust cam actuator 1 for cylinder 4, Exhaust cam actuator 1 for cylinder 5, Engine speed sender, Engine/motor control unit	686
20. Exhaust cam actuator 1 for cylinder 6, Control unit for NOx sender, Engine/motor control unit, Control unit for NOx sender 2	687
21. NOx sender, Particulate sensor, Data bus diagnostic interface, Control unit for NOx sender, Engine/motor control unit	688
22. Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Convenience system central control unit, Fuel pump control unit, Engine/motor control unit	689
23. Brake light switch. Lambda probe 1 before catalytic converter. Lambda probe. Convenience system	690

central control unit, Engine/motor control unit, Exhaust flap control unit	
24. Control unit for reducing agent metering system, Injector for reducing agent	691
25. Delivery unit for reducing agent metering system, Tank sender for reducing agent, Temperature sender for reducing agent, Pressure sender for reducing agent metering system, Control unit for reducing agent metering system, Pump for reducing agent, Heater for reducing agent tank (heater circuit 1)	692
26. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Control unit for reducing agent metering system, Heater for reducing agent line (heater circuit 2), Heater 2 for reducing agent tank (heater circuit 3)	693
061 - All-wheel drive , (GH4)	694-696
1. All-wheel drive , (GH4)	694
2. Clutch position sender for all-wheel drive, Propshaft speed sender, All-wheel drive control unit, Onboard supply control unit, Data bus diagnostic interface, Clutch actuator 2 for all-wheel drive	695
3. Power steering control unit, Mechatronic unit for dual clutch gearbox	696
062 - Heated windscreen , (0K0),(0K4),(4GR),(4GY)	697-699
1. Heated windscreen , (0K0),(0K4),(4GR),(4GY)	697
2. Heated windscreen relay, Relay and fuse carrier 1, Relay and fuse carrier 2	698
3. Heated windscreen relay for left side, Heated windscreen relay for right side, Relay and fuse carrier 2, Heated windscreen	699
063 - Driving school , (F5F)	700-702
1. Driving school , (F5F)	700
2. Driving school mode relay, Relay and fuse carrier 1	701
3. Footwell light switch, Warning buzzer switch, Driving school mode warning buzzer, Driving school mode relay, Warning lamp, Driving school vehicle footwell illumination	702
064 - Preparation for driving aids for disabled persons , (F6M)	703-706
1. Preparation for driving aids for disabled persons , (F6M)	703
2. Special vehicle control unit, Relay and fuse carrier 1	704
3. Button for driving aids for disabled persons, Special vehicle control unit	705
4. Special vehicle control unit	706
065 - Preparation for multimedia system , (9WM)	707-710
1. Preparation for multimedia system , (9WM)	707
2. Rear left information display and operating unit control unit, Coupling point for front left seat, Multimedia system display unit 4	708
3. Rear right information display and operating unit control unit, Coupling point for front right seat, Multimedia system display unit 3	709
4. Control unit 1 for information electronics	710
066 - Electromechanical steering, right-hand drive , (1N8),(L0R),(QZ7)	711-715
1. Electromechanical steering, right-hand drive , (1N8),(L0R),(QZ7)	711
2. Steering moment sender, Power steering control unit, Electromechanical power steering motor	712
3. Data bus diagnostic interface, Electromechanical power steering warning lamp	713
4. Rotor position sender for active steering motor, Data bus diagnostic interface, Active steering control unit, Active steering motor	714
5. Active steering safety lock actuator, Active steering control unit, Active steering motor	715
067 - Tail light clusters with LEDs, only models with US equipment , (5C1),(8SP),(8SS)	716-718
1. Tail light clusters with LEDs, only models with US equipment , (5C1),(8SP),(8SS)	716
2. Convenience system central control unit, Left tail light cluster, Right tail light cluster	717
3. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	718
068 - Data bus network (FlexRay bus)	719-725
1. Data bus network (FlexRay bus)	719
2. ABS control unit, Airbag control unit, Adaptive cruise control unit, Data bus diagnostic interface, Engine/motor control unit, Control unit 2 for adaptive cruise control, Front camera for driver assist systems	720
3. Steering column electronics control unit, Data bus diagnostic interface, Running gear control unit	721
4. Differential lock control unit, Data bus diagnostic interface, Active steering control unit	722
5. Power steering control unit, Data bus diagnostic interface, Control unit 1 for information electronics	723
6. All-wheel drive control unit, Digital sound package control unit, Mechatronic unit for dual clutch gearbox, Control unit 1 for information electronics	724
7. Automatic gearbox control unit	725
069 - Emergency call module , (IV0),(IW1),(IW3),(IW5)	726-731
1. Emergency call module , (IV0),(IW1),(IW3),(IW5)	726
2. Data bus diagnostic interface, Control unit 1 for information electronics, Front left microphone, Microphone unit in front roof module, Fuse holder C	727
3. Data bus diagnostic interface, Control unit 1 for information electronics, Telephone microphone, Front right microphone. Microphone unit in front roof module	728



4. Airbag control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Loudspeaker for emergency call module	729
5. Data bus diagnostic interface, GPS aerial, Roof aerial, Emergency call module aerial, Emergency call module aerial 2	730
6. Data bus diagnostic interface, Control unit for seat belt microphone	731
070 - Special equipment, public authority vehicle , (F6F)	732-748
1. Special equipment, public authority vehicle , (F6F)	732
2. Battery, Second battery, Fuses in fuse holder, Relay and fuse carrier 2, Fuse carrier 6, Fuse 4 (30), in battery fuse holder, 12 V socket, 12 V socket 2, 12 V socket 3	733
3. Special vehicle control unit, Relay and fuse carrier 2, Fuse carrier 6	734
4. Button 1 for in-car video surveillance, Button 2 for in-car video surveillance, Battery isolation relay, Special vehicle control unit	735
5. Interior lighting central switch button, Ignition bypass button, Special vehicle control unit	736
6. Rotating light and siren system switch, Flashing light switch, Main switch for 2-way radio, Special vehicle control unit	737
7. Two-way radio voltage relay, Special vehicle fuse 1, Special vehicle fuse 2	738
8. Button for daytime running light switch-off, Two-way radio voltage relay	739
9. Two-way radio voltage relay 2	740
10. Two-way radio voltage relay 2	741
11. 2-way radio unit microphone	742
12. Coupling point in interior, Coupling point in interior, right	743
13. Special vehicle resource assist, Coupling point in interior, Coupling point in interior, right	744
14. Special vehicle resource assist, Connection for special vehicle resource assist	745
15. Battery charger, 230 or 110 Volt/12 Volt, Special vehicle resource assist, Connection for special vehicle resource assist	746
16. Accident data memory button, Operating unit for special signal system, Accident data memory	747
17. Interface for CiA MIB CAN bus, special vehicle interface	748
071 - Special equipment, public authority vehicle , (F4Z)	749-764
1. Special equipment, public authority vehicle , (F4Z)	749
2. Fuses in fuse holder, Relay and fuse carrier 2, Fuse carrier 6, Fuse 4 (30), in battery fuse holder, 12 V socket, 12 V socket 2, 12 V socket 3	750
3. Special vehicle control unit, Relay and fuse carrier 2, Fuse carrier 6	751
4. Button 1 for in-car video surveillance, Button 2 for in-car video surveillance, Battery isolation relay, Special vehicle control unit	752
5. Interior lighting central switch button, Ignition bypass button, Special vehicle control unit	753
6. Rotating light and siren system switch, Flashing light switch, Main switch for 2-way radio, Special vehicle control unit	754
7. Centre left microphone, Special vehicle fuse 1, Special vehicle fuse 2	755
8. Two-way radio voltage relay	756
9.	757
10. Centre left microphone	758
11. Two-way radio voltage relay 2, Centre left microphone	759
12. Centre left microphone	760
13. Battery charger, 230 or 110 Volt/12 Volt, Button for daytime running light switch-off	761
14. Battery charger, 230 or 110 Volt/12 Volt	762
15. Accident data recorder button, Operating unit for special signal system, Accident data memory	763
16. Interface for CiA MIB CAN bus, special vehicle interface	764
072 - Adjustable lumbar support with no electric adjustable seat , (7P1),(7P7)	765-767
1. Adjustable lumbar support with no electric adjustable seat , (7P1),(7P7)	765
2. Front left lumbar support adjustment switch, Fuse 3 on fuse holder B	766
3. Front right lumbar support adjustment switch	767
073 - Tyre Pressure Monitoring System , (7K3),(7K4)	768-769
1. Tyre Pressure Monitoring System , (7K3),(7K4)	768
2. Front left tyre pressure sensor, Rear right tyre pressure sensor, Tyre Pressure Monitoring System control unit	769
074 - Basic equipment , (L0L)	770-793
1. Basic equipment , (L0L)	770
2. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Horn plate, Steering column electronics control unit, Fuse holder C	771
3. Relay and fuse carrier 1, Coupling point on left A-pillar, bottom	772
4. Relay and fuse carrier 1, Diagnostic connection	773
5. Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	774
6. Light switch, Onboard supply control unit	775
7. Hazard warning lights button, Operating unit 1 for driver and convenience functions, Onboard supply control unit	776
8. Treble horn. Bass horn. Wiper motor control unit. Onboard supply control unit. Windscreen wiper	777

motor, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	
9. Front left brake pad wear sender, Front right brake pad wear sender, Rear right brake pad wear sender, Rain and light sensor, Onboard supply control unit, Washer pump	778
10. Glove compartment light switch, Onboard supply control unit, Valet parking warning lamp, Switch illumination bulb, Glove compartment light	779
11. Brake fluid level warning contact, Bonnet contact switch, Bonnet contact switch 2, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit	780
12. Heated rear window relay, Onboard supply control unit, Relay and fuse carrier 2	781
13. Convenience system central control unit, Relay and fuse carrier 2	782
14. Rear lid handle release button, Rear lid contact switch for anti-theft alarm, Convenience system central control unit, Rear lid central locking motor, Tank filler flap locking motor, Number plate light, Left number plate light, Right number plate light	783
15. Suppression capacitor for heated rear window, Convenience system central control unit, Left luggage compartment light, Right luggage compartment light, Rear lid light	784
16. Window aerial suppression filter, Brake light switch, Convenience system central control unit, Heated rear window	785
17. Convenience system central control unit, Left tail light cluster, Right tail light cluster	786
18. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	787
19. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Convenience system central control unit, High-level brake light bulb, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	788
20. Rear vent illumination bulb, Cigarette lighter, 12 V socket, 12 V socket 2, 12 V socket 3	789
21. Front left reading light button, Front right reading light button, Warning lamp for airbag deactivated on front passenger side, Rear interior light, Front roof module, Front left reading light, Front right reading light	790
22. Dash panel insert operating button, Control unit in dash panel insert, Display in dash panel insert	791
23. Control unit in dash panel insert, Control unit 1 for information electronics	792
24. Data bus diagnostic interface	793
075 - Basic equipment, right-hand drive , (LOR)	794-817
1. Basic equipment, right-hand drive , (LOR)	794
2. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Horn plate, Steering column electronics control unit, Fuse holder C	795
3. Relay and fuse carrier 1, Coupling point on left A-pillar, bottom	796
4. Relay and fuse carrier 1, Diagnostic connection	797
5. Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	798
6. Light switch, Onboard supply control unit	799
7. Hazard warning lights button, Operating unit 1 for driver and convenience functions, Onboard supply control unit	800
8. Treble horn, Bass horn, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	801
9. Front left brake pad wear sender, Front right brake pad wear sender, Rear right brake pad wear sender, Rain and light sensor, Onboard supply control unit, Washer pump	802
10. Glove compartment light switch, Onboard supply control unit, Valet parking warning lamp, Switch illumination bulb, Glove compartment light	803
11. Brake fluid level warning contact, Bonnet contact switch, Bonnet contact switch 2, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit	804
12. Heated rear window relay, Onboard supply control unit, Relay and fuse carrier 2	805
13. Convenience system central control unit, Relay and fuse carrier 2	806
14. Rear lid handle release button, Rear lid contact switch for anti-theft alarm, Convenience system central control unit, Rear lid central locking motor, Tank filler flap locking motor, Number plate light, Left number plate light, Right number plate light	807
15. Suppression capacitor for heated rear window, Convenience system central control unit, Left luggage compartment light, Right luggage compartment light, Rear lid light	808
16. Window aerial suppression filter, Brake light switch, Convenience system central control unit, Heated rear window	809
17. Convenience system central control unit, Left tail light cluster, Right tail light cluster	810
18. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	811
19. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Convenience system central control unit, High-level brake light bulb, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	812
20. Rear vent illumination bulb, Cigarette lighter, 12 V socket, 12 V socket 2, 12 V socket 3	813
21. Front left reading light button, Front right reading light button, Warning lamp for airbag deactivated on front passenger side. Rear interior light. Front roof module. Front left reading	814

light, Front right reading light	
22. Dash panel insert operating button, Control unit in dash panel insert, Display in dash panel insert	815
23. Control unit in dash panel insert, Control unit 1 for information electronics	816
24. Data bus diagnostic interface	817
076 - Convenience system , (L0L)	818-850
1. Convenience system , (L0L)	818
2. Convenience system central control unit, Relay and fuse carrier 2	819
3. Interior monitoring sensor, Vehicle inclination sender, Anti-theft alarm sensor, Alarm horn, Convenience system central control unit	820
4. Rear lid handle release button, Convenience system central control unit, Rear lid central locking motor, Left number plate light, Right number plate light	821
5. Convenience system central control unit, Rear lid power opening control unit	822
6. Rear lid power opening sender, Rear lid power opening sender 2, Convenience system central control unit, Rear lid power opening control unit	823
7. Convenience system central control unit	824
8. Relay and fuse carrier 1	825
9. Onboard supply control unit, Rear left footwell light	826
10. Onboard supply control unit, Rear right footwell light	827
11. Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting, Light for cup holder background lighting, Light 2 for cup holder background lighting	828
12. Onboard supply control unit, Light 2 for front centre console background lighting	829
13. Onboard supply control unit, Front left footwell light, Front right footwell light	830
14. Coupling point for front left door	831
15. Driver door control unit, Coupling point for front left door, Light for sill panel moulding background lighting, driver side	832
16. Driver exterior door handle switch, Contact sensor for front left exterior door handle, Driver door control unit, Light for exterior door handle illumination, driver side, Driver door lock unit	833
17. Rear lid remote release button, Driver side interior locking button for central locking system, Driver operating unit for memory settings, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit	834
18. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	835
19. Mirror adjustment switch, Mirror adjustment changeover switch, Driver door control unit, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Light for driver door background lighting, Driver side entry light	836
20. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side exterior mirror, Exit warning lamp, driver side	837
21. Driver door control unit, Light for front left door contour lighting, Light for left door storage compartment illumination, Coupling point in front left door, Driver side exterior mirror	838
22. Light 1 for front left door background lighting, Light for front left door contour lighting, Coupling point for front right door	839
23. Front passenger door control unit, Coupling point for front right door, Light for sill panel moulding background lighting, front passenger side	840
24. Front passenger exterior door handle switch, Front passenger door control unit, Front passenger door lock unit	841
25. Front passenger operating unit for memory settings, Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	842
26. Front passenger side interior locking button for central locking system, Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Light for passenger door background lighting, Passenger side entry light, Exit warning lamp, front passenger side	843
27. Front passenger door control unit, Passenger side exterior mirror	844
28. Front passenger door control unit, Light 1 for front right door background lighting, Light for front right door contour lighting, Light for right door storage compartment illumination, Coupling point in front right door, Passenger side exterior mirror	845
29. Left ultrasonic sensor for passenger compartment monitoring system, rear, Convertible roof actuation control unit, Light 1 for rear left door background lighting, Coupling point in rear left wheel housing wiring	846
30. Light 1 for rear left door background lighting, Light for rear left door storage compartment illumination, Coupling point in rear left wheel housing wiring, Driver side belt feeder motor	847
31. Right ultrasonic sensor for passenger compartment monitoring system, rear, Coupling point in rear left wheel housing wiring, Coupling point in rear right wheel housing wiring, Rear driver side window regulator motor, Rear passenger side window regulator motor, Driver side belt feeder motor	848
32. Light 1 for rear right door background lighting. Light for rear right door storage compartment	849

illumination, Coupling point in rear right wheel housing wiring	850
33. Light for rear right door storage compartment illumination, Coupling point in rear right wheel housing wiring, Front passenger side belt feeder motor	851-884
077 - Convenience system, right-hand drive , (LOR)	851
1. Convenience system, right-hand drive , (LOR)	852
2. Convenience system central control unit, Relay and fuse carrier 2	853
3. Interior monitoring sensor, Vehicle inclination sender, Anti-theft alarm sensor, Alarm horn, Convenience system central control unit	854
4. Rear lid handle release button, Convenience system central control unit, Rear lid central locking motor, Left number plate light, Right number plate light	855
5. Convenience system central control unit, Rear lid power opening control unit	856
6. Rear lid power opening sender, Rear lid power opening sender 2, Convenience system central control unit, Rear lid power opening control unit	857
7. Convenience system central control unit	858
8. Onboard supply control unit, Relay and fuse carrier 1	859
9. Onboard supply control unit, Rear left footwell light	860
10. Onboard supply control unit, Rear right footwell light	861
11. Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting, Light for cup holder background lighting, Light 2 for cup holder background lighting	862
12. Onboard supply control unit, Light 2 for front centre console background lighting	863
13. Onboard supply control unit, Front left footwell light, Front right footwell light	864
14. Coupling point for front right door	865
15. Driver door control unit, Coupling point for front right door, Light for sill panel moulding background lighting, driver side	866
16. Driver exterior door handle switch, Contact sensor for front right exterior door handle, Driver door control unit, Light for exterior door handle illumination, front passenger side, Driver door lock unit	867
17. Rear lid remote release button, Driver side interior locking button for central locking system, Driver operating unit for memory settings, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit	868
18. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	869
19. Mirror adjustment switch, Mirror adjustment changeover switch, Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Light for driver door background lighting, Driver side entry light	870
20. Driver door control unit, Driver side exterior mirror, Exit warning lamp, driver side	871
21. Driver door control unit, Light for front right door contour lighting, Light for right door storage compartment illumination, Coupling point in front right door, Driver side exterior mirror	872
22. Light 1 for front right door background lighting, Light for front right door contour lighting, Coupling point for front left door	873
23. Front passenger door control unit, Coupling point for front left door, Light for sill panel moulding background lighting, front passenger side	874
24. Front passenger exterior door handle switch, Front passenger door control unit, Front passenger door lock unit	875
25. Front passenger operating unit for memory settings, Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	876
26. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Light for passenger door background lighting, Passenger side entry light, Exit warning lamp, front passenger side	877
27. Front passenger door control unit, Passenger side exterior mirror	878
28. Front passenger door control unit, Light 1 for front left door background lighting, Light for front left door contour lighting, Light for left door storage compartment illumination, Coupling point in front left door, Passenger side exterior mirror	879
29. Left ultrasonic sensor for passenger compartment monitoring system, rear, Convertible roof actuation control unit, Coupling point in rear left wheel housing wiring, Rear driver side window regulator motor, Rear passenger side window regulator motor	880
30. Light 1 for rear left door background lighting, Light for rear left door storage compartment illumination, Coupling point in rear left wheel housing wiring	881
31. Light for rear left door storage compartment illumination, Coupling point in rear left wheel housing wiring, Front passenger side belt feeder motor	882
32. Right ultrasonic sensor for passenger compartment monitoring system, rear, Light 1 for rear right door background lighting, Coupling point in rear right wheel housing wiring	883
33. Light 1 for rear right door background lighting, Light for rear right door storage compartment illumination. Coupling point in rear right wheel housing wiring. Driver side belt feeder motor	



34. Coupling point in rear right wheel housing wiring, Driver side belt feeder motor	884
078 - Electrically operated convertible roof	885-896
1. Electrically operated convertible roof	885
2. Heated rear window relay, Convertible roof actuation control unit, Relay and fuse carrier 2	886
3. Convertible roof actuation button, Button for convertible roof compartment tray operation, Convertible roof actuation control unit	887
4. Convertible roof actuation control unit, Convertible roof actuation hydraulic pump relay, Hydraulic pump relay 2 for convertible roof	888
5. Convertible roof compartment lid released switch, Convertible roof compartment lid locked switch, left, Convertible roof compartment lid locked switch, right, Convertible roof compartment lid closed switch, Convertible roof actuation control unit, Power operated convertible roof valve 1, Power operated convertible roof valve 2, Power operated convertible roof valve 3, Lock unit for convertible roof compartment lid, Convertible roof actuation hydraulic pump, Convertible roof compartment lid lock motor	889
6. Convertible roof compartment lid open switch, Convertible roof actuation control unit	890
7. Convertible roof latch open switch, Convertible roof latch closed switch, Convertible roof actuation control unit, Convertible roof lock motor, Front roof module, Rear interior light	891
8. Convertible roof latch closed switch (left-side), Convertible roof latch closed switch (right-side), Switch on left for convertible roof compartment tray, bottom, Convertible roof actuation control unit, Left motor for convertible roof compartment tray, Heated rear window	892
9. Switch on right for convertible roof compartment tray, bottom, Left ultrasonic sensor for passenger compartment monitoring system, rear, Convertible roof actuation control unit, Glove compartment locking motor, Left luggage compartment light	893
10. Relay and fuse carrier 1, Rear driver side window regulator motor, Rear passenger side window regulator motor	894
11. Convertible roof stowed switch, Convertible roof front switch, Tensioning strut top switch, Tensioning strut stowed switch, left, Tensioning strut stowed switch, right, Tensioning strut intermediate position switch	895
12. Right ultrasonic sensor for passenger compartment monitoring system, rear	896
079 - Airbag systems , (L0L)	897-906
1. Airbag systems , (L0L)	897
2. Coil connector, Airbag control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag, Fuses in fuse holder	898
3. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Data bus diagnostic interface, Front passenger airbag unit	899
4. Driver side belt switch, Twin belt buckle, Driver side seat position sensor, Airbag control unit, Side airbag igniter on driver side	900
5. Front passenger side belt switch, Rear belt switch, passenger side, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Side airbag igniter on front passenger side	901
6. Rear side airbag crash sensor on driver side, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Trigger for driver side roll-over bar, Trigger for passenger side roll-over bar	902
7. Rear side airbag crash sensor on passenger side, Driver side belt force limiter, Airbag control unit, Front left seat belt, Driver seat belt tensioner igniter 1	903
8. Front passenger side belt force limiter, Driver side crash sensor 2 for pedestrian protection, Front passenger side crash sensor 2 for pedestrian protection, Airbag control unit, Front right seat belt, Front passenger seat belt tensioner igniter 1	904
9. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit, Driver side knee airbag igniter, Front passenger side knee airbag igniter	905
10. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	906
080 - Airbag systems for RHD vehicles , (L0R)	907-916
1. Airbag systems for RHD vehicles , (L0R)	907
2. Coil connector, Airbag control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag, Fuses in fuse holder	908
3. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Data bus diagnostic interface, Front passenger airbag unit	909
4. Driver side belt switch, Rear belt switch, driver side, Driver side seat position sensor, Airbag control unit, Side airbag igniter on driver side	910
5. Front passenger side belt switch, Rear belt switch, passenger side, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Side airbag igniter on front passenger side	911

6. Rear side airbag crash sensor on driver side, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Trigger for driver side roll-over bar, Trigger for passenger side roll-over bar	912
7. Rear side airbag crash sensor on passenger side, Driver side belt force limiter, Airbag control unit, Front right seat belt, Driver seat belt tensioner igniter 1	913
8. Front passenger side belt force limiter, Driver side crash sensor 2 for pedestrian protection, Front passenger side crash sensor 2 for pedestrian protection, Airbag control unit, Front left seat belt, Front passenger seat belt tensioner igniter 1	914
9. Side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit	915
10. Side airbag crash sensor on front passenger side, Airbag control unit, Emergency call module control unit and communication unit	916
081 - Neck heating	917-919
1. Neck heating	917
2. Control unit for left neck heating, Relay for left neck heating, Relay and fuse carrier 1, Blower for left neck heating	918
3. Control unit for right neck heating, Relay for right neck heating, Relay and fuse carrier 2, Blower for right neck heating	919
082 - 2.0l natural gas engine EcoFuel , CVLA,DRXA	920-947
1. 2.0l natural gas engine EcoFuel , CVLA,DRXA	920
2. Battery, Starter, Alternator, Fuses in fuse holder, Coupling point in engine compartment, right	921
3. Relay and fuse carrier 3, Fuse (50), Terminal 30 wiring junction 2, Jump start socket	922
4. Starter relay 1, Starter relay 2, Fuse 1 in fuse holder H, Relay and fuse carrier 3, Terminal 30 wiring junction 3	923
5. Main relay, Engine component power supply relay, Relay and fuse carrier 1	924
6. Relay and fuse carrier 1, Continued coolant circulation pump	925
7. Terminal 15 voltage supply relay, High-pressure valve for gas mode, Relay and fuse carrier 1	926
8. Engine/motor control unit, High-pressure valve for gas mode, Radiator fan	927
9. Engine/motor control unit, Coolant circulation pump, Radiator blind control motor	928
10. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	929
11. Sensor module, Coolant temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit	930
12. Oil level and oil temperature sender, Engine/motor control unit, Ignition coil 1 with output stage	931
13. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Actuator for engine temperature regulation	932
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure positioner	933
15. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Fuel pressure sender for low pressure, Engine/motor control unit	934
16. Gas rail temperature and pressure sensor, Fuel pressure sender for low pressure, Engine/motor control unit, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3, Gas injection valve 4	935
17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	936
18. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Engine/motor control unit, Piston cooling jet control valve	937
19. Oil pressure switch, Cam adjustment actuator 7, Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Intake manifold pressure sender, Engine/motor control unit	938
20. Throttle valve module, Charge pressure sender, Knock sensor 1, Engine/motor control unit, Fuel metering valve	939
21. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Air mass meter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	940
22. Brake light switch, Lambda probe 1 before catalytic converter, Engine/motor control unit, Lambda probe heater	941
23. Clutch pedal switch, Clutch pedal switch for engine start, Clutch position sender, Engine/motor control unit	942
24. Ambient temperature sensor. Engine speed sender. Hall sender 3. Gear detection sensor. Onboard	943

supply control unit, Engine/motor control unit, Coolant shut-off valve	
25. Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Mechatronic unit for dual clutch gearbox, Air conditioner compressor regulating valve	944
26. Fuel delivery unit, Control unit in dash panel insert, Convenience system central control unit, Fuel pump control unit, Coupling point for fuel tank	945
27. Fuel delivery unit, Fuel pump control unit, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2, Fuel tank shut-off valve 3, Fuel tank shut-off valve 4, Coupling point for fuel tank	946
28. Data bus diagnostic interface	947
083 - Adjustable driver and front passenger seats , (3L4),(3L5),(7P1),(7P7)	948-959
1. Adjustable driver and front passenger seats , (3L4),(3L5),(7P1),(7P7)	948
2. Driver operating unit for memory settings, Driver door control unit	949
3. Control unit for seat and steering column adjustment with memory function, Driver seat adjustment thermal fuse 1	950
4. Easy entry button on driver side, Driver seat backrest locking switch, Head restraint height adjustment sender for driver seat, Control unit for seat and steering column adjustment with memory function, Head restraint height adjustment motor for driver seat	951
5. Driver seat adjustment operating unit, Longitudinal adjustment sender for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	952
6. Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor	953
7. Lumbar support for driver seat, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	954
8. Control unit for front passenger seat adjustment with memory function, Front passenger seat adjustment thermal fuse 1	955
9. Easy entry button on front passenger side, Front passenger seat backrest locking switch, Head restraint height adjustment sender for front passenger seat, Control unit for front passenger seat adjustment with memory function, Head restraint height adjustment motor for front passenger seat	956
10. Front passenger seat adjustment operating unit, Longitudinal adjustment sender for front passenger seat, Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor	957
11. Control unit for front passenger seat adjustment with memory function, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	958
12. Switch module for front passenger seat, Lumbar support for front passenger seat, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	959
084 - Adjustable driver and front passenger seats , (3L4),(3L5),(8I6)	960-969
1. Adjustable driver and front passenger seats , (3L4),(3L5),(8I6)	960
2. Driver operating unit for memory settings, Driver door control unit	961
3. Control unit for seat and steering column adjustment with memory function, Onboard supply control unit, Driver seat adjustment thermal fuse 1	962
4. Driver seat adjustment operating unit, Longitudinal adjustment sender for driver seat, Height adjustment sender for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor	963
5. Easy entry button on driver side, Driver seat backrest locking switch, Head restraint height adjustment sender for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor, Head restraint height adjustment motor for driver seat	964
6. Switch module for driver seat, Driver seat massage function button, Control unit for seat and steering column adjustment with memory function, Control unit for driver multicontour seat, Driver seat rake adjustment motor, Compressor for multicontour driver seat	965
7. Control unit for front passenger seat adjustment with memory function, Front passenger seat adjustment thermal fuse 1, Coupling point for front right seat, Front passenger seat rake adjustment motor	966
8. Front passenger seat adjustment operating unit, Longitudinal adjustment sender for front passenger seat, Sender for height adjustment of front passenger seat, Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor	967
9. Easy entry button on front passenger side, Front passenger seat backrest locking switch, Head restraint height adjustment sender for front passenger seat, Control unit for front passenger seat adjustment with memory function, Head restraint height adjustment motor for front passenger seat	968
10. Switch module for front passenger seat, Front passenger seat massage function button, Control unit for front passenger seat adjustment with memory function, Control unit for front passenger multicontour seat, Compressor for multicontour front passenger seat	969
085 - 2.0l petrol engine , DEMA,DHDA,DKYA,DEMB	970-995
1. 2.0l petrol engine . DEMA.DHDA.DKYA.DEMB	970

2. Battery, Starter, Starter-alternator, Fuses in fuse holder, Coupling point in engine compartment, right	971
3. Second battery, Fuse holder A, Jump start socket, Radiator fan	972
4. Starter relay 1, Starter relay 2, Relay and fuse carrier 3, Fuse (50)	973
5. Main relay, Engine component power supply relay, Relay and fuse carrier 1, Coolant circulation pump	974
6. Relay and fuse carrier 1, Continued coolant circulation pump	975
7. Terminal 15 voltage supply relay, Engine/motor control unit, Relay and fuse carrier 1	976
8. Engine/motor control unit	977
9. Accelerator pedal module, Radiator outlet coolant temperature sender, Steering column electronics control unit, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	978
10. Oil level and oil temperature sender, Engine/motor control unit	979
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	980
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Actuator for engine temperature regulation	981
13. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Charge pressure positioner	982
14. Hall sender, Coolant temperature sender, Fuel pressure sender, Intake manifold flap potentiometer, Fuel pressure sender for low pressure, Engine/motor control unit	983
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	984
16. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Engine/motor control unit, Piston cooling jet control valve	985
17. Oil pressure switch, Cam adjustment actuator 7, Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine speed sender, Knock sensor 1, Engine/motor control unit	986
18. Throttle valve module, Hall sender 3, Pressure differential sender for particulate filter, Engine/motor control unit	987
19. Charge pressure sender, Tank breather pressure sensor 1, Engine/motor control unit, Fuel metering valve	988
20. Air mass meter, Exhaust gas temperature sender 3, Gear detection sensor, Exhaust gas temperature sender 4, Engine/motor control unit	989
21. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	990
22. Brake light switch, Clutch pedal switch, Clutch pedal switch for engine start, Clutch position sender, Engine/motor control unit	991
23. Intake manifold pressure sender, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	992
24. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit	993
25. Tank pressure sensor, Mechatronic unit for dual clutch gearbox, Control unit for fuel tank leak detection, Relay and fuse carrier 2	994
26. Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Coolant shut-off valve, Air conditioner compressor regulating valve	995
086 - 2.9l petrol engine , DECA	996-1023
1. 2.9l petrol engine , DECA	996
2. Battery, Starter, Alternator, Fuses in fuse holder, Coupling point in engine compartment, right	997
3. Relay and fuse carrier 3, Fuse (50), Fuse holder A, Jump start socket, Radiator fan	998
4. Starter relay 1, Starter relay 2, Relay and fuse carrier 2, Relay and fuse carrier 3	999
5. Main relay, Engine component power supply relay, Relay and fuse carrier 1, Charge air cooling pump	1000
6. Relay and fuse carrier 1	1001
7. Terminal 15 voltage supply relay, Relay and fuse carrier 1	1002
8. Engine/motor control unit	1003
9. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Right electrohydraulic engine mounting solenoid valve	1004
10. Charge pressure sender, Engine/motor control unit	1005
11. Oil level and oil temperature sender, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	1006
12. Engine/motor control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Spark plug 4, Spark plug 5, Spark plug 6	1007
13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3.	1008



Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	
14. Hall sender, Hall sender 3, Hall sender 4, Data bus diagnostic interface, Engine/motor control unit	1009
15. Engine/motor control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2, Overrun air recirculation valve for bank 1	1010
16. Inlet cam actuator 1 for cylinder 1, Inlet cam actuator 1 for cylinder 2, Inlet cam actuator 1 for cylinder 3, Inlet cam actuator 1 for cylinder 4, Inlet cam actuator 1 for cylinder 5, Inlet cam actuator 1 for cylinder 6, Engine/motor control unit	1011
17. Map-controlled engine cooling system thermostat, Engine speed sender, Engine/motor control unit, Valve for oil pressure control, Switch valve for mechanical coolant pump, Continued coolant circulation pump	1012
18. Throttle valve module, Knock sensor 1, Knock sensor 2, Hall sender 2, Engine/motor control unit	1013
19. Oil pressure sender, Intake manifold pressure sender, Fuel pressure sender for low pressure, Temperature sender for engine cover panel, Engine/motor control unit, Fuel metering valve	1014
20. Lambda probe 2 after catalytic converter, Lambda probe 2 before catalytic converter, Fuel pressure sender, Engine/motor control unit, Coolant valve for cylinder block	1015
21. Radiator outlet coolant temperature sender, Temperature sender 1 for charge air cooler, Temperature sender 2 for charge air cooler, Tank breather pressure sensor 1, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Coupling point 1 for engine compartment wiring, Coolant circulation pump	1016
22. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Exhaust flap control unit 2, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1017
23. Brake light switch, Coolant temperature sender, Engine/motor control unit, Exhaust flap control unit	1018
24. Oil pressure switch, Oil temperature sender, Engine outlet coolant temperature sender, Temperature sender for engine temperature regulation, Engine/motor control unit	1019
25. Dual exhaust gas temperature sensor 1, Dual exhaust gas temperature sensor 2, Pressure differential sender for particulate filter, Pressure differential sender 2 for particulate filter, Engine/motor control unit	1020
26. Tank pressure sensor, Control unit in dash panel insert, Engine/motor control unit, Control unit for fuel tank leak detection	1021
27. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit	1022
28. Ambient temperature sensor, Coolant shortage indicator sender, Automatic gearbox control unit, Onboard supply control unit, Coolant shut-off valve, Air conditioner compressor regulating valve	1023
087 - 3.0l diesel engine , DEWB	1024-1050
1. 3.0l diesel engine , DEWB	1024
2. Battery, Starter, Alternator, Battery monitor control unit, Fuses in fuse holder	1025
3. Battery isolation igniter, Fuses in fuse holder	1026
4. Suppression capacitor, Fuse holder A, Relay and fuse carrier 3, Jump start socket, Radiator fan	1027
5. Main relay, Starter relay 1, Starter relay 2, Relay and fuse carrier 1, Relay and fuse carrier 3	1028
6. Relay and fuse carrier 1, Fuse carrier 1	1029
7. Terminal 15 voltage supply relay, Relay and fuse carrier 1, Fuse carrier 1	1030
8. Automatic glow period control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	1031
9. Air mass meter, Engine/motor control unit	1032
10. Charge air temperature sender after charge air cooler, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Air filter bypass flap valve	1033
11. Engine/motor control unit, Coolant valve for cylinder head	1034
12. Coolant shortage indicator sender, Oil level and oil temperature sender, Sender 1 for turbocharger speed, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor regulating valve	1035
13. Accelerator pedal module, Exhaust gas recirculation valve 2, Engine/motor control unit	1036
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Exhaust gas recirculation cooler changeover valve, Coolant circulation pump	1037
15. Throttle valve module, Intake manifold flap control unit, Engine/motor control unit, Injector, cylinder 5, Injector, cylinder 6	1038
16. Charge pressure sender, Fuel pressure sender, Fuel pressure sender for low pressure, Engine/motor control unit, Turbocharger 1 control unit	1039
17. Exhaust gas recirculation valve 1, Coolant temperature sender, Fuel temperature sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	1040
18. Oil pressure sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Pressure differential sender 2, Engine/motor control unit	1041
19. Hall sender. Exhaust gas pressure sensor 1. Oil temperature sender 2. Temperature sender for	1042

engine temperature regulation, Charge air temperature sender before charge air cooler, Engine/motor control unit, Valve for oil pressure control	
20. Engine speed sender, NOx sender 2, Control unit for NOx sender, Engine/motor control unit, Control unit for NOx sender 2	1043
21. NOx sender, Particulate sensor, Data bus diagnostic interface, Control unit for NOx sender, Engine/motor control unit	1044
22. Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Convenience system central control unit, Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit	1045
23. Brake light switch, Lambda probe 1 before catalytic converter, Lambda probe, Engine/motor control unit, Exhaust flap control unit	1046
24. Exhaust gas pressure sensor 2, Engine/motor control unit, Control unit for reducing agent metering system, Injector for reducing agent	1047
25. Delivery unit for reducing agent metering system, Tank sender for reducing agent, Temperature sender for reducing agent, Pressure sender for reducing agent metering system, Control unit for reducing agent metering system, Pump for reducing agent	1048
26. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Control unit for reducing agent metering system, Heater for reducing agent tank (heater circuit 1), Heater for reducing agent line (heater circuit 2), Heater 2 for reducing agent tank (heater circuit 3)	1049
27. Starter-alternator, Control unit for electric compressor, Starter-alternator coolant pump	1050
088 - Engine sound generator , (FN0),(FN1)	1051-1053
1. Engine sound generator , (FN0),(FN1)	1051
2. Control unit for structure-borne sound, Actuator for structure-borne sound	1052
3. Engine sound generator control unit, Actuator 1 for engine sound generator	1053
089 - 2.0l petrol engine , DDWA,DKNA,DDWB,DLHB	1054-1079
1. 2.0l petrol engine , DDWA,DKNA,DDWB,DLHB	1054
2. Battery, Starter, Starter-alternator, Fuses in fuse holder, Coupling point in engine compartment, right	1055
3. Fuse holder A, Relay and fuse carrier 3, Fuse (50), Jump start socket, Radiator fan	1056
4. Second battery, Starter relay 1, Starter relay 2, Relay and fuse carrier 2, Relay and fuse carrier 3	1057
5. Main relay, Engine component power supply relay, Relay and fuse carrier 1, Coolant circulation pump	1058
6. Relay and fuse carrier 1	1059
7. Terminal 15 voltage supply relay, Relay and fuse carrier 1	1060
8. Engine/motor control unit	1061
9. Radiator outlet coolant temperature sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Continued coolant circulation pump	1062
10. Accelerator pedal module, Charge pressure sender, Coolant temperature sender, Steering column electronics control unit, Engine/motor control unit, Coupling point on left A-pillar, bottom	1063
11. Lambda probe 1 before catalytic converter, Gear detection sensor, Engine/motor control unit, Lambda probe heater	1064
12. Brake light switch, Clutch pedal switch, Clutch pedal switch for engine start, Lambda probe 1 after catalytic converter, Knock sensor 1, Clutch position sender, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	1065
13. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Coupling point in engine compartment	1066
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Actuator for engine temperature regulation, Coupling point in engine compartment, centre	1067
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve	1068
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1069
17. Throttle valve module, Engine speed sender, Oil level and oil temperature sender, Engine/motor control unit, Fuel metering valve	1070
18. Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit, Coupling point in engine compartment, left	1071
19. Engine/motor control unit, Coupling point in engine compartment, left	1072
20. Hall sender 3, Pressure differential sender for particulate filter, Engine/motor control unit, Charge pressure positioner	1073
21. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	1074

22. Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Intake manifold pressure sender, Tank breather pressure sensor 1, Engine/motor control unit	1075
23. Temperature and pressure sender for fuel tank, Tank pressure sensor, Engine/motor control unit, Control unit for fuel tank leak detection	1076
24. Control unit in dash panel insert, Data bus diagnostic interface	1077
25. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit	1078
26. Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Coolant shut-off valve, Air conditioner compressor regulating valve	1079
090 - Mobile telephone systems , (9ZE),(9ZV),(9ZX)	1080-1083
1. Mobile telephone systems , (9ZE),(9ZV),(9ZX)	1080
2. Aerial amplifier for mobile telephone, Telephone bracket, Relay and fuse carrier 2	1081
3. Control unit 1 for information electronics, Telephone aerial, Aerial amplifier for mobile telephone, Front right microphone, Microphone unit in front roof module, Roof aerial	1082
4. Control unit 1 for information electronics, Front left microphone, Microphone unit in front roof module	1083
091 - 3.0l petrol engine , CWGD	1084-1108
1. 3.0l petrol engine , CWGD	1084
2. Battery, Starter, Alternator, Fuses in fuse holder, Coupling point in engine compartment, right	1085
3. Suppression capacitor, Fuse holder A, Jump start socket, Radiator fan	1086
4. Starter relay 1, Starter relay 2, Relay and fuse carrier 3, Fuse (50)	1087
5. Main relay, Engine component power supply relay, Relay and fuse carrier 1, Relay and fuse carrier 2	1088
6. Relay and fuse carrier 1	1089
7. Terminal 15 voltage supply relay, Relay and fuse carrier 1	1090
8. Engine/motor control unit	1091
9. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	1092
10. Oil level and oil temperature sender, Engine/motor control unit	1093
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	1094
12. Engine/motor control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Spark plug 4, Spark plug 5, Spark plug 6	1095
13. Coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	1096
14. Oil pressure switch, Oil temperature sender, Engine outlet coolant temperature sender, Hall sender 3, Hall sender 4, Temperature sender for engine temperature regulation, Engine/motor control unit	1097
15. Engine/motor control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2, Overrun air recirculation valve for bank 1	1098
16. Inlet cam actuator 1 for cylinder 1, Inlet cam actuator 1 for cylinder 2, Inlet cam actuator 1 for cylinder 3, Inlet cam actuator 1 for cylinder 4, Inlet cam actuator 1 for cylinder 5, Inlet cam actuator 1 for cylinder 6, Temperature sender for engine cover panel, Engine/motor control unit	1099
17. Map-controlled engine cooling system thermostat, Engine speed sender, Hall sender, Engine/motor control unit, Valve for oil pressure control, Switch valve for mechanical coolant pump, Continued coolant circulation pump	1100
18. Throttle valve module, Knock sensor 1, Knock sensor 2, Hall sender 2, Engine/motor control unit	1101
19. Oil pressure sender, Charge pressure sender, Intake manifold pressure sender, Engine/motor control unit, Fuel metering valve, Coolant circulation pump	1102
20. Radiator outlet coolant temperature sender, Fuel pressure sender, Fuel pressure sender for low pressure, Tank breather pressure sensor 1, Engine/motor control unit, Coolant valve for cylinder head	1103
21. Brake light switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1104
22. Data bus diagnostic interface, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	1105
23. Temperature and pressure sender for fuel tank, Tank pressure sensor, Pressure differential sender for particulate filter, Engine/motor control unit, Control unit for fuel tank leak detection	1106
24. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit	1107
25. Coolant shortage indicator sender, Automatic gearbox control unit, Control unit in dash panel insert, Onboard supply control unit, Coolant shut-off valve, Air conditioner compressor regulating valve	1108
092 - Mobile telephone systems , (9ZE),(9ZV),(9ZX)	1109-1112
1. Mobile telephone svstems . (9ZE).(9ZV).(9ZX)	1109

2. Aerial amplifier for mobile telephone, Telephone bracket, Relay and fuse carrier 2	1110
3. Control unit 1 for information electronics, Control unit for seat belt microphone, Telephone aerial, Aerial amplifier for mobile telephone, Roof aerial	1111
4. Control unit for seat belt microphone, Microphone unit in front roof module	1112
093 - Adjustable driver and front passenger seats , (3L5),(8I6),(Q1A),(Q1D),(Q4Q)	1113-1120
1. Adjustable driver and front passenger seats , (3L5),(8I6),(Q1A),(Q1D),(Q4Q)	1113
2. Driver seat adjustment operating unit, Onboard supply control unit, Driver seat adjustment thermal fuse 1	1114
3. Driver seat adjustment operating unit, Control unit for driver multicontour seat, Driver seat backrest adjustment motor	1115
4. Driver seat massage function button, Control unit for driver multicontour seat, Valve block for driver seat and backrest bolster adjustment, Compressor for multicontour driver seat	1116
5. Front passenger seat adjustment operating unit, Coupling point for front right seat	1117
6. Front passenger seat adjustment operating unit, Front passenger seat adjustment thermal fuse 1, Coupling point for front right seat	1118
7. Front passenger seat adjustment operating unit, Front passenger seat massage function button, Control unit for front passenger multicontour seat, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor, Compressor for multicontour front passenger seat	1119
8. Switch module for front passenger seat, Control unit for front passenger multicontour seat, Valve block for front passenger seat and backrest bolster adjustment	1120
094 - Adjustable driver and front passenger seats , (3L4),(8I6),(Q1A),(Q1D),(Q4Q)	1121-1129
1. Adjustable driver and front passenger seats , (3L4),(8I6),(Q1A),(Q1D),(Q4Q)	1121
2. Driver operating unit for memory settings, Driver door control unit	1122
3. Control unit for seat and steering column adjustment with memory function, Onboard supply control unit, Driver seat adjustment thermal fuse 1	1123
4. Driver seat adjustment operating unit, Longitudinal adjustment sender for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	1124
5. Driver seat massage function button, Control unit for seat and steering column adjustment with memory function, Control unit for driver multicontour seat, Driver seat backrest adjustment motor, Valve block for driver seat and backrest bolster adjustment	1125
6. Control unit for driver multicontour seat, Coupling point for front right seat, Compressor for multicontour driver seat	1126
7. Front passenger seat adjustment operating unit, Front passenger seat adjustment thermal fuse 1, Coupling point for front right seat, Front passenger seat longitudinal adjustment motor	1127
8. Front passenger seat adjustment operating unit, Control unit for front passenger multicontour seat, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor, Compressor for multicontour front passenger seat	1128
9. Switch module for front passenger seat, Front passenger seat massage function button, Control unit for front passenger multicontour seat	1129
095 - Battery, starter and alternator , (VH0)	1130-1135
1. Battery, starter and alternator , (VH0)	1130
2. Battery, Starter, Fuses in fuse holder	1131
3. Fuses in fuse holder, Fuse holder A, Relay and fuse carrier 2	1132
4. Relay and fuse carrier 3	1133
5. Second battery, Data bus diagnostic interface, Relay and fuse carrier 1	1134
6. Starter-alternator	1135
096 - 48 V system , (0K4),(VH2)	1136-1139
1. 48 V system , (0K4),(VH2)	1136
2. Battery, Battery monitor control unit, Battery isolation igniter, Fuses in fuse holder	1137
3. Voltage converter (48 V/12 V), Data bus diagnostic interface, Fuses in fuse holder, Voltage converter fan	1138
4. Battery, 48 V, Battery isolation igniter, 48 V, Terminal 40 wiring junction, Terminal 40 wiring junction 2	1139
097 - 2.0l petrol engine , DLVA,DLVB	1140-1164
1. 2.0l petrol engine , DLVA,DLVB	1140
2. Battery, Starter, Starter-alternator, Fuses in fuse holder, Coupling point in engine compartment, right	1141
3. Second battery, Fuse holder A, Jump start socket, Radiator fan	1142
4. Starter relay 1, Starter relay 2, Relay and fuse carrier 3, Fuse (50)	1143
5. Main relay, Engine component power supply relay, Relay and fuse carrier 1, Coolant circulation pump	1144
6. Relay and fuse carrier 1, Continued coolant circulation pump	1145
7. Terminal 15 voltage supply relay, Engine/motor control unit, Relay and fuse carrier 1	1146
8. Engine/motor control unit	1147



9. Accelerator pedal module, Radiator outlet coolant temperature sender, Steering column electronics control unit, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	1148
10. Oil level and oil temperature sender, Engine/motor control unit	1149
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1150
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Actuator for engine temperature regulation	1151
13. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Charge pressure positioner	1152
14. Hall sender, Coolant temperature sender, Fuel pressure sender, Intake manifold flap potentiometer, Fuel pressure sender for low pressure, Engine/motor control unit	1153
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	1154
16. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Engine/motor control unit, Piston cooling jet control valve	1155
17. Oil pressure switch, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine speed sender, Engine/motor control unit	1156
18. Throttle valve module, Knock sensor 1, Hall sender 3, Pressure differential sender for particulate filter, Engine/motor control unit	1157
19. Charge pressure sender, Air mass meter, Intake manifold pressure sender, Engine/motor control unit, Fuel metering valve	1158
20. Gear detection sensor, Engine/motor control unit	1159
21. Brake light switch, Clutch pedal switch, Clutch pedal switch for engine start, Clutch position sender, Engine/motor control unit	1160
22. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1161
23. Tank pressure sensor, Data bus diagnostic interface, Engine/motor control unit, Control unit for fuel tank leak detection, Relay and fuse carrier 2	1162
24. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit	1163
25. Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Onboard supply control unit, Mechatronic unit for dual clutch gearbox, Coolant shut-off valve, Air conditioner compressor regulating valve	1164
098 - Emergency call module , (IV1),(IV2),(IV3),(IV4),(IW3)	1165-1170
1. Emergency call module , (IV1),(IV2),(IV3),(IV4),(IW3)	1165
2. Convenience system central control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	1166
3. Airbag control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Loudspeaker for emergency call module	1167
4. Control unit for seat belt microphone, Emergency call module control unit and communication unit, Microphone unit in front roof module	1168
5. Emergency call module control unit and communication unit, Roof aerial, Emergency call module aerial	1169
6. Emergency call module control unit and communication unit, Emergency call module aerial 2	1170
099 - Adjustable lumbar support , (3L3),(8I6)	1171-1176
1. Adjustable lumbar support , (3L3),(8I6)	1171
2. Onboard supply control unit, Relay and fuse carrier 1	1172
3. Control unit for driver multicontour seat, Valve block for driver seat and backrest bolster adjustment	1173
4. Driver seat massage function button, Front passenger seat massage function button, Control unit for front passenger multicontour seat, Control unit for driver multicontour seat, Compressor for multicontour driver seat, Compressor for multicontour front passenger seat	1174
5. Switch module for front passenger seat, Control unit for front passenger multicontour seat, Valve block for front passenger seat and backrest bolster adjustment	1175
6. Relay and fuse carrier 2	1176
100 - 2.0l diesel engine , DEZB,DEZE,DTNA,DTNB,DTPA	1177-1207
1. 2.0l diesel engine , DEZB,DEZE,DTNA,DTNB,DTPA	1177
2. Battery, Starter, Battery monitor control unit, Battery isolation igniter, Fuses in fuse holder	1178
3. Suppression capacitor, Fuse holder A, Jump start socket, Radiator fan	1179
4. Starter relay 1, Starter relay 2, Relay and fuse carrier 3	1180
5. Main relay, Relay and fuse carrier 1, Fuse carrier 1	1181
6. Relay and fuse carrier 1, Fuse carrier 1	1182
7. Terminal 15 voltage supply relay, Relay and fuse carrier 1	1183
8. Cvylinder 3 combustion chamber pressure sender. Automatic alow period control unit. Glow plua 1.	1184

Glow plug 2, Glow plug 3, Glow plug 4	
9. Engine/motor control unit	1185
10. Engine/motor control unit	1186
11. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	1187
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1188
13. Air mass meter, Engine/motor control unit, Coolant changeover valve 2, Charge air cooling pump	1189
14. Brake light switch, Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Air conditioner compressor regulating valve	1190
15. Oil level and oil temperature sender, Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head, Piston cooling jet control valve, Coolant pump for low-temperature circuit	1191
16. Lambda probe 1 before catalytic converter, Lambda probe, Exhaust gas temperature sender 4, Engine/motor control unit, Heater element for crankcase breather, Fuel pressure regulating valve, Fuel metering valve	1192
17. Starter-alternator, Engine/motor control unit, Injector for reducing agent, Injector 2 for reducing agent	1193
18. Temperature and pressure sender for low-pressure fuel system, Hall sender, Fuel pressure sender, Temperature sender for engine temperature regulation, Charge air temperature sender before charge air cooler, Engine/motor control unit	1194
19. Oil pressure sender, Charge pressure sender, Exhaust gas temperature sender 1, Pressure differential sender, Engine/motor control unit	1195
20. Engine temperature regulation module, Charge air temperature sender after charge air cooler, Engine/motor control unit, Turbocharger 1 control unit	1196
21. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Temperature sensor 2 for exhaust recirculation, Engine/motor control unit	1197
22. Throttle valve module, Coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Coolant temperature sender 2, Engine/motor control unit	1198
23. Second battery, Data bus diagnostic interface, Engine/motor control unit, Exhaust flap control unit	1199
24. Control unit 2 for NOx sender, Data bus diagnostic interface, Engine/motor control unit	1200
25. Control unit for NOx sender, Control unit 3 for NOx sender, Particulate sensor, Engine/motor control unit	1201
26. Engine speed sender, ABS control unit, Engine/motor control unit	1202
27. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Convenience system central control unit, Fuel pump control unit, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve	1203
28. Control unit for reducing agent metering system, Relay and fuse carrier 2	1204
29. Delivery unit for reducing agent metering system, Tank sender for reducing agent, Temperature sender for reducing agent, Pressure sender for reducing agent metering system, Reducing agent quality sensor, Control unit for reducing agent metering system	1205
30. Delivery unit for reducing agent metering system, Control unit for reducing agent metering system, Pump for reducing agent, Heater for reducing agent tank (heater circuit 1), Heater 2 for reducing agent tank (heater circuit 3)	1206
31. Control unit for reducing agent metering system, Heater for reducing agent line (heater circuit 2)	1207
101 - Entry and start authorisation , (2F1)	1208-1214
1. Entry and start authorisation , (2F1)	1208
2. Convenience system central control unit, Fuse holder C	1209
3. Entry and start authorisation button, Convenience system central control unit, Onboard supply control unit, Control unit for electronic steering column lock	1210
4. Convenience system central control unit, Right aerial for entry and start authorisation	1211
5. Convenience system central control unit, Near field communication control unit	1212
6. Convenience system central control unit, Near field communication control unit 2, Left aerial for entry and start authorisation, Near field communication aerial 2	1213
7. Convenience system central control unit, Data bus diagnostic interface, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 3 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness, Connection 3 (convenience CAN bus, low), in main wiring harness	1214
102 - Heated windscreen , (0K2),(4GR),(4GY)	1215-1217
1. Heated windscreen , (0K2),(4GR),(4GY)	1215
2. Relay and fuse carrier 1, Relay and fuse carrier 5	1216
3. Heated windscreen relay for left side, Heated windscreen relay for right side, Relay and fuse carrier 5, Heated windscreen	1217
103 - Batterv. starter and alternator . (0K4).(VH2)	1218-1223

1. Battery, starter and alternator , (0K4),(VH2)	1218
2. Battery, Battery monitor control unit, Data bus diagnostic interface	1219
3. Airbag control unit, Wiring junction	1220
4. Starter, Automatic glow period control unit, Terminal 40 wiring junction 2	1221
5. Starter-alternator, Control unit for electric compressor, Starter-alternator coolant pump	1222
6. Engine/motor control unit, Terminal 40 wiring junction	1223
104 - Adjustable driver and front passenger seats , (3L4),(3PH),(7P1),(7P7)	1224-1230
1. Adjustable driver and front passenger seats , (3L4),(3PH),(7P1),(7P7)	1224
2. Driver operating unit for memory settings, Driver door control unit	1225
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat adjustment thermal fuse 1, Driver seat rake adjustment motor	1226
4. Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat height adjustment motor	1227
5. Front passenger seat adjustment operating unit, Front passenger seat adjustment thermal fuse 1, Coupling point for front right seat, Front passenger seat longitudinal adjustment motor	1228
6. Front passenger seat adjustment operating unit, Switch module for front passenger seat, Lumbar support for front passenger seat, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	1229
7. Switch module for front passenger seat	1230
105 - MMI (information electronics 1)	1231-1240
1. MMI (information electronics 1)	1231
2. Driver side volume regulator, Control unit 1 for information electronics	1232
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	1233
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit, TV tuner	1234
5. Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit	1235
6. Digital sound package control unit, Control unit 1 for information electronics	1236
7. Control unit 1 for information electronics, Roof aerial	1237
8. Control unit 1 for information electronics, Aerial amplifier	1238
9. Control unit 1 for information electronics	1239
10. Aerial amplifier 2	1240
106 - Sound system , (8RM),(9VD)	1241-1247
1. Sound system , (8RM),(9VD)	1241
2. Control unit 1 for information electronics, Rear left bass loudspeaker, Fuse holder C	1242
3. Control unit 1 for information electronics, Rear left treble loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	1243
4. Control unit 1 for information electronics, Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	1244
5. Control unit 1 for information electronics, Rear right treble loudspeaker, Centre loudspeaker	1245
6. Control unit 1 for information electronics, Subwoofer	1246
7. Control unit 1 for information electronics	1247
107 - Sound system , (9VS)	1248-1258
1. Sound system , (9VS)	1248
2. Digital sound package control unit, Emergency call module control unit and communication unit, Front left treble loudspeaker 2, Front right treble loudspeaker 2	1249
3. Digital sound package control unit, Rear left bass loudspeaker	1250
4. Digital sound package control unit, Rear left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker	1251
5. Digital sound package control unit, Rear right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	1252
6. Digital sound package control unit, Rear right bass loudspeaker	1253
7. Digital sound package control unit, Subwoofer	1254
8. Digital sound package control unit, Subwoofer, Rear left subwoofer, Rear right subwoofer	1255
9. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Centre loudspeaker, Centre loudspeaker 2, Front left mid-range loudspeaker 2, Front right mid-range loudspeaker 2	1256
10. Control unit 1 for information electronics, Front left treble loudspeaker, Left effect loudspeaker	1257
11. Control unit 1 for information electronics, Front right treble loudspeaker, Right effect loudspeaker	1258
108 - Communication, Japan	1259-1261
1. Communication, Japan	1259
2. Chip card reader control unit. Dedicated short-range communication aerial. Fuse holder C	1260

3. Chip card reader control unit	1261
109 - USB connections for data transfer	1262-1264
1. USB connections for data transfer	1262
2. Control unit 1 for information electronics, USB hub, Fuse holder C, Relay and fuse carrier 1, USB charging socket 1	1263
3. Onboard supply control unit, USB hub, USB connection 1	1264
110 - Mobile telephone systems , (9ZE),(9ZV)	1265-1267
1. Mobile telephone systems , (9ZE),(9ZV)	1265
2. Control unit 1 for information electronics, Charging unit 1 for mobile devices, Fuse holder C, Relay and fuse carrier 2	1266
3. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, LTE aerial 3	1267
111 - Interface for external use , (ER6)	1268-1270
1. Interface for external use , (ER6)	1268
2. Control unit 1 for information electronics, Control unit with Android operating system, Fuse holder C	1269
3. Toll collection sender, Control unit 1 for information electronics, Control unit with Android operating system	1270
112 - Headlights , (8EX)	1271-1274
1. Headlights , (8EX)	1271
2. Onboard supply control unit, Relay and fuse carrier 1	1272
3. Output module 1 for right LED headlight, Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight, Front left turn signal bulb, Front right turn signal bulb	1273
4. Rear left vehicle level sender, Convenience system central control unit	1274
113 - Headlights , (8IY)	1275-1278
1. Headlights , (8IY)	1275
2. Onboard supply control unit, Relay and fuse carrier 1	1276
3. Onboard supply control unit, Front left headlight, Front right headlight	1277
4. Rear left vehicle level sender, Front left vehicle level sender, Convenience system central control unit	1278
114 - Headlights , (8IZ)	1279-1282
1. Headlights , (8IZ)	1279
2. Onboard supply control unit, Relay and fuse carrier 1	1280
3. Onboard supply control unit, Front left headlight, Front right headlight	1281
4. Rear left vehicle level sender, Front left vehicle level sender, Convenience system central control unit	1282
115 - Tail light clusters , (8VG),(AV0)	1283-1286
1. Tail light clusters , (8VG),(AV0)	1283
2. Convenience system central control unit, Left tail light cluster, Right tail light cluster	1284
3. Convenience system central control unit, Left tail light cluster 2	1285
4. Convenience system central control unit, Right tail light cluster 2	1286
116 - Tail light clusters , (8VG),(AV1),(AV4)	1287-1290
1. Tail light clusters , (8VG),(AV1),(AV4)	1287
2. Convenience system central control unit, Left tail light cluster, Right tail light cluster	1288
3. Convenience system central control unit, Left tail light cluster 2	1289
4. Convenience system central control unit, Right tail light cluster 2	1290
117 - Tail light clusters , (8VM),(8VP),(AV0),(AV1),(AV4)	1291-1293
1. Tail light clusters , (8VM),(8VP),(AV0),(AV1),(AV4)	1291
2. Convenience system central control unit, Left tail light cluster, Right tail light cluster	1292
3. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	1293
118 - Tail light clusters , (8VM),(8VP),(AV2)	1294-1296
1. Tail light clusters , (8VM),(8VP),(AV2)	1294
2. Convenience system central control unit, Left tail light cluster, Right tail light cluster	1295
3. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	1296
119 - Infotainment MOST bus	1297-1299
1. Infotainment MOST bus	1297
2. Control unit in dash panel insert, Control unit 1 for information electronics	1298
3. TV tuner	1299
120 - Reversing camera (Rear Assist) , (KA2)	1300-1301
1. Reversing camera (Rear Assist) , (KA2)	1300
2. Reversing camera system control unit	1301
121 - Dash panel insert , (9S8),(9S9)	1302-1305
1. Dash panel insert , (9S8),(9S9)	1302
2. Dash panel insert operating button, Control unit in dash panel insert, Display in dash panel insert	1303
3. Control unit in dash panel insert, Data bus diagnostic interface, Control unit 1 for information electronics	1304



4. TV tuner	1305
122 - Dash panel insert , (9S5),(9S7)	1306-1308
1. Dash panel insert , (9S5),(9S7)	1306
2. Dash panel insert operating button, Control unit in dash panel insert, Display in dash panel insert	1307
3. Control unit in dash panel insert, Data bus diagnostic interface	1308
123 - Overhead view camera , (KA6)	1309-1313
1. Overhead view camera , (KA6)	1309
2. Data bus diagnostic interface, Control unit 1 for information electronics, Control unit for overhead view camera	1310
3. Control unit for overhead view camera, Left overhead view camera	1311
4. Control unit for overhead view camera, Right overhead view camera	1312
5. Control unit for overhead view camera, Front overhead view camera, Rear overhead view camera	1313
124 - Communication	1314-1326
1. Communication	1314
2. Data bus diagnostic interface, Emergency call module control unit and communication unit	1315
3. Airbag control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Loudspeaker for emergency call module	1316
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit	1317
5. Emergency call module control unit and communication unit	1318
6. Emergency call module control unit and communication unit, Microphone unit in front roof module	1319
7. Emergency call module control unit and communication unit, Roof aerial	1320
8. Convenience system central control unit, Emergency call module control unit and communication unit, Roof aerial	1321
9. Emergency call module control unit and communication unit, Emergency call module aerial, Wireless data transfer aerial	1322
10. Emergency call module control unit and communication unit, Aerial amplifier, Emergency call module aerial 3, Wireless data transfer aerial, Wireless data transfer aerial 2	1323
11. Control unit for seat belt microphone, GPS aerial, Aerial amplifier 2, Aerial for Bluetooth, Emergency call module aerial 2, Wireless data transfer aerial	1324
12. Control unit for seat belt microphone, Microphone 1 on driver side, Microphone 2 on driver side, Microphone 3 on driver side, Microphone 1 on front passenger side, Microphone 2 on front passenger side, Microphone 3 on front passenger side	1325
13. Digital sound package control unit, Control unit for seat belt microphone	1326
125 - 2.0l petrol engine , DMSA,DMSB	1327-1356
1. 2.0l petrol engine , DMSA,DMSB	1327
2. Battery, Starter, Starter-alternator, Fuses in fuse holder, Coupling point in engine compartment, right	1328
3. Fuse holder A, Jump start socket, Radiator fan	1329
4. Starter relay 1, Starter relay 2, Relay and fuse carrier 3, Fuse (50)	1330
5. Main relay, Engine component power supply relay, Relay and fuse carrier 1	1331
6. Relay and fuse carrier 1	1332
7. Terminal 15 voltage supply relay, Relay and fuse carrier 1	1333
8. Engine/motor control unit, Coolant circulation pump	1334
9. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Continued coolant circulation pump	1335
10. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	1336
11. Oil level and oil temperature sender, Engine/motor control unit	1337
12. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1338
13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Actuator for engine temperature regulation	1339
14. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Piston cooling jet control valve	1340
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	1341
16. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	1342
17. Cam adjustment actuator 8, Engine speed sender, Coolant temperature sender, Hall sender 3, Engine/motor control unit	1343
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Throttle valve module, Knock sensor 1, Engine/motor control unit	1344
19. Intake manifold sender. Charge pressure control module. Radiator outlet coolant temperature	1345

sender, Engine/motor control unit, Fuel metering valve	
20. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator blind control motor, Lambda probe 1 heater after catalytic converter	1346
21. Charge pressure sender, Tank breather pressure sensor 1, Engine/motor control unit	1347
22. Clutch pedal switch, Clutch pedal switch for engine start, Clutch position sender, Gear detection sensor, Engine/motor control unit	1348
23. Brake light switch, Engine/motor control unit	1349
24. Pressure differential sender for particulate filter, Engine/motor control unit	1350
25. Tank pressure sensor, Control unit for fuel tank leak detection, Relay and fuse carrier 2	1351
26. Temperature and pressure sender for fuel tank	1352
27. Second battery, Data bus diagnostic interface	1353
28. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit	1354
29. Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Mechatronic unit for dual clutch gearbox, Coolant shut-off valve, Air conditioner compressor regulating valve	1355
30. Control unit in dash panel insert	1356
126 - 2.0l petrol engine , DMTA,DPAA	1357-1383
1. 2.0l petrol engine , DMTA,DPAA	1357
2. Battery, Starter, Starter-alternator, Fuses in fuse holder, Coupling point in engine compartment, right	1358
3. Fuse holder A, Jump start socket, Radiator fan	1359
4. Starter relay 1, Starter relay 2, Relay and fuse carrier 3, Fuse (50)	1360
5. Main relay, Engine component power supply relay, Relay and fuse carrier 1	1361
6. Relay and fuse carrier 1	1362
7. Terminal 15 voltage supply relay, Relay and fuse carrier 1	1363
8. Engine/motor control unit, Coolant circulation pump	1364
9. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Continued coolant circulation pump	1365
10. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	1366
11. Oil level and oil temperature sender, Engine/motor control unit	1367
12. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1368
13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Actuator for engine temperature regulation	1369
14. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Piston cooling jet control valve	1370
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	1371
16. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	1372
17. Cam adjustment actuator 8, Engine speed sender, Coolant temperature sender, Hall sender 3, Engine/motor control unit, Fuel pressure regulating valve	1373
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Throttle valve module, Knock sensor 1, Engine/motor control unit	1374
19. Charge pressure control module, Intake manifold pressure sender, Engine/motor control unit	1375
20. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator blind control motor, Lambda probe 1 heater after catalytic converter	1376
21. Tank breather pressure sensor 1, Pressure differential sender for particulate filter, Engine/motor control unit	1377
22. Brake light switch, Radiator outlet coolant temperature sender, ABS control unit, Engine/motor control unit	1378
23. Second battery, Data bus diagnostic interface, Engine/motor control unit, Relay and fuse carrier 2	1379
24. Temperature and pressure sender for fuel tank, Tank pressure sensor, Control unit for fuel tank leak detection	1380
25. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit	1381
26. Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Mechatronic unit for dual clutch gearbox, Coolant shut-off valve, Air conditioner compressor regulating valve	1382
27. Control unit in dash panel insert	1383
127 - MMI (information electronics 1)	1384-1393
1. MMI (information electronics 1)	1384

2. Driver side volume regulator, Control unit 1 for information electronics	1385
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	1386
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit, TV tuner	1387
5. Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit	1388
6. Digital sound package control unit, Control unit 1 for information electronics	1389
7. Control unit 1 for information electronics	1390
8. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 3	1391
9. Satellite tuner aerial, Impedance converter for digital radio reception	1392
10. Aerial amplifier 2	1393
128 - 3.0l diesel engine , DMGA,DMKC	1394-1427
1. 3.0l diesel engine , DMGA,DMKC	1394
2. Battery, Starter, Battery monitor control unit, Battery isolation igniter, Fuses in fuse holder	1395
3. Suppression capacitor, Fuse holder A, Relay and fuse carrier 3, Jump start socket, Radiator fan	1396
4. Main relay, Starter relay 1, Starter relay 2, Relay and fuse carrier 1, Relay and fuse carrier 3	1397
5. Relay and fuse carrier 1, Fuse carrier 1	1398
6. Terminal 15 voltage supply relay, Relay and fuse carrier 1, Fuse carrier 1, Fuse carrier 4, Fuse carrier 5	1399
7. Engine/motor control unit, Relay and fuse carrier 1, Fuse carrier 2	1400
8. Fuel pressure sender for low pressure, Engine/motor control unit	1401
9. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Charge air cooling pump	1402
10. Engine/motor control unit, Coolant changeover valve 1, Injector 2 for reducing agent	1403
11. Charge air temperature sender after charge air cooler, Engine/motor control unit	1404
12. Starter-alternator, Air mass meter, Engine/motor control unit, Control unit for electric compressor	1405
13. Exhaust gas recirculation valve 1, Coolant temperature sender, Exhaust gas recirculation potentiometer, Coolant temperature sender 2, Engine/motor control unit, Fuel metering valve, Exhaust gas recirculation control motor	1406
14. Lambda probe 1 before catalytic converter, Power steering control unit, Engine/motor control unit, Right electrohydraulic engine mounting solenoid valve, Air filter bypass flap valve	1407
15. Engine/motor control unit	1408
16. Engine/motor control unit	1409
17. Control unit for NOx sender, Control unit 2 for NOx sender, NOx sender, NOx sender 2, Engine/motor control unit	1410
18. Control unit 3 for NOx sender, Particulate sensor, NOx sender 3, Engine/motor control unit	1411
19. Brake light switch, ABS control unit, Automatic glow period control unit, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 5, Glow plug 6	1412
20. Ambient temperature sensor, Coolant shortage indicator sender, Engine/motor control unit, Valve for oil pressure control	1413
21. Map-controlled engine cooling system thermostat, Engine/motor control unit, Air conditioner compressor regulating valve, Exhaust gas recirculation cooler changeover valve, Overrun air recirculation valve for bank 1, Coolant circulation pump	1414
22. Exhaust gas temperature sender 3, Pressure differential sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit, Exhaust flap control unit, Coolant valve for cylinder head	1415
23. Exhaust gas recirculation valve 2, Exhaust gas recirculation temperature sensor, Exhaust gas recirculation potentiometer 2, Sender 1 for turbocharger speed, Engine/motor control unit, Injector for reducing agent, Exhaust gas recirculation control motor 2	1416
24. Fuel pressure sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 4, Charge air temperature sender before charge air cooler, Engine/motor control unit, Intake manifold flap motor	1417
25. Charge pressure sender, Exhaust gas temperature sender 1, Engine/motor control unit, Turbocharger 1 control unit	1418
26. Coolant temperature sender for charge air cooler, Engine/motor control unit, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	1419
27. Oil pressure sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	1420
28. Throttle valve module, Throttle valve potentiometer, Pressure differential sender, Engine/motor control unit	1421
29. Hall sender, Oil level and oil temperature sender, Oil temperature sender 2, Pressure sender for exhaust gas recirculation, Engine/motor control unit, Fuel pressure regulating valve	1422
30. Lambda probe 1 after catalytic converter. Fuel temperature sender. Lambda probe 2. Engine/motor	1423

control unit, Radiator blind control motor, Lambda probe heater 2	
31. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	1424
32. Delivery unit for reducing agent metering system, Temperature sender for reducing agent, Control unit for reducing agent metering system	1425
33. Delivery unit for reducing agent metering system, Tank sender for reducing agent, Pressure sender for reducing agent metering system, Control unit for reducing agent metering system, Pump for reducing agent, Heater for reducing agent tank (heater circuit 1), Heater 2 for reducing agent tank (heater circuit 3)	1426
34. Control unit for reducing agent metering system, Heater for reducing agent line (heater circuit 2)	1427
129 - Tail light clusters with LEDs, 5-door vehicle , (8SK),(8SP)	1428-1430
1. Tail light clusters with LEDs, 5-door vehicle , (8SK),(8SP)	1428
2. Convenience system central control unit, Left tail light cluster, Left tail light cluster 2	1429
3. Convenience system central control unit, Right tail light cluster, Right tail light cluster 2	1430
130 - Seat ventilation , (4D3),(L0R)	1431-1434
1. Seat ventilation , (4D3),(L0R)	1431
2. Onboard supply control unit, Relay and fuse carrier 1	1432
3. Operating and display unit for front air conditioning system, Seat ventilation switch, Seat ventilation switch 2, Data bus diagnostic interface, Front left seat backrest fan 1, Front left seat cushion fan 1	1433
4. Front right seat backrest fan 1, Front right seat cushion fan 1, Earth connection 1, in main wiring harness, Earth point 1, on right rear wheel housing	1434
131 - Entry and start authorisation	1435-1439
1. Entry and start authorisation	1435
2. Convenience system central control unit, Onboard supply control unit, Fuse holder C	1436
3. Entry and start authorisation button, Convenience system central control unit, Control unit for electronic steering column lock	1437
4. Convenience system central control unit, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Left aerial for entry and start authorisation	1438
5. Convenience system central control unit, Data bus diagnostic interface, Right aerial for entry and start authorisation	1439
801 - - Fitting locations: Earth points - 1	1440-1474
1. - Fitting locations: Earth points	1440-1474
1.1 Earth points in front part of vehicle	1440-1448
1.1.1 Front from left, part 1	1440-1441
1.1.2 Front from left, part 2	1442
1.1.3 Front from right, part 1	1442-1443
1.1.4 Front from right, part 2	1444
1.1.5 Front from right, part 3	1444-1445
1.1.6 Front from right, part 4, for models with 48 V hybrid system	1446
1.1.7 Front from right, part 5, for models with 48 V hybrid system	1446
1.1.8 4 cylinder petrol engines, part 1	1447
1.1.9 4 cylinder petrol engines, part 2	1447
1.1.10 6 cylinder petrol engines	1448
1.2 Earth points in middle part of vehicle	1449-1459
1.2.1 Earth point, under front passenger seat	1450
1.2.2 Earth point, on steering wheel	1451
1.2.3 Earth point, at front, central in roof	1452
1.2.4 Earth points, view of interior front left	1453
1.2.5 Earth points, view of interior front right	1454
1.2.6 Earth point on right B-pillar, for Cabriolet	1455
1.2.7 Earth point on left B-pillar, for Cabriolet	1456
1.2.8 Earth point 1, on right rear wheel housing, for Coupé or Sportback	1457-1458
1.2.9 Earth point 1, on rear right wheel housing, for Cabriolet	1459
1.2.10 Earth point, on left rear wheel housing	1459
1.3 Earth points in rear part of vehicle	1460-1474
1.3.1 Earth point, on rear right of roof	1461
1.3.2 Earth point, on rear left of roof	1462-1463
1.3.3 Earth point, on left in luggage compartment, and earth point 2, on left in luggage compartment, for Coupé or Sportback	1464
1.3.4 Earth point 2 on left in luggage compartment, for Cabriolet	1464
1.3.5 Earth point on left in luggage compartment, for Cabriolet	1465
1.3.6 Earth point, rear left side panel, for Cabriolet	1465
1.3.7 Earth point in luggage compartment on right, for Coupé or Sportback	1466-1467
1.3.8 Earth point on right in luggage compartment and earth point, rear right side panel, for Cabriolet	1468



1.3.9 Earth point 2 on right in luggage compartment, for models with 48 volt hybrid system	1468
1.3.10 Earth point next to starter battery, without 12 volt hybrid system and without 48 volt hybrid system	1469-1470
1.3.11 Earth point next to starter battery and earth point in luggage compartment, for models with 12 volt hybrid system	1471
1.3.12 Earth point next to starter battery and earth point in spare wheel well, for models with 48 volt hybrid system	1471
1.3.13 Earth points, rear lid	1472-1474
802 - -Fitting locations: Fuses - 1	1475-1514
1. -Fitting locations: Fuses	1475-1514
1.1 Overview of fuses	1475-1477
1.2 Relay and fuse carrier 3 -SR3-	1478
1.3 Relay and fuse carrier 5 -SR5-, for natural gas models	1479
1.4 Relay and fuse carrier 1 -SR1-	1480-1496
1.4.1 Fitting location, relay and fuse carrier 1 -SR1-, left-hand drive models	1481-1482
1.4.2 Fitting location, relay and fuse carrier 1 -SR1-, right-hand drive models	1483-1484
1.4.3 Fuse assignment, fuse holder B -SB- with fuse carrier 1 -ST1-, brown, models with diesel engine	1485-1486
1.4.4 Fuse assignment, fuse holder B -SB- with fuse carrier 1 -ST1-, brown, models with 4 cylinder petrol engine	1487-1489
1.4.5 Fuse assignment, fuse holder B -SB- with fuse carrier 1 -ST1-, brown, models with 6 cylinder petrol engine	1490
1.4.6 Fuse assignment, fuse holder B -SB- with fuse carrier 1 -ST1-, brown, models with 2.0 litre natural gas engine	1491
1.4.7 Fuse assignment, fuse holder B -SB- with fuse carrier ST2, red	1492-1493
1.4.8 Fuse assignment, fuse holder B -SB- with fuse carrier ST3, black	1494
1.4.9 Fuse assignment, fuse holder B -SB- with fuse carrier ST4, black	1495
1.4.10 Fuse assignment, fuse holder B -SB- with fuse carrier ST5, red	1496
1.5 Fuse holder C -SC-	1497-1499
1.5.1 Fitting location of fuse holder C -SC-	1497-1498
1.5.2 Fuse assignment, fuse holder C -SC-	1499
1.6 Relay and fuse carrier 2 -SR2-	1500-1505
1.6.1 Fitting location, relay and fuse carrier 2 -SR2-, Coupé and Sportback models	1500-1501
1.6.2 Fitting location, relay and fuse carrier 2 -SR2-, only Cabriolet models	1502
1.6.3 Fuse assignment, fuse holder F -SF- with fuse carrier ST1, black	1502
1.6.4 Fuse assignment, fuse holder F -SF- with fuse carrier ST3, brown	1503
1.6.5 Fuse assignment, fuse holder F -SF- with fuse carrier ST5, red	1504
1.6.6 Fuse assignment, fuse holder F -SF- with fuse carrier ST6, black	1505
1.7 Fuses in fuse holder -S-	1506-1507
1.7.1 Fitting location, fuses in fuse holder -S-, for models without natural gas engine	1506-1507
1.7.2 Fitting location, fuses in fuse holder -S-, for models with natural gas engine	1508
1.8 Relay and fuse carrier 4 -SR4-	1508-1509
1.9 Fuse holder A -SA-	1510-1511
1.10 Wiring junction -TV1-	1512
1.11 Terminal 40 wiring junction 2 -TV67-	1513
1.12 Terminal 40 wiring junction -TV66-	1513-1514
803 - - Fitting locations: Relays - 1	1515-1526
1. - Fitting locations: Relays	1515-1526
1.1 Overview of relay carriers	1515
1.2 Relay and fuse carrier 4 -SR4-	1516-1517
1.3 Relay and fuse carrier 3 -SR3-	1518
1.4 Relay and fuse carrier 5 -SR5-, for natural gas models	1518
1.5 Relay and fuse carrier 1 -SR1-	1519-1522
1.5.1 Fitting location, relay and fuse carrier 1 -SR1-, left-hand drive models	1519-1520
1.5.2 Fitting location, relay and fuse carrier 1 -SR1-, right-hand drive models	1521-1522
1.6 Relay and fuse carrier 2 -SR2-	1523-1525
1.6.1 Fitting location, relay and fuse carrier 2 -SR2-, Coupé and Sportback models	1523-1524
1.6.2 Fitting location, relay and fuse carrier 2 -SR2-, only Cabriolet models	1525
1.7 Hydraulic pump relay, only Cabriolet	1526
804 - -Fitting locations: Control units in front part of vehicle - 1	1527-1575
1. -Fitting locations: Control units in front part of vehicle	1527-1575
1.1 Overview of control units in front part of vehicle	1527-1529
1.2 Control units on front headlight -MX1-/-MX2-	1530-1532
1.2.1 Control units on front headlight -MX1-/-MX2-, to September 2019	1530
1.2.2 Control units on front headlight -MX1-/-MX2-, (8EX) from October 2019	1531
1.2.3 Control units on front headlight -MX1-/-MX2-, (8IY, 8IZ) from October 2019	1532

1.3 ABS control unit -J104-	1533-1534
1.4 Automatic glow period control unit -J179-	1535-1541
1.4.1 Automatic glow period control unit -J179-, for models with engine code DFVA, CZHA, DESA, DETB, DETB, DEUA, DEUB, DEUC, CRTG, CSWB, DCPC, DCPE	1536-1537
1.4.2 Automatic glow period control unit -J179-, for models with engine code DEWA, DEWB	1538-1539
1.4.3 Automatic glow period control unit -J179-, for models with engine code DMKC, DMGA	1540-1541
1.5 Radiator fan control unit	1542-1545
1.5.1 Radiator fan control unit -J293-, 400 watt or 600 watt	1542-1543
1.5.2 Radiator fan control unit -J293-/radiator fan control unit 2 -J671-, 800 watt or 1,200 watt	1544-1545
1.6 Auxiliary heater control unit -J364-	1546-1547
1.7 Wiper motor control unit -J400-	1548-1549
1.8 Adaptive cruise control unit -J428-	1550-1551
1.9 Power steering control unit -J500-	1552-1553
1.10 Control unit for NOx sender -J583-/ -GX30-	1554-1555
1.11 Engine control unit -J623-	1556-1560
1.11.1 Engine control unit -J623-, 196-pin	1556-1557
1.11.2 Engine control unit -J623-, 315-pin	1558-1559
1.11.3 Engine control unit -J623-, 280-pin	1560
1.11.4 Engine control unit -J623-, 336-pin	1560
1.12 Control unit 2 for adaptive cruise control -J850-	1561
1.13 Control unit for structure-borne sound -J869-	1562-1563
1.14 Automatic gearbox	1564-1567
1.14.1 Mechatronic unit for dual clutch gearbox -J743- (7-speed dual clutch gearbox)	1564-1565
1.14.2 Automatic gearbox control unit -J217-	1566-1567
1.15 All-wheel drive control unit -J492-	1568-1569
1.16 Starter-alternator -C29-	1570-1572
1.16.1 Starter-alternator -C29-, for models with 12 volt hybrid system	1570-1571
1.16.2 Starter-alternator -C29-, for models with 48 volt hybrid system	1572
1.17 Control unit for electric compressor -J1123-	1573-1575
805 - - Fitting locations: Control units in middle part of vehicle - 1	1576-1701
1. - Fitting locations: Control units in middle part of vehicle	1576-1701
1.1 Overview of control units in middle part of vehicle	1577-1582
1.2 Operating and display unit for Climatronic air conditioning system -E87-	1583-1586
1.3 Rear Climatronic operating and display unit -E265-	1587-1588
1.4 Heater control unit -J65-	1589-1591
1.5 Seat and steering column adjustment control unit with memory -J136-/front passenger seat adjustment control unit with memory -J521-	1592-1595
1.6 Airbag control unit -J234-	1596-1597
1.7 Sliding sunroof adjustment control unit -J245-/sliding sunroof motor -V1-/sunroof roller blind motor -V260-	1598-1599
1.8 Control unit in dash panel insert -J285-	1600-1606
1.8.1 Control unit in dash panel insert -J285-, without virtual cockpit (9S5)	1601-1602
1.8.2 Control unit in dash panel insert -J285-, with virtual cockpit (9S8), to September 2019	1603-1604
1.8.3 Control unit in dash panel insert -J285-, with virtual cockpit (9S8), (9S9), from October 2019	1605-1606
1.9 Driver door control unit -J386-	1607-1610
1.10 Front passenger door control unit -J387-	1611-1614
1.11 Onboard supply control unit -J519-	1615-1619
1.12 Steering column electronics control unit -J527-	1620-1621
1.13 Control unit for steering wheel contact detection -J1158-	1622-1623
1.14 Roof electronics control unit -J528-	1624-1627
1.14.1 Roof electronics control unit -J528-, Coupé and Sportback models	1624-1625
1.14.2 Roof electronics control unit -J528-, Cabriolet models	1626-1627
1.15 Data bus diagnostic interface -J533-	1628-1642
1.15.1 Data bus diagnostic interface -J533-, without emergency call function (IW0), Cabriolet models, to September 2019	1628
1.15.2 Data bus diagnostic interface -J533-, with emergency call function (IW1, IW3) and Conncet Plus (IV0), Cabriolet models, to September 2019	1629
1.15.3 Data bus diagnostic interface -J533-, with emergency call function (IW1, IW3) and Conncet Plus (IV1, IV2, IV3, IV4, IV5, IV6, IV7, IV8, IV9, JE0, JE1, JE2, JE3, JE4, JE5), Cabriolet models, to September 2019	1630
1.15.4 Data bus diagnostic interface -J533-, Cabriolet models, from October 2019	1631
1.15.5 Data bus diagnostic interface -J533-, without emergency call function (IW0), Coupé and Sportback models, to September 2019	1632-1633
1.15.6 Data bus diagnostic interface -J533-, with emergency call function (IW1, IW3) and Conncet Plus (IV0), Coupé and Sportback models, to September 2019	1634-1636
1.15.7 Data bus diaagnostic interface -J533-. with emeraency call function (IW1. IW3) and Conncet	1637-1639

Plus (IV1, IV2, IV3, IV4, IV5, IV6, IV7, IV8, IV9, JE0, JE1, JE2, JE3, JE4, JE5), Coupé and Sportback models, to September 2019	
1.15.8 Data bus diagnostic interface -J533-, Coupé and Sportback models, from October 2019	1640-1642
1.16 Fuel pump control unit -J538-	1643-1644
1.17 Near field communication control unit 2 -J1170-	1645
1.18 Charger 1 for mobile devices -J1146-, from October 2019	1646-1647
1.19 Control unit for electronic steering column lock -J764-	1648-1649
1.20 Running gear control unit -J775-	1650-1652
1.21 Control unit 1 for information electronics -J794-	1653-1658
1.21.1 Control unit 1 for information electronics -J794-, MMI radio (I8E), (I8S), to September 2019	1653-1654
1.21.2 Control unit 1 for information electronics -J794-, MMI Navigation plus (I8H), to September 2019	1655-1656
1.21.3 Control unit 1 for information electronics -J794-, MMI (information electronics 1), from October 2019	1657-1658
1.22 Main beam assist control unit -J844-	1659
1.23 Control unit for front left belt tensioner -J854-/ control unit for front right belt tensioner -J855-	1660-1661
1.24 Control unit for fuel tank leak detection -J909-	1662-1663
1.25 Rear driver side door control unit -J926-	1664-1666
1.26 Near field communication control unit -J1169-	1667
1.27 Rear passenger side door control unit -J927-	1668-1670
1.28 Front camera for driver assist systems -R242-	1671-1672
1.29 Fresh air blower control unit -J126-	1673-1674
1.30 Particulate sensor -G784-	1675-1676
1.31 Control unit for heads-up display -J898-	1677-1678
1.32 Display unit for front information display and operating unit control unit -J685-	1679-1680
1.33 Active steering control unit -J792-	1681-1682
1.34 Control unit for seat belt microphone -J886-	1683-1685
1.35 Chip card reader control unit -J676-	1686
1.36 Seat occupied recognition control unit -J706-	1687
1.37 Left neck heating control unit -J846-/right neck heating control unit -J847-, for Cabriolet	1688-1689
1.38 Control unit for driver multicontour seat -J873-/control unit for front passenger multicontour seat -J872-	1690
1.39 Multifunction steering wheel control unit -J453-	1691
1.40 Android operating system control unit -J1243-	1692
1.41 Control unit for NOx sender 2 -J881-/ -GX46-	1693-1695
1.41.1 Control unit for NOx sender 2 -J881-/ -GX46-, near gearbox, for models with engine codes DMGA, DMKC	1694
1.41.2 Control unit for NOx sender 2 -J881-/ -GX46-, on underbody	1695
1.42 Control unit for NOx sender 3 -J1183-/ -GX50-	1696-1698
1.42.1 Control unit for NOx sender 3 -J1183-/ -GX50-, for models with engine codes DMGA, DMKC	1696-1697
1.42.2 Control unit for NOx sender 3 -J1183-/ -GX50-, for models with engine codes DEZB, DEZE, DTNB, DTPA	1698
1.43 Selector lever -E313-	1699-1701
806 - - Fitting locations: Control units in rear part of vehicle - 1	1702-1768
1. - Fitting locations: Control units in rear part of vehicle	1702-1768
1.1 Overview of control units in rear part of vehicle (Coupé or Sportback)	1703-1705
1.2 Overview of control units in rear part of vehicle (Cabriolet)	1706-1707
1.3 Trailer detector control unit -J345-	1708-1709
1.4 Convenience system central control unit -J393-	1710-1712
1.5 Differential lock control unit -J187-	1713-1714
1.6 Digital sound package control unit -J525-	1715-1720
1.6.1 Digital sound package control unit -J525- (Coupé or Sportback)	1715-1717
1.6.2 Digital sound package control unit -J525- (Cabriolet)	1718-1720
1.7 Garage door operation control unit -J530-	1721-1722
1.8 Rear lid control unit -J605-	1723-1724
1.9 Lane change assist control unit -J769-	1725-1726
1.10 Lane change assist control unit 2 -J770-	1727-1728
1.11 Reversing camera system control unit -J772-	1729-1730
1.12 Control unit for reducing agent metering system -J880-	1731-1732
1.13 Control unit for overhead view camera -J928-	1733-1734
1.14 Rear lid power opening control unit -J938-	1735-1738
1.14.1 Rear lid power opening control unit -J938-, to September 2019	1735-1736
1.14.2 Rear lid power opening control unit -J938-, from October 2019	1737-1738
1.15 Remote control receiver for auxiliary heater -R64-	1739-1740
1.16 TV tuner -R78-	1741-1742

1.17 Aerial amplifier for mobile telephone -R86-	1743-1744
1.17.1 Aerial amplifier for mobile telephone -R86- (Coupé or Sportback)	1743
1.17.2 Aerial amplifier for mobile telephone -R86- (Cabriolet)	1744
1.18 Battery monitor control unit -J367-	1745-1746
1.19 Engine sound generator control unit -J943-	1747
1.20 Second battery -A1-	1748
1.21 Convertible roof actuation control unit -J256-	1749-1750
1.22 Special vehicle control unit -J608-	1751-1756
1.22.1 Special vehicle control unit -J608- (Coupé or Sportback)	1752-1753
1.22.2 Special vehicle control unit -J608- (Cabriolet)	1754-1756
1.23 Battery 48 V -A6-	1757
1.24 Voltage converter, 48 V/12 V -A7-	1758-1759
1.25 Emergency call module control unit and communication unit -J949-	1760-1765
1.25.1 Emergency call module control unit and communication unit -J949- (Coupé or Sportback), to September 2019	1760-1761
1.25.2 Emergency call module control unit and communication unit -J949- (Coupé or Sportback), from October 2019	1762-1763
1.25.3 Emergency call module control unit and communication unit -J949- (Coupé or Sportback), from December 2021, only for China with external vehicle communication (GW2)	1764
1.25.4 Emergency call module control unit and communication unit -J949- (Cabriolet)	1765
1.26 Tyre Pressure Monitoring System control unit -J502-	1766-1768
807 - -Fitting locations: Coupling points - 1	1769-1826
1. -Fitting locations: Coupling points	1769-1826
1.1 Coupling point for radiator blind -TKJ-/ coupling point in top of engine -TMO-/ coupling point in left of engine compartment -TML-/ coupling point in centre of engine compartment -TMM-/ coupling point in engine compartment -TM-coupling point 1 for engine pre-wiring harness, adapter wire -TMOAD1-	1770-1782
1.1.1 Coupling point in engine compartment -TM-, all engines	1770
1.1.2 Coupling point for radiator blind -TKJ-, top/ coupling point in engine compartment -TM-	1771
1.1.3 Coupling point for radiator blind -TKJ-, bottom	1772
1.1.4 Coupling point in engine compartment -TM-/ coupling point at left in engine compartment -TML-/ coupling point at centre of engine compartment -TMM-/ coupling point at top of engine compartment -TMO-, 2.0 l petrol engine	1773-1774
1.1.5 Coupling point in top of engine -TMO-, 3.0 l diesel engine, engine codes DMGA, DMKC	1775
1.1.6 Coupling point at left in engine compartment -TML-, 1.4 l petrol engine or 2.0 l diesel engine	1775-1776
1.1.7 Coupling point in left of engine compartment -TML-, 3.0 l diesel engine, engine code CRTC, CSWB, DCPC, DCPE, DEWA, DEWB	1777-1778
1.1.8 Coupling point in left of engine compartment -TML-, 3.0 l diesel engine, engine codes DMGA, DMKC	1779
1.1.9 Coupling point on left in engine compartment -TML-, 2.0 l CNG engine	1779
1.1.10 Coupling point in middle of engine compartment -TMM-, 3.0 litre petrol engine	1780
1.1.11 Coupling point in centre of engine compartment -TMM-, 3.0 l diesel engine, engine code CRTC, CSWB, DCPC, DCPE, DEWA, DEWB	1781
1.1.12 Coupling point 1 for engine prewiring harness, adapter wire -TMOAD1-	1782
1.2 Coupling point in engine compartment, right -TMR-	1783-1784
1.3 Coupling point on front left door -TTVL-	1785
1.4 Coupling point on front right door -TTVR-	1785
1.5 Coupling point on rear left door -TTHL-	1786
1.6 Coupling point on rear right door -TTHR-	1787
1.7 Coupling point on left A-pillar, bottom -TALU-	1788-1792
1.7.1 Coupling point on left A-pillar, bottom -TALU-, left-hand drive models, to October 2016	1789-1790
1.7.2 Coupling point on left A-pillar, bottom -TALU-, left-hand drive models, from November 2016	1791
1.7.3 Coupling point on left A-pillar, bottom -TALU-, right-hand drive models	1791-1792
1.8 Coupling point right A-pillar, bottom -TARU-	1793-1796
1.8.1 Coupling point on right A-pillar, bottom -TARU-, left-hand drive models	1793-1794
1.8.2 Coupling point on right A-pillar, bottom -TARU-, right-hand drive models	1795-1796
1.9 Coupling point in centre of interior -TIM-	1797-1798
1.10 Coupling point on front left bumper -TSFVL-	1799-1800
1.11 Coupling point in left of luggage compartment -THRL-	1801-1804
1.11.1 Coupling point in luggage compartment, left -THRL-, part 1	1801-1802
1.11.2 Coupling point in luggage compartment, left -THRL-, part 2, for Cabriolet	1803
1.11.3 Coupling point in luggage compartment, left -THRL-, part 3, for Cabriolet	1803
1.11.4 Coupling point in luggage compartment, left -THRL-, part 4	1804
1.12 Coupling point for front left seat -TSVL-	1805
1.13 Coupling point for front right seat -TSVR-	1806
1.14 Coupling point for fuel tank -TAK-	1807-1810



1.14.1 Coupling point for fuel tank -TAK-, without 2.0 l CNG engine	1808-1809
1.14.2 Coupling point for fuel tank -TAK-, with equipment for China	1810
1.14.3 Coupling point for fuel tank -TAK-, with 2.0 l CNG engine	1810
1.15 Coupling point for roof -TH-	1811-1812
1.16 Coupling point on dash panel -TCP-	1813-1814
1.17 Coupling point for glove compartment wiring harness -TLH-	1815-1816
1.18 Coupling point for rear left seat -TSHL-/ coupling point for rear right seat -TSHR-	1817-1818
1.19 Coupling point in rear left wheel housing wiring -TRAHL-/ coupling point in rear right wheel housing wiring -TRAHR-	1819
1.20 Coupling point in front left door -TTIVL-/ coupling point in front right door -TTIVR-	1820
1.21 Coupling point 1 for engine compartment wiring -TM1-	1821
1.22 Coupling point in luggage compartment, centre -THRM-, for Cabriolet	1821
1.23 Coupling point in luggage compartment, right -THRR-, for Cabriolet	1822
1.24 Coupling point on rear lid, centre -THKM-, for Cabriolet	1823
1.25 Coupling point on left C-pillar -TCL-, for Cabriolet	1824
1.26 Coupling point on right C-pillar -TCR-, for Cabriolet	1825-1826