

Contents

27 - Starter, current supply, CCS	1
1 Contact corrosion	1
2 Battery	2
2.1 General information on battery	2
2.2 Maintenance-free batteries	2
2.3 Disconnecting and connecting battery in engine compartment	2
2.4 Disconnecting and connecting battery in luggage compartment	3
2.5 Removing and installing battery in engine compartment	5
2.6 Removing and installing battery in luggage compartment	7
2.7 Checking battery	11
2.8 Charging battery	11
2.9 Preparation for battery charging	12
2.10 Preparation for battery back-up operation	14
3 Removing and installing alternator	16
3.1 Vehicles with 1.8 l engine	16
3.2 Vehicles with 1.8 l turbo engine up to 05.2000	18
3.3 Vehicles with 1.8 l turbo engine as of 06.2000	20
3.4 Vehicles with 2.0 l engine	22
3.5 Vehicles with 2.4 l, 2.8 l engine	26
3.6 Vehicles with 2.7 l biturbo engine	30
3.7 Vehicles with 3.0 l engine	34
3.8 Vehicles with 4.2 l engine	38
3.9 Audi allroad with 4.2 l engine	41
3.10 Vehicles with 4.2 l turbo engine	46
3.11 Vehicles with 1.9 l TDI engine with distributor injection pump	49
3.12 Vehicles with 1.9 l TDI unit injector engine	51
3.13 Vehicles with 2.5 l TDI engine	53
4 Checking and repairing alternator	58
4.1 Checking alternator	58
4.2 Servicing alternator	58
5 Removing and installing starter	59
5.1 Vehicles with 1.8 l, 2.0 l engine	59
5.2 Vehicles with 6-cylinder engine	61
5.3 Vehicles with 4.2 l engine	62
5.4 Audi allroad with 4.2 l engine	63
5.5 Vehicles with 4.2 l turbo engine	67
5.6 Vehicles with 1.9 l TDI engine	69
6 Cruise control system (CCS) - vehicles without electronic throttle (mechanical throttle cable)	72
6.1 Removing and installing cruise control system control unit J213	72
6.2 Adjusting linkage at actuator	72
6.3 Removing and installing actuator - vehicles with 4-cylinder engine	73
6.4 Removing and installing actuator - vehicles with 6-cylinder engine	73
6.5 Removing and installing vacuum pump	74
6.6 Vacuum system leak test	74
7 Cruise control system (CCS) - vehicles with electronic throttle	75
90 - Gauges, instruments	76
1 Dash panel insert	76
1.1 "dEF" display in trip recorder	76
1.2 Removing and installing dash panel insert	76
1.3 Multi-pin connectors at dash panel insert - Vehicles up to Model Year 1999	78



1.4	Assignment of contacts at multi-pin connectors - Vehicles up to Model Year 1999	79
1.5	Multi-pin connectors at dash panel insert - Vehicles as of Model Year 2000	81
1.6	Assignment of contacts at multi-pin connectors - Vehicles as of Model Year 2000	83
1.7	Multi-pin connectors at dash panel insert - Vehicles as of Model Year 2001	86
1.8	Assignment of contacts at multi-pin connectors - Vehicles as of Model Year 2001	87
1.9	Removing and installing radio controlled clock	89
1.10	Checking vehicle speed signal	90
1.11	Checking signal from fuel gauge sender	93
1.12	Connection assignment at fuel gauge sender - Front-wheel drive vehicles	96
1.13	Connection assignment at fuel gauge sender - Four-wheel drive vehicles	97
1.14	Checking signal from coolant temperature sender	98
1.15	Checking consumption signal	100
1.16	Removing and installing oil level/oil temperature sender G266	101
92	- Windscreen wash/wipe system	103
1	Windscreen wiper system	103
1.1	Replacing wiper blade - Old version	103
1.2	Eliminating wiper judder - Old wiper blade version	103
1.3	Replacing wiper blade - New version	104
1.4	Removing and installing wiper arms	105
1.5	Adjusting wiper arms	105
1.6	Removing and installing wiper motor - Audi A6 and Audi allroad	106
1.7	Removing and installing wiper motor - Audi A6 V8, Audi S6 and Audi RS6	108
2	Windscreen washer system	112
2.1	Removing and installing washer fluid reservoir	112
2.2	Removing and installing spray jets	113
2.3	Adjusting spray jets - Audi A6 and Audi allroad	113
2.4	Adjusting spray jets - Audi A6 V8, Audi S6 and Audi RS6	114
3	Rear window wipe/wash system - Avant	116
3.1	Exploded view of rear wiper	116
3.2	Removing and installing spray jet	117
3.3	Adjusting spray jet	117
3.4	Removing and installing wiper arm	118
3.5	Adjusting wiper arm	118
3.6	Eliminating rear wiper judder	118
3.7	Exploded view of rear window wiper motor	119
3.8	Replacing connecting pipe for spray jet	120
3.9	Removing and installing rear window wiper motor	121
3.10	Removing and installing washer fluid reservoir	121
4	Headlight washer system	122
4.1	Exploded view of headlight washer system spray jets	122
4.2	Removing and installing headlight washer system spray jets	122
4.3	Removing and installing headlight washer system spray jets - Audi RS6	123
4.4	Adjusting spray jets	124
4.5	Removing and installing washer fluid reservoir	124
5	Washer fluid pipes	125
94	- Lights, bulbs, switches - exterior	126
1	Halogen headlight	126
1.1	Exploded view of halogen headlight	126
1.2	Removing and installing headlight	127
1.3	Headlight adjustment	128
1.4	Replacing dipped beam bulbs	128
1.5	Replacing main beam bulb	129
1.6	Replacing side light bulb	131

1.7	Replacing turn signal indicator bulb	132
1.8	Removing and installing headlight range control motor	132
1.9	Installing headlight housing repair set	134
1.10	Resetting headlights for driving on left or right	134
2	Halogen headlight - USA vehicles	136
2.1	Exploded view of halogen headlight	136
2.2	Removing and installing headlight	137
2.3	Headlight adjustment	138
2.4	Replacing dipped beam bulb	138
2.5	Replacing main beam bulb	139
2.6	Replacing turn signal indicator/side light bulb	140
2.7	Installing headlight housing repair set	141
3	Gas discharge headlight - all vehicles	142
3.1	Usage and safety instructions for gas discharge lamps	142
3.2	Exploded view of gas-discharge headlight	142
3.3	Removing and installing headlight	143
3.4	Headlight adjustment	145
3.5	Replacing gas-discharge lamp	145
3.6	Replacing main beam bulb	147
3.7	Replacing side light bulb	149
3.8	Removing and installing headlight screen adjustment magnet	151
3.9	Replacing turn signal indicator/side light bulb	151
3.10	Removing and installing headlight range control motor	151
3.11	Removing and installing gas-discharge lamp control unit	154
3.12	Installing headlight housing repair set	155
3.13	Resetting headlights for driving on left or right	155
4	Fog light	158
4.1	Removing and installing fog light	158
4.2	Removing and installing fog light - Audi RS6	159
4.3	Replacing fog light bulb - Screw-type cover	159
4.4	Replacing fog light bulb - Cover with bayonet catch	160
4.5	Replacing fog light bulb - Audi RS6	161
4.6	Adjusting fog lights	161
5	Side-mounted turn signal indicators	162
5.1	Removing and installing side-mounted turn signal indicator	162
6	Outer rear lights - Saloon	163
6.1	Exploded view of rear light	163
6.2	Removing and installing rear light	163
6.3	Removing and installing bulb carrier	164
7	Outer rear lights - Avant	165
7.1	Exploded view of rear light	165
7.2	Removing and installing rear light	165
7.3	Removing and installing side cover	166
7.4	Removing and installing bulb carrier	166
8	Lights in rear lid	168
8.1	Removing and installing trim panel for rear fog light and number plate light	168
8.2	Removing and installing bulb carrier for rear fog light	169
8.3	Removing and installing number plate light	169
9	High-level brake light	170
9.1	Removing and installing high-level brake light - Saloon	170
9.2	Removing and installing bulbs for high-level brake light - Saloon	170
9.3	Removing and installing high-level brake light - Avant	171
10	Steering column switch	172
10.1	Exploded view of steering column switch	172

10.2	Removing and installing steering column switch	172
10.3	Removing and installing coil connector with slip ring and steering angle sender G85	175
10.4	Removing and installing switch for windscreen wiper/washer, DIS, turn signal indicator/light control, CCS	176
10.5	Connection assignment at steering column switch	176
11	Lock cylinder and ignition/starter switch	179
11.1	Removing and installing lock cylinder	179
11.2	Removing and installing ignition/starter switch	181
11.3	Connection assignment at ignition/starter switch	181
12	Parking aid	182
12.1	Exploded view of parking aid	182
12.2	Removing and installing parking aid control unit J446	183
12.3	Removing and installing front parking aid warning buzzer H22 (8-channel parking aid)	184
12.4	Removing and installing rear parking aid warning buzzer H15 - Saloon	185
12.5	Removing and installing rear parking aid warning buzzer H15 - Avant	185
12.6	Removing and installing front parking aid sender	185
12.7	Removing and installing rear parking aid sender - Audi A6 and Audi S6	186
12.8	Removing and installing rear parking aid sender - Audi RS6 and Audi allroad	186
13	Automatic headlight range control	188
13.1	Exploded view of automatic headlight range control	188
13.2	Removing and installing headlight range control unit J431 - vehicles up to 07.1998	189
13.3	Removing and installing headlight range control unit J431 - vehicles as of 08.1998	190
96	Lights, bulbs, switches - interior	191
1	Switches	191
1.1	Removing and installing light switch	191
1.2	Removing and installing switches and instruments illumination regulator E20 / headlight range control regulator E102	191
1.3	Removing and installing hazard warning light switch E3	191
1.4	Removing and installing switches in centre console	192
1.5	Removing and installing operating unit to regulate suspension height E281	193
1.6	Removing and installing front seat heating switches	195
1.7	Removing and installing rear seat heating switch	195
1.8	Removing and installing glove box light switch	196
1.9	Removing and installing steering column adjustment switch E167	197
1.10	Removing and installing mirror adjustment switch E43	198
1.11	Removing and installing navigation system operating unit E199	199
1.12	Removing and installing parking aid button E266 - Audi allroad	199
1.13	Removing and installing front left/front right window regulator switch E40 / E41	199
1.14	Removing and installing front right window regulator switch E41	200
1.15	Removing and installing rear left/rear right window regulator switch E52 / E54	201
1.16	Removing and installing switch for seat memory with button for seat memory ON/OFF	202
1.17	Removing and installing door contact switch	203
1.18	Removing and installing driver side/front passenger side interior locking switch E150 / E198 (central locking switch)	203
1.19	Removing and installing interior monitor switch E183	203
1.20	Removing and installing rear lid release switch E165 - USA vehicles	204
1.21	Removing and installing garage door operating unit E284 - USA vehicles	204
1.22	Removing and installing sliding sunroof adjustment regulator E139	205
1.23	Removing and installing telematics operating unit - USA vehicles	205
1.24	Removing and installing front interior light switch	206
1.25	Removing and installing rear lid contact switch with separately replaceable microswitch	207
1.26	Removing and installing rear lid contact switch with integrated microswitch	207
1.27	Removing and installing 12 V socket in luggage compartment	208
2	Immobilizer	209
3	Ultrasonic interior monitor	210

3.1	Removing and installing anti-theft alarm ultrasonic sensor - Vehicles up to 09.2002	210
3.2	Removing and installing anti-theft alarm ultrasonic sensor - Vehicles as of 10.2002	210
3.3	Removing and installing ultrasonic sensor control unit J347	212
3.4	Removing and installing anti-theft alarm system horn - Saloon	213
3.5	Removing and installing anti-theft alarm system horn - Avant	213
4	Interior lights	215
4.1	Removing and installing light for make-up mirror	215
4.2	Removing and installing front interior light	215
4.3	Replacing bulbs for front interior light	216
4.4	Removing and installing front reading light	216
4.5	Replacing bulbs for front reading light	217
4.6	Removing and installing front passenger side airbag deactivated warning lamp K145	217
4.7	Removing and installing rear interior light/reading light	217
4.8	Replacing bulb for rear interior light	218
4.9	Replacing bulb for rear reading light	219
4.10	Removing and installing coin tray light	219
4.11	Removing and installing glove box light	220
4.12	Removing and installing front ashtray light	221
4.13	Removing and installing bulb for door opener light	221
4.14	Removing and installing door safety light and entry light	221
4.15	Removing and installing rear door ashtray light	222
4.16	Removing and installing footwell lights	223
4.17	Removing and installing luggage compartment lights - Saloon	223
4.18	Removing and installing luggage compartment light - Avant	223
4.19	Removing and installing bulb for luggage compartment light - Avant	224
4.20	Removing and installing rear lid light - Avant	224
5	Horn	226
5.1	Removing and installing horn	226
6	Heated steering wheel	227
7	Towing bracket	228
97 - Wiring		229
1	Relay carrier, fuse carrier	229
1.1	Removing and installing fuse carrier	229
1.2	Removing and installing micro-central electrics	230
1.3	Removing and installing 13-position relay carrier	231
1.4	Removing and installing 8-position relay carrier	232
1.5	Removing and installing 3-position relay and fuse carrier	232
1.6	Removing and installing left A-pillar connector point	233
1.7	Removing and installing driver/passenger side electronics box	234
1.8	Removing and installing steering column/belt height adjustment control unit J352	235
1.9	Removing and installing right A-pillar connector point	235
1.10	Removing and installing plenum chamber electronics box	236
1.11	Removing and installing 3-position relay carrier in plenum chamber electronics box	238
1.12	Removing and installing connector point beneath electronics box in plenum chamber	239
1.13	Removing and installing main fuse carrier	240
1.14	Removing and installing main fuse carrier - Audi RS6	240
2	Wiring harness and connector repair	242
3	Repairing contact housings and connectors	243
4	Release and dismantling of contact housings	244
5	Repairing aerial wires	245
6	Vehicle diagnostic, testing and information systems	246