

Contents

91 - Radio, telephone, navigation	1
1 Radio systems	1
1.1 General notes	1
1.2 Layout of radio systems	2
1.3 Connectors at radio "chorus"	8
1.4 Connectors at radio "concert"	9
1.5 Connectors at radio "symphony"	14
1.6 Connector on CD changer R41	19
1.7 Connector at amplifier R12 (BOSE)	20
1.8 Connection points for aerials at rear window (Saloon)	20
1.9 Connection points for aerials at rear side windows (Avant)	21
1.10 Radio systems "chorus" and, up to MY 01, "concert" (Saloon) - exploded view of components	22
1.11 Radio systems "chorus" and, up to MY 01, "concert" (Avant) - exploded view of components	23
1.12 Radio systems "symphony" and, from MY 02, "concert" (Saloon) - exploded view of components	24
1.13 Radio systems "symphony" and, from MY 02, "concert" (Avant) - exploded view of components	25
1.14 Pre-fitted components for radio installation	26
1.15 Removing and installing radio "chorus" and "concert"	28
1.16 Removing and installing radio "symphony"	28
1.17 Removing and installing CD changer R41	29
1.18 Removing and installing loudspeakers	30
1.19 Removing and installing amplifier with bass loudspeaker (on right in luggage compartment) R43 (Saloon)	31
1.20 Removing and installing amplifier with bass loudspeaker (on right in luggage compartment) R43 (Avant)	32
1.21 Removing and installing amplifier with bass loudspeaker (on right in luggage compartment) R43 (BOSE) (Saloon)	33
1.22 Removing and installing amplifier with bass loudspeaker (on right in luggage compartment) R43 (BOSE) (Avant)	33
1.23 Removing and installing aerial amplifier (telephone/radio) R45 (Saloon)	34
1.24 Removing and installing aerial amplifier 2, TV R83 (Saloon)	34
1.25 Removing and installing aerial amplifier 2, TV R83 (Avant)	35
1.26 Removing and installing aerial selection control unit J515 (Saloon)	35
1.27 Removing and installing aerial selection control unit J515 (Avant)	36
1.28 Removing and installing power aerial (Saloon)	36
1.29 Roof aerial (Avant)	37
2 Servicing telephone system	39
2.1 General notes	39
2.2 Telephone (fixed installation)	39
2.3 Mobile phone and, as of MY 02, pre-fitted components for mobile phone system installation	41
2.4 Pre-fitted components for mobile phone system installation (up to 6/98)	42
2.5 Pre-fitted components for mobile phone system installation (from 7/98 to MY 01)	43
2.6 Connectors and connector assignment	44
2.7 Removing and installing handset with cradle in centre console	47
2.8 Removing and installing handset with cradle in centre armrest	47
2.9 Removing and installing mobile phone with cradle in centre console	48
2.10 Removing and installing mobile phone with cradle in centre armrest	49
2.11 Removing and installing telephone transmitter and receiver unit R36 (Saloon, up to MY 98)	49
2.12 Removing and installing telephone transmitter and receiver unit R36 (Avant) (Saloon, from MY 99)	50

2.13	Removing and installing telephone transmitter and receiver unit R36 (Saloon, from MY 00)	50
2.14	Removing and installing telephone/telematics control unit J526 (vehicles equipped with telephone only)	51
2.15	Removing and installing mobile telephone operating electronics control unit J412	51
2.16	Removing and installing aerial amplifier for mobile phone R86 (Saloon)	52
2.17	Removing and installing aerial amplifier for mobile phone R86 (Avant)	52
2.18	Removing and installing multi-function steering wheel interface R88 (up to MY 99)	53
2.19	Removing and installing telephone microphone R38 (up to MY 99)	53
2.20	Removing and installing telephone microphone R38 (from MY 00)	54
2.21	Removing and installing telephone/navigation systems loudspeaker R39	55
2.22	Removing and installing radio/telephone aerial R51 (Saloon)	55
2.23	Retrofitting radio/telephone aerial R51 (Saloon)	56
2.24	Removing and installing radio/telephone aerial (roof aerial) R51 (Saloon)	57
2.25	Removing and installing aerial filter R87 (auxiliary heater) (Saloon)	57
2.26	Removing and installing aerial filter R87 (auxiliary heater) (Avant)	58
3	Navigation system I (up to CW 26/99)	60
3.1	General notes	60
3.2	Overview	61
3.3	Navigation system I - exploded view of components	64
3.4	Service information on navigation system I	66
3.5	Questions to ask the customer if problems are reported	66
3.6	Action to be taken following service work or tyre change	68
3.7	Calling up technical services software	69
3.8	Automatic checking of current parameters	71
3.9	Wheel calibration after changing tyres or renewing control unit	71
3.10	Performing wiring test	78
3.11	Performing test drive (basic calibration)	82
3.12	Performing system test	87
3.13	Starting navigation	96
3.14	Entering current positon	97
3.15	Obtaining software version	99
3.16	Notes on renewing navigation system components	100
3.17	Removing and installing navigation system with CD drive control unit J401	100
3.18	Removing and installing navigation system operating unit E199	101
3.19	Removing and installing operating electronics control unit for navigation J402	101
3.20	Removing and installing navigation aerial (GPS) R50 (Saloon)	101
3.21	Removing and installing magnetic field sender (compass) G197 (Saloon)	102
3.22	Removing and installing magnetic field sender (compass) G197 (Avant)	102
3.23	Removing and installing heated rear window shunt resistor N219 (Saloon)	103
4	Navigation system II (Navigation System plus) (up to week 47/99)	105
4.1	General notes	105
4.2	Navigation system II - exploded view of components	105
4.3	Navigation system II (BOSE) - exploded view of components	107
4.4	Connectors on operating electronics control unit for navigation J402	108
4.5	Connectors on navigation/TV tuner J415 (up to MY 00)	110
4.6	Connection points for aerials at rear window (Saloon)	112
4.7	Connection points for TV aerials in rear side windows (Avant)	113
4.8	Radio/navigation system II - overview of components	114
4.9	Removing and installing operating electronics control unit for navigation J402	115
4.10	Removing and installing navigation/TV tuner J415	116
4.11	Removing and installing aerial amplifier (telephone/radio) R45 (Saloon)	117
4.12	Removing and installing aerial amplifier 1, TV R82 (Saloon)	118
4.13	Removing and installing aerial amplifier 1, TV R82 (Avant)	119
4.14	Checking operation of individual TV aerial amplifiers	119
5	Navigation system II-D (Navigation System plus) RNS 4.1 (from week 48/99)	121

5.1	General notes	121
5.2	On-screen fault messages	121
5.3	Navigation system II-D (Saloon) - overview of components	123
5.4	Navigation system II-D (Avant) - overview of components	124
5.5	Navigation system II-D BOSE (Saloon) - exploded view of components	125
5.6	Navigation system II-D BOSE (Avant) - exploded view of components	126
5.7	Connectors on operating electronics control unit for navigation J402	127
5.8	Connectors on navigation/TV tuner J415 (from MY 01)	129
5.9	Connectors on navigation interface R94	131
5.10	Connectors on aerial selection control unit J515	132
5.11	Navigation system II-D (Saloon) - exploded view of components	133
5.12	Navigation system II-D (Avant) - exploded view of components	135
5.13	Removing and installing navigation interface R94	136
6	Navigation system III (route navigation) (from week 27/99 to week 03/01)	137
6.1	General notes	137
6.2	Navigation system III - overview of components	137
6.3	Connectors on navigation system with CD drive control unit J401	138
6.4	Navigation system III - exploded view of components	139
6.5	Removing and installing function selection switch II E272	140
7	Navigation system Nav IV (BNS 4.0) (from week 04/01)	142
7.1	General notes	142
7.2	Navigation system BNS 4.0 - exploded view of components	142
7.3	Connectors and contact assignments	142
7.4	BNS 4.0 - exploded view of components	142
8	Navigation system RNS-E	143
8.1	General notes	143
8.2	On-screen fault messages	143
8.3	Navigation system RNS-E (Avant) - overview of components	144
8.4	Navigation system RNS-E BOSE (Avant) - overview of components	145
8.5	Connectors on operating electronics control unit for navigation J402	146
8.6	Connectors on navigation/TV tuner J415	148
8.7	Connectors on aerial selection control unit J515	149
8.8	Navigation system RNS-E (Avant) - exploded view of components	149
8.9	Removing and installing operating electronics control unit for navigation J402	151
9	Multi-function steering wheel	153
9.1	General notes	153
9.2	Multi-function steering wheel (up to MY 01) - exploded view of components	153
9.3	Multi-function steering wheel (from MY 02) - exploded view of components	155
9.4	Assignment of buttons on multi-function steering wheels	156
9.5	Removing and installing multi-function buttons	160
9.6	Removing and installing tiptronic buttons	161
9.7	Removing and installing multi-function steering wheel control unit J453	161
10	Speech dialogue system	163
10.1	General notes	163
10.2	Overview of speech control system	163
10.3	Connectors on language input control unit J507	165
10.4	Speech control system - exploded view of components	165
10.5	Removing and installing the language input control unit J507	167
11	Telematics system	168
11.1	General notes	168
11.2	Overview of telematics system	168
11.3	Connectors on telephone/telematics control unit J526	170
11.4	Telematics system - exploded view of components	172
11.5	Removing and installing telephone/telematics control unit J526	174
11.6	Activating/deactivating service mode	175

11.7	Renewing telematics SIM card	176
11.8	Initialising telephone/telematics control unit J526	176
11.9	Removing and installing aerial filter (GPS) R110 (Saloon)	177
11.10	Removing and installing aerial filter (GPS) R110 (Avant)	178
11.11	Removing and installing emergency call button E276 and breakdown help button E275	179
11.12	Removing and installing telephone microphone R38	179
11.13	Removing and installing emergency battery for telematics A16	179
11.14	Removing and installing additional loudspeaker for telematics R91 (emergency loudspeaker)	180
11.15	Removing and installing additional aerial for telematics R90 (emergency aerial)	180
12	CAN Bus systems	182
12.1	General description	182
12.2	CAN bus (Infotainment) - overview	182
13	Electronic logbook	184
13.1	General description	184
13.2	Electronic logbook	184
13.3	Fault message	184
13.4	Removing and installing chip card reader unit R99	184