

Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine features	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Removing	4
1.3 Attaching engine to repair stand	18
1.4 Installing	19
1.5 Tightening torques	20
13 - Crankshaft group	22
1 Dismantling and assembling engine	22
1.1 Dismantling and assembling engine	22
1.2 Ribbed belt drive for vane pump, alternator and viscous fan	22
1.3 Removing and installing ribbed belt	28
1.4 Removing and installing vibration damper	31
1.5 Toothed belt drive	35
1.6 Removing and installing toothed belt	39
1.7 Detaching toothed belt from camshaft sprocket	45
1.8 Turning crankshaft to TDC with engine removed	50
2 Removing and installing crankshaft, flywheel and sealing flanges	52
2.1 Removing and installing crankshaft, flywheel and sealing flanges	52
2.2 Replacing crankshaft oil seal on pulley end	59
2.3 Removing and installing dual-mass flywheel	60
2.4 Extracting needle bearing from flywheel/driving in	62
2.5 Crankshaft dimensions	63
3 Dismantling and assembling piston and conrod	64
3.1 Dismantling and assembling piston and conrod	64
3.2 Piston and cylinder dimensions	69
3.3 Checking conrod radial clearance	69
15 - Cylinder head, Valve gear	71
1 Removing and installing cylinder head	71
1.1 Removing and installing cylinder head	71
1.2 Exploded view of intake manifold	72
1.3 Exploded view of cylinder head	75
1.4 Removing and installing cylinder head cover	79
1.5 Removing cylinder head	81
1.6 Installing cylinder head	87
1.7 Checking compression	89
2 Servicing valve gear	92
2.1 Servicing valve gear	92
2.2 Checking axial clearance of camshafts	97
2.3 Replacing camshaft oil seal	98
2.4 Removing and installing camshafts	100
2.5 Checking hydraulic bucket tappets	103
2.6 Replacing valve stem seals	105
2.7 Checking valve guides	108
2.8 Checking valves	109
2.9 Replacing valve guides	110



2.10	Reworking valve seats	112
17	- Lubrication	115
1	Removing and installing lubrication system components	115
1.1	Removing and installing lubrication system components	115
1.2	Exploded view of components	116
1.3	Removing and installing sump	125
1.4	Removing and installing oil pump	128
1.5	Checking oil pressure and oil pressure switch	131
1.6	Engine oil	133
1.7	Checking oil level	133
19	- Cooling system	135
1	Removing and installing cooling system components	135
1.1	Removing and installing cooling system components	135
1.2	Cooling system components	136
1.3	Draining off and topping up coolant	140
1.4	Removing and installing coolant pump	144
1.5	Removing, installing and checking thermostat	145
1.6	Exploded view of radiator and radiator fan	147
1.7	Removing and installing viscous fan	151
1.8	Checking viscous fan	153
1.9	Removing and installing radiator	153
1.10	Checking cooling system for leaks	157
21	- Charging	159
1	Checking charge air system with turbocharger	159
1.1	Checking charge air system with turbocharger	159
1.2	Test requirements for checking turbocharging	159
1.3	Effects of leakage at intake and exhaust end	160
1.4	Checking charge pressure	160
1.5	Connection diagram for charge pressure control	163
1.6	Checking charge pressure control solenoid valve -N75	165
1.7	Checking overrun shutoff valve	171
2	Servicing charge air system with turbocharger	172
2.1	Servicing charge air system with turbocharger	172
2.2	Rules for cleanliness	172
2.3	Exploded view of turbocharger removal and installation	173
2.4	Removing and installing turbocharger	177
2.5	Removing and installing charge air cooling system components	181
2.6	Removing and installing charge air cooler	183
26	- Exhaust system	185
1	Removing and installing exhaust system components	185
1.1	Removing and installing exhaust system components	185
1.2	Removing and installing exhaust manifold	192
1.3	Separating centre and rear silencer	192
1.4	Stress-free alignment of exhaust system	193
1.5	Checking exhaust system for leaks	197