



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety precautions when working in the vicinity of high-voltage components | 1 |
| 1.2 Safety precautions when working on high-voltage system | 1 |
| 1.3 Safety measures when working on vehicles with a start/stop system | 2 |
| 2 Hazard classification for the high-voltage system | 3 |
| 50 - Body - front | 10 |
| 1 Lock carrier | 10 |
| 1.1 Assembly overview - lock carrier | 10 |
| 1.2 Removing and installing lock carrier | 13 |
| 1.3 Moving to and back from service position | 16 |
| 1.4 Removing and installing air duct | 23 |
| 1.5 Removing and installing connecting part for impact bar/subframe | 27 |
| 1.6 Removing and installing lock carrier struts | 27 |
| 2 Wings | 30 |
| 2.1 Assembly overview - wing | 30 |
| 2.2 Removing and installing wing | 31 |
| 3 Bulkhead | 36 |
| 3.1 Assembly overview - plenum chamber cover | 36 |
| 3.2 Removing and installing plenum chamber cover | 39 |
| 4 Carrier frame for high-voltage components | 44 |
| 4.1 Assembly overview - carrier frame for high-voltage components | 44 |
| 51 - Body - centre | 45 |
| 1 Carrier frame for high-voltage battery 1 AX2 | 45 |
| 1.1 Assembly overview - carrier frame for high-voltage battery 1 AX2 | 45 |
| 1.2 Removing and installing high-voltage battery 1 AX2 | 46 |
| 2 Deformation elements | 47 |
| 2.1 Assembly overview - deformation elements | 47 |
| 2.2 Remove and install deformation elements | 47 |
| 55 - Bonnet, rear lid | 49 |
| 1 Bonnet (hood) | 49 |
| 1.1 Assembly overview - bonnet | 49 |
| 1.2 Assembly overview - Bowden cable | 52 |
| 1.3 Removing and installing bonnet | 53 |
| 1.4 Adjusting bonnet | 55 |
| 1.5 Removing and installing bonnet lock | 57 |
| 1.6 Removing and installing bonnet release lever | 58 |
| 1.7 Removing and installing striker pin | 59 |
| 1.8 Removing and installing hinges | 60 |
| 1.9 Removing and installing insulation | 61 |
| 1.10 Removing and installing Bowden cable | 63 |
| 1.11 Removing and installing support rod | 64 |
| 2 Tank flap unit | 65 |
| 2.1 Assembly overview - tank flap unit | 65 |
| 2.2 Removing and installing fuel tank flap | 66 |
| 57 - Front doors, door components, central locking | 69 |
| 1 Door | 69 |
| 1.1 Assembly overview - door | 69 |



| | | |
|-----------|--|------------|
| 1.2 | Assembly overview - door seals | 70 |
| 1.3 | Removing and installing inner door seal | 73 |
| 1.4 | Removing and installing door | 75 |
| 1.5 | Adjusting door | 77 |
| 1.6 | Adjusting striker pin | 78 |
| 1.7 | Removing and installing door hinge | 79 |
| 1.8 | Removing and installing door arrester | 80 |
| 2 | Door components | 82 |
| 2.1 | Assembly overview - door components | 82 |
| 2.2 | Assembly overview - window regulator | 84 |
| 2.3 | Assembly overview - door handle and door lock | 85 |
| 2.4 | Assembly overview - window channels and window slot (aperture) seals | 86 |
| 2.5 | Removing and installing window regulator motor | 86 |
| 2.6 | Removing and installing window regulator | 87 |
| 2.7 | Removing and installing inner door cover | 88 |
| 2.8 | Removing and installing striker pin | 89 |
| 2.9 | Removing and installing door handle | 90 |
| 2.10 | Removing and installing door handle bracket | 91 |
| 2.11 | Removing and installing door lock | 92 |
| 2.12 | Removing and installing window channel | 94 |
| 2.13 | Removing and installing lock cylinder | 95 |
| 2.14 | Removing and installing cap on door handle | 97 |
| 2.15 | Removing and installing inner window slot seal | 97 |
| 2.16 | Removing and installing outer window slot seal | 98 |
| 3 | Central locking | 99 |
| 3.1 | Overview of fitting locations - central locking | 99 |
| 3.2 | Removing and installing driver door control unit J386 and front passenger door control unit J387 | 100 |
| 3.3 | Removing and installing ignition key battery | 100 |
| 3.4 | Removing and installing cap on ignition key | 101 |
| 3.5 | Removing and installing bonnet contact switch F387 | 103 |
| 58 | Rear doors, door components | 104 |
| 1 | Door | 104 |
| 1.1 | Assembly overview - door | 104 |
| 1.2 | Assembly overview - door seals | 105 |
| 1.3 | Removing and installing door | 105 |
| 1.4 | Adjusting door | 106 |
| 1.5 | Adjusting striker pin | 108 |
| 1.6 | Removing and installing door hinges | 110 |
| 1.7 | Removing and installing door arrester | 111 |
| 1.8 | Removing and installing inner door seal | 113 |
| 2 | Door components | 114 |
| 2.1 | Assembly overview - door handle and door lock | 114 |
| 2.2 | Removing and installing door components | 120 |
| 2.3 | Removing and installing striker pin | 128 |
| 2.4 | Removing and installing door handle | 130 |
| 2.5 | Removing and installing door handle bracket | 131 |
| 2.6 | Removing and installing door lock | 134 |
| 2.7 | Removing and installing cap on door handle | 141 |
| 2.8 | Removing and installing lock cylinder | 143 |
| 3 | Sliding door | 145 |
| 3.1 | Assembly overview - sliding door | 145 |
| 3.2 | Assembly overview - door seals | 148 |
| 3.3 | Removing and installing sliding door | 149 |



| | | |
|-----------|---|------------|
| 3.4 | Adjusting sliding door | 151 |
| 3.5 | Removing and installing add-on parts | 156 |
| 3.6 | Removing and installing inner door seal | 160 |
| 4 | Wing door | 162 |
| 4.1 | Assembly overview - wing door | 162 |
| 4.2 | Assembly overview - door seals | 165 |
| 4.3 | Removing and installing wing door | 165 |
| 4.4 | Adjusting wing door | 166 |
| 4.5 | Removing and installing hinges | 167 |
| 4.6 | Removing and installing door attachments, wing door | 169 |
| 4.7 | Removing and installing outer door seal | 174 |
| 4.8 | Removing and installing inner door seal | 175 |
| 63 | - Bumpers | 177 |
| 1 | Bumper, front | 177 |
| 1.1 | Assembly overview - bumper cover | 177 |
| 1.2 | Removing and installing bumper cover | 179 |
| 1.3 | Removing and installing impact bar | 182 |
| 1.4 | Removing and installing add-on parts | 184 |
| 2 | Bumper, rear | 188 |
| 2.1 | Assembly overview - bumper cover | 188 |
| 2.2 | Assembly overview - impact bar | 190 |
| 2.3 | Removing and installing bumper cover | 192 |
| 2.4 | Removing and installing impact bar | 196 |
| 2.5 | Removing and installing add-on parts | 197 |
| 2.6 | Installing holder for parking aid sender | 199 |
| 64 | - Glazing | 201 |
| 1 | Repair notes | 201 |
| 1.1 | Minimum curing periods for bonded windows | 201 |
| 1.2 | Window repair | 201 |
| 1.3 | Installation instructions for bonded windows | 202 |
| 1.4 | Preparing old undamaged windows for fitting | 204 |
| 1.5 | Preparing new windows for installing | 204 |
| 1.6 | Preparing body flange for fitting | 205 |
| 1.7 | Cleaning off excess adhesive | 206 |
| 2 | Windscreen | 207 |
| 2.1 | Assembly overview - windscreen | 207 |
| 2.2 | Removing and installing windscreen | 207 |
| 3 | Rear windscreen | 213 |
| 3.1 | Assembly overview - rear window | 213 |
| 3.2 | Removing and installing rear window | 216 |
| 4 | Side window | 228 |
| 4.1 | Assembly overview - front side window | 228 |
| 4.2 | Assembly overview - rear side windows | 230 |
| 4.3 | Removing and installing front side window | 232 |
| 4.4 | Removing and installing rear side window | 237 |
| 5 | Door windows | 241 |
| 5.1 | Assembly overview - rear door window | 241 |
| 5.2 | Removing and installing front door window | 241 |
| 5.3 | Removing and installing fixed front door window | 242 |
| 5.4 | Removing and installing rear door window | 243 |
| 66 | - Exterior equipment | 247 |
| 1 | Radiator grille and front trim | 247 |



| | | |
|-----------|---|------------|
| 1.1 | Assembly overview - radiator grille | 247 |
| 1.2 | Removing and installing radiator grille | 248 |
| 2 | Mouldings, trims, extensions | 249 |
| 2.1 | Assembly overview - covers | 249 |
| 2.2 | Assembly overview - wheel arch covers | 251 |
| 2.3 | Assembly overview - heat shield | 252 |
| 2.4 | Removing and installing cover | 253 |
| 2.5 | Removing and installing trim strip | 264 |
| 2.6 | Removing and installing B-pillar trim | 265 |
| 2.7 | Removing and installing wheel arch covers | 266 |
| 2.8 | Removing and installing underbody heat shield | 268 |
| 3 | Noise insulation | 270 |
| 3.1 | Assembly overview - noise insulation | 270 |
| 3.2 | Removing and installing noise insulation | 271 |
| 4 | Underbody cladding | 274 |
| 4.1 | Overview of fitting locations - underbody cladding | 274 |
| 4.2 | Assembly overview - underbody cladding | 277 |
| 4.3 | Removing and installing underbody cladding | 279 |
| 4.4 | Removing and installing underbody cladding, e-Crafter or e-TGE | 287 |
| 5 | Roof rails for roof load carrier | 292 |
| 5.1 | Assembly overview - roof rails for roof load carrier | 292 |
| 6 | Exterior mirror | 293 |
| 6.1 | Assembly overview - exterior mirror | 293 |
| 6.2 | Removing and installing exterior mirror | 295 |
| 6.3 | Removing and installing mirror glass | 295 |
| 6.4 | Removing and installing mirror cover | 296 |
| 6.5 | Removing and installing mirror trim | 297 |
| 7 | Wheel housing liner | 299 |
| 7.1 | Assembly overview - front wheel housing liner | 299 |
| 7.2 | Removing and installing front wheel housing liner | 299 |
| 8 | Lettering and emblems | 302 |
| 8.1 | Assembly overview - lettering and emblems | 302 |
| 8.2 | Dimensions - lettering and emblems on rear | 308 |
| 8.3 | Dimensions - lettering and emblems on sides | 311 |
| 8.4 | Renewing lettering and badges at rear | 311 |
| 8.5 | Renewing lettering and badges | 314 |
| 8.6 | Removing and installing lettering and emblems for radiator grille | 315 |
| 9 | Towing bracket | 318 |
| 9.1 | Assembly overview - towing bracket | 318 |
| 9.2 | Removing and installing towing bracket | 319 |
| 10 | Spare wheel bracket | 324 |
| 10.1 | Assembly overview - spare wheel bracket | 324 |
| 10.2 | Removing and installing spare wheel bracket | 325 |
| 10.3 | Removing and installing tether | 327 |
| 10.4 | Removing and installing spare wheel winch bracket | 328 |
| 11 | Mudflap | 330 |
| 11.1 | Assembly overview - mudflap | 330 |
| 11.2 | Removing and installing mudflaps | 330 |
| 12 | Load floor body | 333 |
| 12.1 | Contact corrosion | 333 |
| 12.2 | Assembly overview - dropline bed | 333 |
| 12.3 | Assembly overview - dropline body | 337 |
| 12.4 | Assembly overview - rear cross member | 338 |
| 12.5 | Assembly overview - carrier | 339 |



| | | |
|-------|--|-----|
| 12.6 | Assembly overview - skid plate | 340 |
| 12.7 | Assembly overview - wheel housing | 341 |
| 12.8 | Removing and installing dropside bed | 341 |
| 12.9 | Removing and installing tailboard, front | 342 |
| 12.10 | Removing and installing tailgate | 343 |
| 12.11 | Removing and installing console | 343 |
| 12.12 | Removing and installing carrier | 344 |
| 12.13 | Removing and installing skid plate | 344 |
| 12.14 | Removing and installing strut | 345 |
| 12.15 | Removing and installing wheel housing | 346 |