



Contents

| | |
|---|-----------|
| 27 - Starter, Current supply | 1 |
| 1 Checking battery | 1 |
| 1.1 Checking battery | 1 |
| 2 Checking acid level | 2 |
| 2.1 Checking acid level | 2 |
| 2.2 Checking specific gravity | 2 |
| 2.3 Charging battery | 3 |
| 2.4 Quick charging/starting boost | 3 |
| 3 Battery handling | 3 |
| 3.1 Battery handling | 3 |
| 3.2 Removing and installing battery | 4 |
| 4 Locations of first and second batteries | 4 |
| 4.1 Locations of first and second batteries | 4 |
| 4.2 Fault finding | 5 |
| 4.3 Repairing starter | 6 |
| 4.4 Fault finding - Starter motor turns too slowly to start engine | 7 |
| 4.5 Fault finding - Starter does not turn | 8 |
| 4.6 Removing and installing starter | 9 |
| 4.7 Fault finding - Checking alternator and voltage regulator using multimeter V.A.G 1315 A (45 A and 65 A alternators) | 10 |
| 4.8 Fault finding - Alternator warning lamp does not go out when speed increases | 11 |
| 4.9 Fault finding - Alternator warning lamp does not light up when ignition is switched on | 12 |
| 4.10 Checking resistance for preexciter current circuit | 14 |
| 4.11 Removal and installation of alternator (45 A and 65 A types) | 15 |
| 4.12 V-belt replacement | 18 |
| 4.13 Removing and installing 65 A alternator (Bosch version) | 19 |
| 4.14 Removing and installing 90 A alternator (Bosch version) | 21 |
| 4.15 Repairing 45 AMP. and 65 AMP. alternators (Bosch version) | 22 |
| 4.16 Repairing alternator (90 A Bosch version) | 28 |
| 90 - Gauges, Instruments | 33 |
| 1 Dashboard insert repair | 33 |
| 1.1 Dashboard insert repair | 33 |
| 1.2 Dashboard insert repair with clock | 33 |
| 1.3 Dashboard insert repair without clock | 36 |
| 1.4 Dashboard insert repair with rev counter | 42 |
| 1.5 Rework instructions | 48 |
| 2 Repairing switch unit for optical and acoustic oil pressure warning | 49 |
| 2.1 Repairing switch unit for optical and acoustic oil pressure warning | 49 |
| 2.2 How the optical and acoustic oil pressure warning system should work | 51 |
| 3 Fault finding | 51 |
| 3.1 Fault finding | 51 |
| 3.2 Led does not blink when ignition is switched on | 51 |
| 3.3 Fault finding programme - Ledblinks and buzzer sounds when driving although the oil pressure is correct | 53 |
| 3.4 Removing and installing tachograph | 56 |
| 3.5 Removing and installing dash insert | 58 |
| 3.6 Removing and installing speedometer cable | 59 |
| 3.7 Removing and installing fuel gauge sender | 62 |
| 3.8 Fault finding - Checking fuel gauge (vehicles without fuse box/relay plate) | 63 |
| 3.9 Fault finding - Checking fuel gauge (vehicles with fuse box/relay plate) | 64 |
| 3.10 Fault finding | 65 |
| 3.11 Removing and installing aerial | 66 |



| | |
|--|-----------|
| 92 - Windscreen wiper and wash system | 68 |
| 1 Repairing rear window wiper and washer system | 68 |
| 1.1 Repairing rear window wiper and washer system | 68 |
| 1.2 Repairing rear window wiper and washer system | 71 |
| 1.3 Removing and installing rear wiper | 74 |
| 1.4 Removing and installing rear window washer | 74 |
| 1.5 Removing and installing wiper rubbers | 75 |
| 1.6 Windscreen wiper system repair | 76 |
| 1.7 Windscreen washer system | 77 |
| 1.8 Repairing headlight washer system | 78 |
| 94 - Lights, Lamps, Switches - exterior | 80 |
| 1 Steering column switch repair | 80 |
| 1.1 Steering column switch repair | 80 |
| 1.2 Removal and installation of headlights | 85 |
| 1.3 Auxilliary driving lights | 88 |
| 1.4 Removing and installing headlights (caravelle carat) | 90 |
| 1.5 Repairing fog lights | 92 |
| 1.6 Removing and installing tail light | 93 |
| 1.7 Rework instructions | 95 |
| 96 - Lights, Lamps, Switches - interior | 96 |
| 1 Removing and installing electrically adjustable and heated mirror | 96 |
| 1.1 Removing and installing electrically adjustable and heated mirror | 96 |
| 1.2 Removing external mirror | 96 |
| 1.3 Installing external mirror | 97 |
| 97 - Wiring | 98 |
| 1 Removing and installing fuse box | 98 |
| 1.1 Removing and installing fuse box | 98 |
| 1.2 Removing and installing fuse box with relay plate | 99 |
| 1.3 Routing of starter wiring | 103 |
| 1.4 Removal and installation of main wiring loom | 106 |
| 1.5 Removal and installation of wiring loom for dashboard | 108 |
| 1.6 Fitting procedure for earthing straps | 110 |
| 1.7 Routing of wiring in vehicle (Caravelle Carat) | 112 |
| 1.8 Wiring in engine compartment (1.9 I Digijet engine, near coil) | 114 |
| 1.9 Wiring in engine compartment (1.9 Litre digijet engine) | 115 |
| 1.10 Wiring in engine compartment (1.9 litre carburetor engine) | 116 |
| 1.11 Wiring in engine compartment (Diesel and turbo diesel engines) | 118 |
| 1.12 Wiring in engine compartment (diesel and turbo diesel engines) | 119 |
| 1.13 Securing of earth strap from body to automatic gearbox | 120 |
| 1.14 Attachment of earth strap from body to manual gearbox | 121 |
| 1.15 Wiring in passenger compartment (first and second batteries) | 122 |
| 1.16 Wiring in passenger compartment (first battery) | 123 |
| 1.17 Securing of socket for tdc sender (45 A, 65 A and 90 A alternators) | 124 |