



## Contents

<b>1</b>	<b>Engine list</b>	<b>1</b>
<b>2</b>	<b>Delivery inspection</b>	<b>5</b>
<b>3</b>	<b>Oil change service</b>	<b>9</b>
3.1	Oil change service / vehicles 1991 ▶ 1999	9
3.2	Oil change service / vehicles 2000 ▶	11
<b>4</b>	<b>Inspection service</b>	<b>14</b>
4.1	Inspection service / vehicles 1991 ▶ 1999	14
4.2	Inspection service / vehicles 2000 ▶ (Y ▶)	23
4.3	Time or distance dependent additional work	28
<b>5</b>	<b>General information</b>	<b>31</b>
5.1	General information on "LongLife service - QG1" or "time or distance dependent service - QG0 / QG2"	31
5.2	Service intervals	33
5.3	Identification plate	35
5.4	Vehicle identification number	35
5.5	Vehicle data sticker	36
5.6	Engine code and engine number	36
<b>6</b>	<b>Descriptions of work:</b>	<b>38</b>
6.1	Lifting the vehicle	40
6.2	"LongLife engine oil" sticker	41
6.3	Attaching vehicle data sticker	42
6.4	Attaching service sticker	42
6.5	Driver and front passenger airbags: visual check of airbag units	44
6.6	Self-diagnosis: reading event memories of all systems	44
6.7	Service interval display: resetting	51
6.8	Service interval display: recoding	75
6.9	Door arrester and securing pins: lubricating	89
6.10	Sunroof: checking function, cleaning and greasing guide rails	90
6.11	Electric windows: initialising	90
6.12	Clock: setting to correct time	91
6.13	Fuses: Fit	91
6.14	Installing cover for central electrics	91
6.15	Climatronic: Set temperature to 22 °C	92
6.16	Radio/radio-navigation system: activating anti-theft coding	92
6.17	Radio-navigation system: Insert navigation CD and perform update	95
6.18	Window wash/wipe system and headlight washer system: checking function and settings	95
6.19	Wiper blades: checking park position, checking setting angle if wiper blades judder	98
6.20	Wheel securing bolts: tightening to specified torque	101
6.21	Tyres: checking condition, wear pattern, inflation pressure, tread depth	103
6.22	Removing and installing engine compartment cover (noise insulation)	108
6.23	Engine oil level: checking	108
6.24	Engine oil: Draining or extracting and replenishing; renewing oil filter	109
6.25	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	113
6.26	V-belt: checking condition and tensioning	114
6.27	Poly V-belt: Check condition and tighten belt on engines without automatic tensioning roller	117
6.28	Boots: inspecting	118
6.29	Manual gearbox/final drive: Check oil level	118
6.30	Rear final drive: Check oil level	119
6.31	Automatic gearbox: checking final drive oil level	119
6.32	Brake system: inspecting for leaks and damage	120
6.33	Front and rear brake pads/linings: checking thickness	120



6.34	Underbody protection: visual check for damage	123
6.35	Track rod ends: checking clearance, firm seating and boots	123
6.36	Axle: Visual check	123
6.37	Steering: Check bellows/boots for leaks and damage	124
6.38	Cooling system: checking frost protection and coolant level	124
6.39	Tipping radiator forwards	127
6.40	Spark plugs: renewing	127
6.41	Dust and pollen filter: renewing filter element	130
6.42	Camshaft drive toothed belt: Checking condition and tension, tension toothed belt if necessary (petrol engine ► 1995)	130
6.43	Camshaft drive toothed belt: checking (4-cylinder petrol engine)	137
6.44	Camshaft drive toothed belt: renew.	137
6.45	Injection pump toothed belt: renew	156
6.46	Camshaft drive toothed belt: Check condition and tension, tension toothed belt if necessary (diesel engine)	165
6.47	Air filter: cleaning housing and renewing filter element	178
6.48	Fuel filter: renewing (diesel engine)	180
6.49	Fuel filter: draining water (diesel engine)	181
6.50	Automatic gearbox: checking ATF level	182
6.51	Automatic gearbox: Change ATF (automatic gearbox 01P)	189
6.52	Automatic gearbox: Change ATF (automatic gearbox 098)	189
6.53	Power assisted steering: checking fluid level	192
6.54	Changing brake fluid	193
6.55	Brake fluid specification	195
6.56	Brake fluid level (dependent upon brake pad/lining wear): checking	195
6.57	Battery (also second battery): Check battery terminal clamps for secure seating	196
6.58	Battery (also second battery): Checking	200
6.59	Carrying out engine basic setting	209
6.60	Idling speed: Check (diesel engine)	215
6.61	Checking headlight adjustment	216
6.62	Carry out road test	220
6.63	Checking expiry date of first-aid kit	221
<b>7</b>	<b>Legally required extra work according to country</b>	<b>222</b>
7.1	Exhaust emissions test	222
7.2	Engine codes AAC, AAF, ACU	223
7.3	Engine code AES	232
7.4	Engine codes AET, APL	239
7.5	Engine code PD	248
7.6	Engine code AMV	252
7.7	Engine code AVT	257
7.8	Engine codes AAB, ABL, ACV, AHY, AJA, AJT, AUF, AXG, AXL, AYC, AYY, 1X	262
<b>8</b>	<b>Additional work in countries where no specific exhaust emission regulations have to be adhered to</b>	<b>270</b>
8.1	Exhaust emissions test	270