



## Contents

<b>27 - Starter, current supply, CCS</b>	<b>1</b>
<b>1 Battery</b>	<b>1</b>
1.1 Fundamentals for batteries	1
1.2 Types of battery	1
1.3 Warning notices and safety regulations	2
1.4 Fitting battery terminal clamps	4
<b>2 Checking battery</b>	<b>5</b>
2.1 Procedure when checking a battery	5
2.2 Visual inspection	5
2.3 Checking battery with magic eye	6
2.4 Checking low maintenance battery	7
2.5 Checking "no load" voltage of battery	10
2.6 Battery tester with printer VAS 5097 A	11
2.7 Evaluating test result	14
<b>3 Charging battery</b>	<b>15</b>
3.1 Battery charger VAS 5095 A	15
3.2 Battery charger VAS 5900	19
3.3 Totally discharged batteries	27
<b>4 Disconnecting and connecting battery</b>	<b>29</b>
4.1 Disconnecting battery	29
4.2 Connecting battery:	29
<b>5 Removing and installing battery</b>	<b>31</b>
5.1 Battery in engine compartment	31
5.2 Second battery under driver seat	33
<b>6 Specified torques: battery</b>	<b>36</b>
<b>7 Starter motor</b>	<b>37</b>
7.1 Removing and installing starter motor	37
<b>8 Specified torques: starter</b>	<b>42</b>
<b>9 Alternator with V-belt</b>	<b>43</b>
9.1 4-cylinder petrol engine	43
9.2 4-cylinder diesel engine	45
9.3 Checking and adjusting V-belt tension	48
<b>10 Alternator with poly V-belt</b>	<b>51</b>
10.1 4-cyl. engine with 90 A alternator ▶ 04.99	51
10.2 4-cylinder engine with 90 A alternator 05.99 ▶	57
10.3 4-cyl. engine with 120 A alternator ▶ 04.99	62
10.4 4-cylinder engine with 120 A alternator 05.99 ▶	68
10.5 4-cylinder engine with air conditioner compressor or 2nd alternator ▶ 04.99	74
10.6 4-cylinder engine with air conditioner compressor or 2nd alternator 05.99 ▶	79
10.7 5-cylinder engine without air conditioner or 2nd alternator ▶ 04.99	85
10.8 5-cylinder engine without air conditioner or 2nd alternator 05.99 ▶	88
10.9 5-cyl. engines with air conditioning or 2nd alternator/hydraulic pump ▶ 04.99	90
10.10 5-cyl. engines with air conditioning or 2nd alternator/hydraulic pump 05.99 ▶	93
10.11 6-cylinder injection engine ▶ 04.99	96
10.12 6-cylinder injection engine 05.99 ▶	99
10.13 Compact alternator with poly V-belt drive ▶ 04.99	102
10.14 Compact alternator with poly V-belt drive 05.99 ▶	104
10.15 Renewing poly V-belt pulley without freewheel on alternator	106
10.16 Renewing poly V-belt with freewheel	107
<b>11 Repairing alternator</b>	<b>109</b>
11.1 65 A - Valeo version with poly V-belt drive	109



11.2	90 A - Bosch version with poly V-belt drive	113
11.3	70 A, 90 A and 120 A alternator with poly V-belt	117
<b>12</b>	<b>Specified torques: alternator</b>	<b>120</b>
12.1	General torque settings	120
12.2	Specified torques: alternator with V-belt	120
12.3	4-cyl. engine with 90 A alternator ▶ 04.99	121
12.4	4-cylinder engine with 90 A alternator 05.99 ▶	121
12.5	4-cyl. engine with 120 A alternator ▶ 04.99	121
12.6	4-cylinder engine with 120 A alternator 05.99 ▶	121
12.7	4-cylinder engine with air conditioner compressor or 2nd alternator ▶ 04.99	121
12.8	4-cylinder engine with air conditioner compressor or 2nd alternator 05.99 ▶	122
12.9	5-cylinder engine without air conditioner or 2nd alternator ▶ 04.99	122
12.10	5-cylinder engine without air conditioner or 2nd alternator 05.99 ▶	122
12.11	5-cyl. engine with air conditioning or 2nd alternator/hydraulic pump ▶ 04.99	122
12.12	5-cyl. engine with air conditioning or 2nd alternator/hydraulic pump 05.99 ▶	122
12.13	6-cylinder injection engine ▶ 04.99	123
12.14	6-cylinder injection engine 05.99 ▶	123
<b>13</b>	<b>Cruise control system (CCS)</b>	<b>124</b>
13.1	Cruise control system (CCS) for vehicles with electronic accelerator	124
13.2	Cruise control system (CCS) for vehicles without electronic accelerator	124
13.3	Adjusting control element	126
13.4	Removing actuator	126
13.5	Removing and installing breather valve	126
13.6	Removing and installing cruise control system (CCS) vacuum pump V18	127
13.7	Removing and installing cruise control system (CCS) control unit J213	127
13.8	Checking vacuum system for leaks	127
<b>90</b>	<b>- Gauges, instruments</b>	<b>128</b>
<b>1</b>	<b>Dash panel insert ▶ 12.95</b>	<b>128</b>
1.1	Removing and installing dash panel insert	128
1.2	Assembly overview - dash panel insert with rev. counter or analogue clock	129
1.3	Assembly overview - dash panel insert with multifunction indicator (MFI)	131
1.4	Dismantling and assembling dash panel insert	134
1.5	Pin assignment of connectors on dash panel insert	143
<b>2</b>	<b>Dash panel insert 01.96 ▶07.98</b>	<b>145</b>
2.1	Removing and installing dash panel insert	145
2.2	Pin assignment of connectors on dash panel insert	147
<b>3</b>	<b>Dash panel insert 08.98 ▶</b>	<b>149</b>
3.1	Warning with oil level too low	149
3.2	Fault detection and fault display	149
3.3	Removing and installing dash panel insert	150
3.4	Dash panel insert, rear view	153
3.5	Pin assignment of connections on dash panel insert with no data BUS connection	154
3.6	Pin assignment of connections at dash panel insert with data BUS connection	156
<b>4</b>	<b>Service interval display</b>	<b>159</b>
4.1	Function	159
4.2	Service interval display on dash panel inserts with no data BUS connection	159
4.3	Service interval display on dash panel inserts with data BUS connection	161
<b>5</b>	<b>Tachograph ▶ 04.99</b>	<b>164</b>
5.1	Pin assignment of the connections on the tachograph hood	164
5.2	Pin assignment of connections on tachograph	165
<b>6</b>	<b>Tachograph 05.00 ▶</b>	<b>166</b>
6.1	Pin assignment of connections on tachograph	166
6.2	Removing and installing tachograph	167



<b>92 - Windscreen wash/wipe system</b>	<b>169</b>
<b>1 Windscreen wiper system</b>	<b>169</b>
1.1 Assembly overview - windscreen wiper system	169
1.2 Setting park position	170
1.3 Adjusting wiper blade park position	170
1.4 Removing and installing wiper rubber	171
<b>2 Window washer system (short front end) ► 12.95</b>	<b>172</b>
2.1 Assembly overview - windscreen washer system	172
2.2 Removing and adjusting washer jets	173
2.3 Hose connections at windscreen washer pump V5	173
<b>3 Window washer system (long front end) 01.96 ►</b>	<b>174</b>
3.1 Assembly overview - windscreen washer system	174
3.2 Removing and adjusting washer jets	175
3.3 Hose connections at windscreen washer pump V5	175
<b>4 Rear window wiper and washer system (tailgate)</b>	<b>176</b>
4.1 Assembly overview of rear window wipe/wash system	176
4.2 Setting park position	177
4.3 Adjusting rear window wiper park position	177
4.4 Adjusting spray jet	177
<b>5 Rear window wiper and washer system (rear hinged doors)</b>	<b>178</b>
5.1 Assembly overview of rear window wipe/wash system	178
5.2 Setting park position	180
5.3 Adjusting rear window wiper park position	180
5.4 Adjusting spray jet	181
<b>6 Headlight washer system</b>	<b>182</b>
6.1 Assembly overview - headlight washer system	182
6.2 Removing and installing spray jet retainer	182
6.3 Removing and installing spray jet pop-up cylinders	183
6.4 Adjusting spray jets	185
<b>7 Hose repair</b>	<b>186</b>
7.1 General description	186
7.2 Repairing smooth pipe	186
7.3 Repairing corrugated pipe	186
<b>94 - Lights, bulbs, switches - exterior</b>	<b>188</b>
<b>1 Headlights (short front end) ► 12.95</b>	<b>188</b>
1.1 Assembly overview - headlights	188
1.2 Renewing headlight bulbs	189
1.3 Removing and installing headlight insert	189
1.4 Removing and installing left headlight range control motor V48 and right headlight range control motor V49	190
1.5 Adjusting headlights	191
<b>2 Headlights (long front end) 01.96 ►</b>	<b>192</b>
2.1 Assembly overview - headlights	192
2.2 Renewing headlight bulbs	193
2.3 Removing and installing headlight insert	193
2.4 Removing and installing left headlight range control motor V48 and right headlight range control motor V49	194
2.5 Adjusting headlights	195
<b>3 Fog lights (short front end) ► 12.95</b>	<b>196</b>
3.1 Removing and installing fog lights	196
3.2 Renewing fog light bulb	196
3.3 Adjusting fog lights	196
<b>4 Fog lights (long front end) 01.96 ►</b>	<b>198</b>



4.1	Removing and installing fog lights	198
4.2	Renewing fog light bulb	198
4.3	Adjusting fog lights	198
<b>5</b>	<b>Turn signals and front (short front end) ▶ 12.95</b>	<b>199</b>
5.1	Removing and installing front turn signal	199
5.2	Renewing front left turn signal bulb M5 and front right turn signal bulb M7	199
<b>6</b>	<b>Turn signals at front (long front end) 01.96 ▶</b>	<b>200</b>
6.1	Removing and installing front turn signal	200
6.2	Renewing front left turn signal bulb M5 and front right turn signal bulb M7	200
<b>7</b>	<b>Tail light cluster</b>	<b>201</b>
7.1	Removing and installing tail light cluster of a panel van	201
7.2	Removing and installing drop-side tail light cluster	202
<b>8</b>	<b>Additional brake light</b>	<b>203</b>
8.1	Removing and installing high-level brake light bulb holder (rear lid)	203
8.2	Removing and installing high-level brake light housing (rear lid)	203
<b>9</b>	<b>Number plate light</b>	<b>204</b>
9.1	Removing number plate lights	204
<b>10</b>	<b>Rear fog light</b>	<b>205</b>
10.1	Removing rear fog light	205
<b>11</b>	<b>Steering column switch and ignition/starter switch ▶08.98</b>	<b>206</b>
11.1	Assembly overview - steering column	206
11.2	Removing and installing steering column switch	208
11.3	Pin assignment on steering column switch and ignition and starter switch	209
11.4	Pin assignment at connector for multifunction indicator (MFI) and cruise control system (CCS) (at steering lock housing)	210
11.5	Removing and installing steering lock housing	210
11.6	Removing and installing lock cylinder	212
<b>12</b>	<b>Steering column switch and ignition/starter switch 08.98 ▶</b>	<b>214</b>
12.1	Assembly overview - steering column	214
12.2	Removing and installing steering column switch	215
12.3	Removing and installing steering lock housing	216
12.4	Removing and installing lock cylinder	217
12.5	Pin assignment on steering column switch and ignition and starter switch	217
12.6	Pin assignment at connector for multifunction indicator (MFI) / rear window wiper and cruise control system (CCS) (at steering lock housing)	218
<b>96 - Lights, bulbs, switches - interior</b>		<b>219</b>
<b>1</b>	<b>Immobiliser</b>	<b>219</b>
1.1	Assembly overview - immobiliser	219
1.2	Immobiliser control unit J362	219
1.3	Removing and installing immobiliser reader coil D2	219
1.4	Transponder	220
1.5	Fuel shut-off valve control unit J366	220
<b>2</b>	<b>Interior lights and switches</b>	<b>229</b>
2.1	Removing and installing light switch	229
2.2	Removing and installing headlight range control regulator E102	229
2.3	Removing and installing switches in centre of dash panel ▶ 12.95	229
2.4	Removing and installing switches in centre of dash panel 01.96 ▶	230
<b>97 - Wiring</b>		<b>231</b>
<b>1</b>	<b>Relay plate</b>	<b>231</b>
1.1	Removing and installing relay plate	231
1.2	Removing and installing multi-pin connector on back of relay plate	232
<b>2</b>	<b>Wiring harness and connector repairs</b>	<b>234</b>



---

2.1	Safety notes: .....	234
2.2	General notes concerning repairs to vehicle electrical system .....	234
2.3	Instructions concerning wiring harness and connector repairs .....	234
2.4	Supplementary notes on repair of CAN bus wiring .....	235
2.5	Wiring harness repair set VAS 1978 .....	235
<b>3</b>	<b>Renewal of aerial wiring .....</b>	<b>237</b>
3.1	General description .....	237
3.2	Assembly overview - aerial wire .....	237
3.3	Installing a new aerial wire .....	237