



Contents

91 - Communication	1
1 Communication systems	1
1.1 Fault finding	1
2 Self-diagnosis for communication systems	2
2.1 General instructions for self-diagnosis of the communication systems	2
2.2 Self-diagnosis for radio systems "ALPHA", "BETA" and "GAMMA" 08.98 ▶	3
2.3 Self-diagnosis for the radio navigation system with multi-function display (MFD)	15
2.4 Self-diagnosis for the radio navigation system with monochrome display	44
3 Radio preparation ▶ 07.98	69
4 Radio "alpha" ▶ 07.98	70
4.1 General notes	70
4.2 Removing and installing radio	70
4.3 Overview of radio connectors	72
4.4 Electronic anti-theft system	73
4.5 Fitting radios ▶ 07.98 in vehicles 08.98 ▶	74
5 Radio "gamma" ▶ 07.98	76
5.1 General notes	76
5.2 Removing and installing radio	76
5.3 Overview of radio connectors	78
5.4 Electronic anti-theft system	79
5.5 Fitting radios ▶ 07.98 in vehicles 08.98 ▶	80
6 Radio "beta" ▶ 07.98	82
6.1 General notes	82
6.2 Removing and installing radio	83
6.3 Overview of radio connectors	84
6.4 Electronic anti-theft system	85
6.5 Fitting radios ▶ 07.98 in vehicles 08.98 ▶	86
7 Radio "ALPHA" 08.98 ▶	88
7.1 General notes	88
7.2 Removing and installing radio	88
7.3 Overview of radio connectors	90
7.4 Electronic anti-theft system	90
7.5 Fitting radios 08.98 ▶ in vehicles ▶ 07.98	91
8 Radio "BETA" 08.98 ▶	92
8.1 General notes	92
8.2 Removing and installing radio	92
8.3 Overview of radio connectors	93
8.4 Electronic anti-theft system	95
8.5 Fitting radios 08.98 ▶ in vehicles ▶ 07.98	96
9 Radio "GAMMA" 08.98 ▶	98
9.1 General notes	98
9.2 Removing and installing radio	98
9.3 Overview of radio connectors	99
9.4 Electronic anti-theft system	101
9.5 Fitting radios 08.98 ▶ in vehicles ▶ 07.98	102
10 Radio navigation system (RNS) with multi-function display (MFD)	104
10.1 General notes	104
10.2 Removing and installing radio navigation system	105
10.3 Overview - radio navigation system connections	107
10.4 Electronic anti-theft system	110
10.5 Removing and installing traffic information control unit	111



11	Radio navigation system (RNS) with monochrome display	112
11.1	General notes	113
11.2	Removing and installing radio navigation system	114
11.3	Overview - radio navigation system connections	115
11.4	Electronic anti-theft system	118
12	CD changer	120
12.1	General notes	120
12.2	Removing and installing CD changer	120
13	Multi-media system (Rear Seat Entertainment)	123
13.1	General notes	123
13.2	Overview of the multi-media system	124
13.3	Removing and installing video recorder/DVD player	125
13.4	Removing and installing multi-media system operating unit	129
13.5	Removing and installing multi-media control unit	130
13.6	Removing and installing multi-media display units	131
14	Loudspeaker systems	133
14.1	Overview of loudspeaker system	133
14.2	Removing and installing loudspeakers in dash panel	134
14.3	Removing and installing front bass loudspeakers	134
14.4	Removing and installing rear wide-band loudspeakers	135
15	Telephone systems	136
15.1	General notes	136
15.2	Telephone preparation for vehicles with no radio	136
15.3	Telephone preparation for vehicles with "ALPHA" radio 08.98 ▶	137
15.4	Telephone preparation for vehicles with "BETA" or "GAMMA" radio 08.98 ▶	137
15.5	Telephone system for vehicles with no radio	138
15.6	Telephone system for vehicles with "ALPHA" radio 08.98 ▶	138
15.7	Telephone system for vehicles with "BETA" or "GAMMA" radio 08.98 ▶	139
15.8	Removing and installing telephone mounting ▶ 04.01	139
15.9	Removing and installing telephone mounting 05.01 ▶	140
15.10	Removing and installing base plate of telephone mounting ▶ 04.01	140
15.11	Removing and installing base plate of telephone mounting 05.01 ▶	141
15.12	Removing and installing telephone operating electronic control unit	141
15.13	Removing and installing telephone microphone ▶ 04.01	142
15.14	Removing and installing telephone microphone 05.01 ▶	143
16	Aerial systems	144
16.1	General notes	144
16.2	Window aerial for the radio	144
16.3	Rod aerial for radio	145
16.4	Roof aerial for telephone and navigation system	148
16.5	Renewal of aerial wiring	149
17	Notes on operating mobile telephones and two-way radios	150
17.1	General notes	150
17.2	Note on performing repair work	151
17.3	Overview - battery, transmitter/receiver unit, fuse and wiring harness	152
17.4	Transmitting power and aerial fitting locations	153
18	Suppression	154
18.1	Suppression measures	154