



Contents

68 - Interior equipment	1
1 Interior mirror	1
1.1 Interior mirror	1
1.2 Removing interior mirror	1
1.3 Installing interior mirror	1
1.4 Bonding retaining plate for interior rear-view mirror	2
69 - Passenger protection	4
1 Seat belts	4
1.1 Seat belts	4
1.2 Safety regulations for belt tensioners	4
1.3 Driver/front passenger seat belt (with belt tensioner) - Assembly overview	5
1.4 Driver/front passenger seat belt (without height adjustment) - Assembly overview	8
1.5 Driver/front passenger seat belt (with height adjustment) - Assembly overview	11
1.6 Double front passenger seat belts - Assembly overview	15
1.7 Double bench seat belt (with three-point seat belt) - Assembly overview	18
1.8 Double bench seat belts (with lap belt) - Assembly overview	22
1.9 Folding seat belt - Assembly overview	24
1.10 Single seat belt - Assembly overview	27
1.11 Triple bench seat belts - Assembly overview	31
1.12 Triple bench seat belts (long wheelbase/installed at rear) - Assembly overview	34
1.13 Rear bench seat belts (double cab) - Assembly overview	37
2 Inspecting seat belts	39
2.1 Inspecting seat belts	39
3 Airbag	42
3.1 Airbag	42
3.2 Locations overview	43
3.3 Safety precautions when working on the airbag	44
3.4 Replacing airbag units following an accident	44
3.5 Removing and installing driver's airbag unit > 08.98	45
3.6 Removing and installing steering wheel > 08.98	47
3.7 Removing and installing driver's airbag unit 09.98 >	48
3.8 Removing and installing steering wheel 09.98 >	53
3.9 Removing and installing coil connector with slip ring	55
3.10 Removing and installing front passenger's airbag unit	56
3.11 Removing and installing front passenger's airbag unit (sprayed dash panel PR No. 4N2) ..	58
3.12 Removing and installing airbag control unit (J234)	61
3.13 Removing and installing knee padding	61
70 - Trim/Insulation	63
1 Dash panel >08.98	63
1.1 Dash panel >08.98	63
1.2 Removing dash panel	63
1.3 Removing steering wheel	64
1.4 Removing steering column switch and trim	64
1.5 Removing instrument trim	65
1.6 Removing left heater/fresh air outlet	65
1.7 Removing left switch console	65
1.8 Removing handle of cold start accelerator (CSA)	66
1.9 Removing cover of relay plate	67
1.10 Removing centre heater/fresh air outlet	68
1.11 Removing controls in centre of instrument panel	69
1.12 Removing glove box	71
1.13 Removing right heater/fresh air outlet	72



2	Dash panel 09.98 >	73
2.1	Dash panel 09.98 >	73
2.2	Tools	73
2.3	Removing and installing dash panel	73
3	Door trims	81
3.1	Door trims	81
3.2	Front door trim - Assembly overview	81
3.3	Removing front door trim (doors with manual window lifters)	84
3.4	Removing and installing front door trim (doors with electric window lifters)	86
3.5	Converting spacer strips for driver and front passenger door trims	90
3.6	Sliding door moulded trim panels - Assembly overview	94
3.7	Removing and installing bottom sliding door trim panel	97
3.8	Removing and installing side wing door trim panel	99
4	Pillars and side trims	101
4.1	Pillars and side trims	101
4.2	Removing handle	101
4.3	Removing and installing Caravelle and Multivan A pillar trim	102
4.4	Removing and installing A pillar trim panel; Combi, van, dropside and double cab	104
4.5	Removing and installing left B pillar upper trim panel	105
4.6	Removing left B pillar upper trim panel	107
4.7	Installing left B pillar upper trim	108
4.8	Removing and installing right B pillar upper trim panel	109
4.9	Removing right B pillar upper trim panel	110
4.10	Installing right B pillar upper trim panel	111
4.11	Removing and installing B pillar lower trim panel	112
4.12	Removing and installing left C pillar trim panel	114
4.13	Removing left C pillar trim panel	115
4.14	Installing left C pillar trim panel	116
4.15	Removing and installing right C pillar trim panel	117
4.16	Removing right C pillar trim panel	118
4.17	Installing right C pillar trim panel	119
4.18	Removing and installing D pillar trim panel	120
4.19	Removing D pillar trim panel	122
4.20	Installing D pillar trim panel	123
4.21	D pillar trim panel (vehicles with passenger compartment ventilation or air conditioning) - Assembly overview	124
4.22	Removing D pillar trim panel (vehicles with passenger compartment ventilation or air conditioning)	124
4.23	Installing D pillar trim panel (vehicles with passenger compartment ventilation or air conditioning)	125
4.24	Removing and installing rear roof member trim panel	126
4.25	Front side panel moulded trim - Assembly overview	126
4.26	Removing front side panel moulded trim	128
4.27	Installing front side panel moulded trim	130
4.28	Rear left side panel moulded trim (short wheelbase) - Assembly overview	130
4.29	Removing and installing rear left side panel moulded trim (short wheelbase)	133
4.30	Rear right side panel moulded trim (short wheelbase) - Assembly overview	135
4.31	Removing and installing rear right side panel moulded trim (short wheelbase)	138
4.32	Rear left side panel moulded trim (long wheelbase) - Assembly overview	140
4.33	Removing and installing rear left side panel moulded trim (long wheelbase)	142
4.34	Rear right side panel moulded trim (long wheelbase) - Assembly overview	144
4.35	Removing and installing rear right side panel moulded trim (long wheelbase)	147
4.36	Rear right side panel moulded trim (vehicles with passenger compartment ventilation or air conditioning) - Assembly overview	150
4.37	Removing and installing rear right side panel moulded trim (vehicles with passenger compartment ventilation or air conditioning)	152
5	Roof trim	155



5.1	Roof trim	155
5.2	Moulded headlining - Assembly overview	155
5.3	Removing cab moulded headlining	157
5.4	Removing passenger compartment moulded headlining	158
5.5	Installing passenger compartment moulded headlining	160
6	Tailgate	161
6.1	Tailgate	161
6.2	Tailgate moulded trim panel - Assembly overview	161
6.3	Tailgate trim panel - Assembly overview	165
6.4	Retrofitting tailgate strap	166
6.5	Left rear wing door trim panel - Assembly overview	169
6.6	Right rear wing door trim - Assembly overview	171
6.7	Removing loading/bed board	173
72	- Seat frames	175
1	Cab seats	175
1.1	Cab seats	175
1.2	Removing driver/front passenger seat	175
1.3	Removing arm rest	177
1.4	Removing double passenger seat with seat frame	178
2	Passenger compartment seats	180
2.1	Passenger compartment seats	180
2.2	Removing single seat or double bench seat with seat frame	180
2.3	Removing swivel seat	182
2.4	Removing triple bench seat	184
2.5	Removing rear bench seat (double cab)	185
74	- Seats - Upholstery, Covers	187
1	Covers and upholstery	187
1.1	Covers and upholstery	187
1.2	Fitting on seat covers for single folding seat	187
1.3	Fitting on backrest cover for single folding seat	189
2	Seat heater element	192
2.1	Seat heater element	192
2.2	Removing and installing seat heater element	192
2.3	Removing and installing heater element for backrest	194