



## Contents

<b>50 - Body - front</b> .....	<b>1</b>
<b>1 Body - front</b> .....	<b>1</b>
1.1 Tools .....	1
1.2 Lock carrier - service position (vehicles with long front-end) .....	1
1.3 Removing and installing lock carrier with attachments .....	3
<b>2 Front wing</b> .....	<b>6</b>
2.1 Tools .....	6
2.2 Assembly overview 01.96 ► .....	6
<b>3 Noise insulation</b> .....	<b>9</b>
3.1 Tool .....	9
3.2 Assembly overview .....	9
3.3 Renewing insulation .....	10
<b>55 - Bonnet, rear lid</b> .....	<b>11</b>
<b>1 Bonnet</b> .....	<b>11</b>
1.1 Tools .....	11
1.2 Removing lid ► 12.95 .....	11
1.3 Installing and adjusting lid ► 12.95 .....	12
1.4 Assembly overview 01.96 ► .....	13
1.5 Removing lid 01.96 ► .....	15
1.6 Installing and adjusting bonnet 01.96 ► .....	16
1.7 Removing and installing bonnet catch cable ► 12.95 .....	18
1.8 Removing and installing bonnet catch cable and bonnet catch 01.96 ► .....	18
<b>2 Rear lid</b> .....	<b>20</b>
2.1 Tools .....	20
2.2 Assembly overview .....	20
2.3 Removing and installing bonnet .....	21
2.4 Adjusting rear lid .....	22
2.5 Removing and installing tailgate lock mechanism .....	24
2.6 Removing and installing lock cylinder .....	25
2.7 Removing gas strut .....	25
2.8 Releasing gas from gas strut .....	26
<b>57 - Front doors, door components, central locking</b> .....	<b>27</b>
<b>1 Rear door</b> .....	<b>27</b>
1.1 Tools .....	27
1.2 Assembly overview .....	27
1.3 Removing and installing door ► 12.95 .....	29
1.4 Installing and adjusting door ► 12.95 .....	29
1.5 Removing and installing door 01.96 ► .....	30
1.6 Installing and adjusting door 01.96 ► .....	31
1.7 Removing and installing window regulator .....	33
1.8 Repairing electric window regulators .....	34
1.9 Electric window regulator with convenience function (automatic opening and closing) and force limitation mechanism .....	35
1.10 Overcoming resistance with excess force limitation .....	36
1.11 Initialising and releasing automatic closing function .....	36
1.12 Removing door window .....	37
1.13 Installing door window .....	37
1.14 Removing exterior door handle .....	38
1.15 Removing door lock .....	38
1.16 Removing lock cylinder (front door, side wing door) .....	38
<b>2 Central locking</b> .....	<b>39</b>



2.1	Tools	39
2.2	Assembly overview - central locking	39
2.3	Removing and installing front door positioning element	40
2.4	Removing and installing sliding door lock actuating element	41
2.5	Removing and installing tailgate door lock positioning element	41
2.6	Removing and installing wing door lock actuating element	42
2.7	Functional check of central locking with radio remote control	42
2.8	Synchronising keys with radio remote control ► 04.00	43
2.9	Removing and installing batteries for key with remote control ► 04.00	44
2.10	Adapting ignition keys with radio remote control 05.00 ►	46
2.11	Adapting a new additional key 05.00 ►	49
2.12	Synchronising ignition keys with radio remote control 05.00 ►	50
2.13	Removing and installing batteries for key with remote control (folding type) 05.00 ►	51
<b>58</b>	<b>- Rear doors, door components</b>	<b>53</b>
<b>1</b>	<b>Sliding door</b>	<b>53</b>
1.1	Tools	53
1.2	Assembly overview ► 12.95	53
1.3	Assembly overview 01.96 ► 03.01	55
1.4	Assembly overview 04.01 ►	57
1.5	Removing and installing sliding door ► 03.01	58
1.6	Removing and installing sliding door 04.01 ►	59
1.7	Removing and installing door arrester	61
1.8	Adjusting sliding door ► 12.95	61
1.9	Adjusting sliding door 01.96 ► 03.01	64
1.10	Adjusting sliding door 04.01 ►	67
1.11	Removing and installing central lock	70
1.12	Removing and installing exterior door handle	71
1.13	Removing and installing lock cylinder (sliding door)	72
1.14	Assembly overview - guide rail	73
<b>2</b>	<b>Rear wing door</b>	<b>74</b>
2.1	Tools	74
2.2	Assembly overview - left wing door	74
2.3	Assembly overview - right wing door	75
2.4	Removing and installing wing door	76
2.5	Adjusting wing doors	77
2.6	Removing and installing door locks	78
2.7	Removing and installing lock operating mechanism	80
2.8	Adjusting lock operating mechanism	80
2.9	Removing and installing interior door handle	81
2.10	Removing and installing lock cylinder	81
<b>3</b>	<b>Side wing door</b>	<b>82</b>
3.1	Tools	82
3.2	Assembly overview - side wing door	82
3.3	Removing and installing wing door	83
3.4	Removing and installing door lock	85
<b>60</b>	<b>- Sunroof</b>	<b>86</b>
<b>1</b>	<b>Sunroof with glass panel</b>	<b>86</b>
1.1	Tools	86
1.2	Assembly overview - sliding/tilting sunroof	86
1.3	Removing sliding/tilting sunroof glass panel	88
1.4	Installing sliding/tilting sunroof glass panel	88
1.5	Adjusting height of sliding/tilting sunroof glass panel	89
1.6	Adjusting panel seal	90
1.7	Removing and installing electric drive	90



1.8	Checking electric drive (0 position)	91
1.9	Checking and adjusting parallel running	93
1.10	Removing sliding headliner	94
1.11	Installing sunroof sun blind	96
1.12	Removing and installing carrier unit	96
1.13	Routing and cleaning water drain hoses	99
<b>2</b>	<b>Servicing glass/tilting sunroof</b>	<b>101</b>
2.1	Assembly overview - glass/tilting sunroof	101
2.2	Removing glass panel	101
2.3	Installing glass panel	102
2.4	Routing and cleaning water drain hoses	103
<b>3</b>	<b>Tilting/sliding sunroof with glass panel</b>	<b>107</b>
3.1	Tools	107
3.2	Assembly overview - tilting/sliding roof	107
3.3	Removing and installing tilting/sliding sunroof	108
3.4	Removing and installing water collector plate (with sun blind)	109
3.5	Removing and installing glass panel for tilting/sliding sunroof	110
3.6	Removing and installing electric drive	111
3.7	Checking parallel running	111
3.8	Adjusting parallel running	111
<b>61</b>	<b>Convertible roof, hardtop, canopy</b>	<b>113</b>
<b>1</b>	<b>Assembly of convertible roof frame and canopy</b>	<b>113</b>
1.1	Tools	113
1.2	Canopy frame for dropside and double cab	113
1.3	Assembly overview - canopy frame for dropside and double cab	113
1.4	Assembly overview - canopy frame (cab height) for double cab	114
1.5	Assembling convertible roof frame and cover	116
<b>63</b>	<b>Bumpers</b>	<b>118</b>
<b>1</b>	<b>Bumper, front</b>	<b>118</b>
1.1	Tools	118
1.2	Assembly overviews	118
<b>2</b>	<b>Bumper, rear</b>	<b>122</b>
2.1	Tools	122
2.2	Assembly overviews	122
2.3	Towing bracket 08.90 ►	124
<b>64</b>	<b>Glazing</b>	<b>126</b>
<b>1</b>	<b>Flush bonded windows</b>	<b>126</b>
1.1	Tools	126
1.2	Materials	127
1.3	Assembly overview - flush bonded windows	128
1.4	Spacings for flush bonded windows	129
1.5	Windscreen	131
1.6	Assembly overview - side window and rear window	133
1.7	Removing windscreen, undamaged side window and undamaged rear window	133
1.8	Removing irreparable side window and rear window	135
1.9	Installing windscreen, side window and rear window	136
1.10	Preparing old undamaged window for glazing	136
1.11	Preparing new window for glazing	136
1.12	Preparing body flange and door window flange for glazing	137
1.13	Fitting instructions	137
1.14	Minimum curing period	138
1.15	Touching up paint damage	138



1.16	Cleaning in the event of dirt caused by adhesive sealing material	138
1.17	Installing frame (repair profile) (side and rear windows)	138
1.18	Re-sealing windows	139
<b>2</b>	<b>Windows having threaded connections</b>	<b>141</b>
2.1	Tools	141
2.2	Assembly overview - side window with intake trim	141
2.3	Removing and installing side window with intake trim	142
<b>3</b>	<b>Sliding window</b>	<b>144</b>
3.1	Tools	144
3.2	Assembly overviews - sliding window (sliding door)	144
3.3	Renewing detent rail	149
3.4	Renewing sealing frame	150
3.5	Renewing ledge	151
3.6	Renewing moving window	151
3.7	Retrofitting sliding window	152
<b>66</b>	<b>Exterior equipment</b>	<b>159</b>
<b>1</b>	<b>Exterior mirror</b>	<b>159</b>
1.1	Tool	159
1.2	Exterior mirror	159
<b>2</b>	<b>Trim</b>	<b>162</b>
2.1	Tools	162
2.2	Assembly overview - radiator grille ► 12.95	162
2.3	Removing radiator grille ► 08.94	163
2.4	Radiator grille with trim frame 09.94 ►	164
2.5	Removing and installing radiator grille 01.96 ►	166
<b>3</b>	<b>Cover strip for number plate lighting</b>	<b>167</b>
3.1	Tools	167
3.2	Removing and installing for tailgate	167
3.3	For removing and installing rear wing door	167