



## Table of Contents

<b>00</b>	<b>Technical Data</b>	<b>Page</b>
	<b>Materials for general body repairs</b> .....	<b>00-1</b>
<b>75</b>	<b>Roof, trim, glass</b>	<b>Page</b>
	<b>Removing and installing hinged roof</b> .....	<b>75-1</b>
-	Removing hinged roof .....	75-2
-	Installing hinged roof .....	75-4
-	Removing and installing opening mechanism .....	75-5
-	Removing and installing bellows .....	75-6
-	Removing sunroof .....	75-8
	<b>Removing and mounting high roof (California)</b> .....	<b>75-9</b>
-	Removing high roof .....	75-10
-	Mounting high roof .....	75-14
-	Repairing paintwork damage .....	75-19
-	Cleaning off surplus bonding/sealing material .....	75-20
-	Removing bedboards (high roof) .....	75-21
-	Removing guide rails .....	75-24
-	Removing and installing roof ventilator .....	75-26
-	Removing roof window .....	75-28
-	Removing trim with screen and insect protection bline .....	75-29
	<b>Repairing glass/vent roof (multivan without hinged roof)</b> .....	<b>75-30</b>
-	Removing and installing glass/vent roof .....	75-30
-	Removing glass top .....	75-32
-	Installing glass top .....	75-33
-	Laying and cleaning water drainage hoses .....	75-34
	<b>Removing and installing trim</b> .....	<b>75-40</b>
-	Repairing front door trim .....	75-40
-	Removing A-pillar trim .....	75-46
-	Removing and installing sliding door moulded trim .....	75-49
-	Removing and installing tailgate moulded trim .....	75-52
-	Removing and installing rear roof member trim .....	75-56
	<b>Removing and installing trim (California)</b> .....	<b>75-58</b>
-	Removing B-pillar trim left side .....	75-58
-	Removing B-pillar upper trim .....	75-60
-	Removing and installing B-pillar lower trim .....	75-61
-	Removing C-pillar trim .....	75-63
-	Removing D-pillar trim right side .....	75-64
-	Removing D-pillar trim left side .....	75-65
-	Removing roof trim .....	75-66
-	Removing roof member trim left side .....	75-69
-	Removing roof member trim centre right side .....	75-71
-	Removing roof member trim rear right side .....	75-72
-	Removing side trim rear right side .....	75-73
	<b>Removing and installing trim (Multivan)</b> .....	<b>75-76</b>
-	Removing and installing B-pillar upper trim .....	75-76
-	Removing and installing B-pillar lower trim .....	75-83
-	Removing and installing C-pillar trim .....	75-85
-	Removing and installing D-pillar trim .....	75-93
-	Removing and installing front side panel moulded trim .....	75-97
-	Removing and installing rear side panel moulded trim .....	75-106
-	Repairing moulded headliner .....	75-113

## 76 Gas, Water, Electrics

Page

<b>Safety measures</b> .....	<b>76-1</b>
<b>Removing electrical equipment and components (California)</b> .....	<b>76-2</b>
- Removing battery charger (A 10) .....	76-2
- Removing auxiliary batteries (A 1) .....	76-4
- Removing outside socket (U 8) .....	76-6
- Removing info board E 153) .....	76-7
- Replacing info board (E 153) .....	76-8
- Removing transistor lamp (W 8 or W 25) .....	76-9
- Removing fluorescent tubes .....	76-10
- Removing interior light (W 28) .....	76-11
- Removing reading lamp .....	76-12
- Removing refrigerator (I) .....	76-13
- Removing filter for compressor/refrigerator (I) .....	76-19
- Removing reading lamp (high roof) .....	76-20
<b>Removing electrical equipment and components (Multivan)</b> .....	<b>76-21</b>
- Removing auxiliary battery (A 1) .....	76-21
- Removing transistor lamp (W 8) .....	76-23
- Removing interior light (W 7) .....	76-24
<b>Removing and installing equipment and components for water supply and disposal (California)</b> .....	<b>76-25</b>
- Removing water tap with integrated pump switch (80) .....	76-25
- Removing and installing water pump (V 36) .....	76-26
- Removing water-level sensor (G 33) .....	76-28
- Removing water tank .....	76-30
- Removing sewage tank .....	76-33
- Removing drain cock for sewage tank .....	76-34
- Removing discharge valve .....	76-35
- Removing control switch for sewage tank (G 126) .....	76-37
<b>Removing and installing gas equipment and components (California)</b> .....	<b>76-39</b>
- Removing alcohol cooking stove with sink .....	76-39
- Removing alcohol cooking stove .....	76-43
- Removing and installing gas tank .....	76-45
- Removing and installing gas cooker with sink .....	76-47

## 77 Interior fittings

Page

<b>Repairing seats (California)</b> .....	<b>77-1</b>
- Removing driver's/front passenger seat .....	77-1
<b>Repairing seat/bench (California)</b> .....	<b>77-2</b>
- Removing and installing bench .....	77-2
- Removing seat cushion .....	77-3
- Removing backrest cushion .....	77-4
- Removing bench covers .....	77-5
- Removing bench front trim .....	77-6
- Removing bench side trim .....	77-7
- Removing Bowden cable for bench adjustment .....	77-8
- Replacing sliding blocks of bench .....	77-8
<b>Repairing seats (Multivan)</b> .....	<b>77-9</b>
- Removing driver's/front passenger seat .....	77-9
- Removing single seat (passenger compartment) .....	77-11
- Removing bench .....	77-12
- Removing bedboard with supporting frame .....	77-14
<b>Removing and installing cupboards and stowage compartments (California)</b> ..	<b>77-15</b>
- Removing lockable stowage compartment .....	77-15
- Removing wall cupboard .....	77-15
- Removing kitchen cupboard .....	77-17
- Removing wardrobe .....	77-25
- Removing roof storage box (high roof) .....	77-30