



Contents

01 - Self-diagnosis	1
1 Self-diagnosis of auxiliary coolant heaters -B4W/D4W-	1
1.1 Connecting vehicle diagnosis, testing and information system VAS 5051A	1
1.2 Function	1
1.3 Technical data of self-diagnosis	2
1.4 Test prerequisites for self-diagnosis	2
1.5 Diagnosis functions using vehicle diagnosis, testing and information system VAS 5051A	3
1.6 Fault table	7
1.7 Overview of selectable display group numbers in measuring value block	12
82 - Supplementary heating	15
1 Auxiliary air heaters -B2L/D2L-	15
1.1 Repairing petrol electric heater "B2L"	15
1.2 Removing and installing heater unit (petrol)	17
1.3 Removing and installing heating/temperature/time control switch E13 (petrol)	18
1.4 Checking heating/temperature/time control switch E13 (petrol)	19
1.5 Operation and function of heating/temperature/time control switch E13 (petrol)	20
1.6 Removing and installing pre-selection clock E111 (petrol)	21
1.7 Removing and installing heater control unit J65 (petrol)	21
1.8 Checking heater control unit J65 (petrol)	22
1.9 Renewing heater fuse S23 (petrol)	22
1.10 Renewing auxiliary heater fuse S62 (petrol)	23
1.11 Removing and installing vent (petrol)	23
1.12 Removing intake hose, outlet duct and combustion air hose (petrol)	24
1.13 Removing intake duct (petrol)	24
1.14 Removing and installing exhaust pipe (petrol)	25
1.15 Dismantling fuel pump G23 (petrol)	25
1.16 Checking fuel pump G23 (petrol)	25
1.17 Checking fuel pump G23 installation position (petrol)	26
1.18 Checking quantity of fuel delivered (petrol)	26
1.19 Operation and function of pre-selection clock E111 (petrol)	28
1.20 Dismantling and assembling heater unit "B2L" (petrol)	31
1.21 Removing and installing heater combustion monitor F16 (petrol)	34
1.22 Checking heater combustion monitor F16 (petrol)	34
1.23 Checking temperature limiting switch F82 (petrol)	35
1.24 Renewing glow coil thermal switch F153 and temperature limiting switch F82 (petrol)	36
1.25 Checking glow coil thermal switch F153 (petrol)	36
1.26 Renewing heater overheating switch F17 (petrol)	37
1.27 Checking heater overheating switch F17 (petrol)	37
1.28 Checking temperature sensor G18 (petrol)	39
1.29 Removing and installing combustion, fresh and heated air blower V81 (petrol)	39
1.30 Checking combustion, fresh and heated air blower V81 (petrol)	40
1.31 Removing and installing ignition transformer N152 and wiring distributor -T- (printed circuit board) (petrol)	40
1.32 Checking ignition transformerf N152 (petrol)	41
1.33 Dismantling and assembling combustion, fresh and heated air blower V81 (petrol)	41
1.34 Blower wheel and coupling installation dimensions (petrol)	42
1.35 Repairing diesel electric heater "D2L"	42
1.36 Removing and installing heater unit (diesel)	45
1.37 Removing heating/temperature/time control switch E13 (diesel)	46
1.38 Operation and function of heating/temperature/time control switch E13 (diesel)	46
1.39 Removing and installing pre-selection clock E111 (diesel)	47
1.40 Removing and installing heater control unit J65 (diesel)	47



1.41	Checking heater control unit J65 (diesel)	48
1.42	Renewing heater fuse S23 (diesel)	49
1.43	Renewing auxiliary heater fuse S62 (diesel)	49
1.44	Removing and installing vent (diesel)	49
1.45	Removing intake hose, outlet duct and combustion air hose (diesel)	50
1.46	Removing intake duct (diesel)	50
1.47	Removing and installing exhaust pipe (diesel)	51
1.48	Dismantling fuel pump G23 (diesel)	51
1.49	Checking fuel pump G23 (diesel)	51
1.50	Checking fuel pump G23 installation position (diesel)	52
1.51	Checking quantity of fuel delivered (diesel)	52
1.52	Operation and function of pre-selection clock E111 (diesel)	54
1.53	Dismantling and assembling heater unit "D2L" (diesel)	57
1.54	Removing and installing heater combustion monitor F16 (diesel)	60
1.55	Checking heater combustion monitor F16 (diesel)	60
1.56	Checking temperature limiting switch F82 (diesel)	61
1.57	Renewing temperature limiting switch F82 (diesel)	62
1.58	Renewing heater overheating switch F17 (diesel)	62
1.59	Checking heater overheating switch F17 (diesel)	62
1.60	Checking temperature sensor G18 (diesel)	64
1.61	Removing and installing combustion, fresh and heated air blower V81 (diesel)	65
1.62	Checking combustion, fresh and heated air blower V81 (diesel)	65
1.63	Dismantling and assembling combustion, fresh and heated air blower V81 (diesel)	66
1.64	Blower wheel and coupling installation dimensions (diesel)	66
2	Auxiliary air heaters B3LP/D3LP/B3LC/D3LC	67
2.1	Self-diagnosis of auxiliary air heaters -B3LP/D3LP/B3LC/D3LC- using basic unit VAS 5019/1, vehicles ► 08.99	67
2.2	Self-diagnosis of auxiliary air heaters B3LP / D3LP compact / B3LC / D3LC compact using basic unit VAS 5019/1, vehicles 09.99 ►	67
2.3	Function	68
2.4	Test prerequisites for self-diagnosis	69
2.5	Operation and function of basic unit VAS 5019/1	70
2.6	Connecting basic unit VAS 5019/1 and interrogating fault memory; vehicles without camping equipment	70
2.7	Connecting basic unit VAS 5019/1 and interrogating fault memory; vehicles with camping equipment	74
2.8	Fault table	76
2.9	Erasing fault memory using basic unit VAS 5019/1	85
2.10	Technical data for heaters; vehicles ► 08.99	86
2.11	Technical data for heaters; vehicles 09.99 ►	86
2.12	Functional description	87
2.13	Method of operation	87
2.14	Repairing auxiliary air heater	88
2.15	Removing heater unit with bracket	91
2.16	Removing and installing glow plug for heater Q9	92
2.17	Checking glow plug for heater Q9	93
2.18	Removing and installing glow plug mantle	93
2.19	Removing heater control unit J65	94
2.20	Removing and installing heating/temperature/time control switch E13	95
2.21	Removing and installing temperature sensor G18	96
2.22	Removing and installing pre-selection clock E111	96
2.23	Renewing fuses in fuse box	97
2.24	Removing vent in vehicles without camping equipment	97
2.25	Removing vent in vehicles with camping equipment	98
2.26	Removing and installing intake duct	98
2.27	Removing outlet duct and combustion air hose	99
2.28	Removing and installing exhaust system	99



2.29	Removing pre-selection clock with temperature regulator E187 , vehicles ▶ 08.98	100
2.30	Removing pre-selection clock with temperature regulator E187 , vehicles 09.98 ▶	100
2.31	Dismantling fuel pump G23	101
2.32	Checking fuel pump G23 installation position	101
2.33	Checking quantity of fuel delivered	101
2.34	Operation and function of pre-selection clock with temperature regulator E187 , vehicles ▶ 08.98	103
2.35	Operation and function of pre-selection clock with temperature regulator E187 , vehicles 09.98 ▶	107
2.36	Dismantling and assembling heater unit	110
2.37	Removing and installing outer covers and outlet collector	112
2.38	Manufacturer's plate "Original replacement part"	113
2.39	Removing and installing insulation cover	113
2.40	Removing and installing flame monitor G64 and heater overheating switch F17	113
2.41	Checking wiring routing in heater unit	114
2.42	Removing and installing combustion, fresh and heated air blower V81	114
2.43	Removing and installing printed circuit board for temperature sensor, blower motor and glow plug duty cycle control unit J372	115
3	Auxiliary coolant heater D3W	116
3.1	Self-diagnosis of auxiliary coolant heater D3W using basic unit VAS 5019/1	116
3.2	Function	116
3.3	Test prerequisites for self-diagnosis	117
3.4	Operation and function of basic unit VAS 5019/1	117
3.5	Connecting basic unit VAS 5019/1 and interrogating fault memory	118
3.6	Fault table	120
3.7	Repairing auxiliary coolant heater -D3W-	122
3.8	Checking ambient temperature switch F38	123
3.9	Removing ambient temperature switch F38	125
3.10	Removing and installing exhaust system	126
3.11	Securing exhaust pipe to heater unit	126
3.12	Removing and installing heater unit	127
3.13	Dismantling and assembling heater unit D3W	128
3.14	Removing heater control unit J162	130
3.15	Checking overheating sensor G189	130
3.16	Checking coolant temperature sender, heating G241	130
3.17	Removing glow plug for heater Q9	131
3.18	Heat exchanger installation position	131
3.19	Removing flame monitor G64	131
3.20	Checking flame monitor G64	132
3.21	Connecting auxiliary coolant heater D3W to coolant circuit	132
3.22	Auxiliary coolant heater -D3W- fuel supply	134
3.23	Removing and installing fuel pump G23	135
3.24	Dismantling fuel pump G23	136
3.25	Checking fuel pump G23 installation position	136
3.26	Checking quantity of fuel delivered	136
3.27	Securing fuel line in engine compartment	139
3.28	Securing fuel line on heater unit	139
3.29	Auxiliary coolant heater D3W control	139
4	Auxiliary coolant heaters -B7W/D7W-	141
4.1	Self-diagnosis of auxiliary coolant heater -B7W/D7W-	141
4.2	Rectifying faults which have occurred	143
4.3	Repairing auxiliary coolant heater -B7W/D7W-	145
4.4	Removing and installing heater control unit J162 , resistance wire relay J116 and fresh air blower relay J13	148
4.5	Removing pre-selection clock E111	148
4.6	Removing and installing switch for control relay - heater regulating valve open F102	149



4.7	Fuse assignment on fuse carrier under driver's seat	149
4.8	Removing and installing exhaust system	150
4.9	Securing exhaust pipe to heater unit	150
4.10	Removing and installing heater unit	151
4.11	Operation and function of pre-selection clock E111	152
4.12	Dismantling and assembling heater unit -B7W/D7W-	155
4.13	Removing and installing combustion air blower V6	158
4.14	Removing combustion head	158
4.15	Removing and installing heat exchanger	159
4.16	Removing and installing temperature sensor G18	159
4.17	Checking resistance of temperature sensor G18	160
4.18	Removing and installing heater overheating switch F17	161
4.19	Resetting triggered heater overheating switch F17	162
4.20	Removing cover	162
4.21	Removing console	162
4.22	Removing series resistor N6	162
4.23	Removing 12-pin connector T12	163
4.24	Connector assignment of 12-pin connector T12	163
4.25	Removing and installing circulation pump V55	164
4.26	Checking engine glow plugs Q6	164
4.27	Removing and installing glow plug mantle	165
4.28	Removing flame monitor G64	165
4.29	Connecting auxiliary coolant heater -B7W/D7W- to coolant circuit	166
4.30	Auxiliary coolant heater -B7W/D7W- fuel supply	170
4.31	Removing and installing fuel pump G23	172
4.32	Securing fuel line in engine compartment	173
4.33	Checking quantity of fuel delivered	173
4.34	Regulating auxiliary coolant heater -B7W/D7W- in heating mode	175
5	Auxiliary coolant heaters -B4W/D4W-	180
5.1	Repairing auxiliary coolant heater -B4W/D4W-	180
5.2	Removing ambient temperature switch F38	182
5.3	Removing and installing exhaust system	183
5.4	Removing circulation pump V55	183
5.5	Securing exhaust pipe to heater unit	184
5.6	Removing pre-selection clock E111	184
5.7	Test driving TDI vehicles with auxiliary coolant heater	185
5.8	Removing and installing heater unit -B4W/D4W-	188
5.9	Securing the intake hose	191
5.10	Dismantling and assembling heater unit B4W (petrol)	192
5.11	Heat exchanger (petrol) installation position	193
5.12	Removing heat exchanger (petrol)	193
5.13	Removing flame monitor G64 (petrol)	194
5.14	Removing glow plug for heater Q9 (petrol)	194
5.15	Removing heater control unit J162 (petrol)	194
5.16	Renewing combustion air blower V6 (petrol)	195
5.17	Removing overheating sensor G189 (petrol)	195
5.18	Removing coolant temperature sender, heating G241 (petrol)	195
5.19	Dismantling and assembling heater unit D4W (diesel)	196
5.20	Heat exchanger (diesel) installation position	197
5.21	Removing heat exchanger (diesel)	197
5.22	Removing flame monitor G64 (diesel)	198
5.23	Removing glow plug for heater Q9 (diesel)	198
5.24	Removing heater control unit J162 (diesel)	198
5.25	Renewing combustion air blower V6 (diesel)	199
5.26	Removing overheating sensor G189 (diesel)	199
5.27	Removing coolant temperature sender, heating G241 (diesel)	199



5.28	Checking flame monitor G64	200
5.29	Checking overheating sensor G189	200
5.30	Checking coolant temperature sender, heating G241	201
5.31	Checking ambient temperature switch F38	202
5.32	Connecting auxiliary coolant heaters B4W and D4W to coolant circuit	203
5.33	Bleeding coolant circuit in vehicles with auxiliary coolant heater B4W/D4W	204
5.34	Fuel supply to auxiliary coolant heaters B4W/D4W	204
5.35	Removing and installing metering pump V54	208
5.36	Dismantling metering pump V54	209
5.37	Checking the installation position of metering pump V54	209
5.38	Checking quantity of fuel delivered	209
5.39	Auxiliary coolant heater B4W and D4W control	211