



Contents

01 - Self-diagnosis	1
1 Self-diagnosis of anti-lock brake system with electronic differential lock (ABS/EDL Bosch 5.0)	1
1.1 Self-diagnosis of anti-lock brake system with electronic differential lock (ABS/EDL Bosch 5.0)	1
1.2 Function	1
1.3 Technical data of self-diagnosis	1
1.4 Safety precautions and fundamental points regarding fault finding	2
2 Electrical/electronic components and fitting locations ABS/EDL Bosch 5.0	3
2.1 Electrical/electronic components and fitting locations ABS/EDL Bosch 5.0	3
3 Faults displayed by warning lamps K47 and K7	6
3.1 Faults displayed by warning lamps K47 and K7	6
4 Performing self diagnosis	7
4.1 Performing self diagnosis	7
4.2 Test prerequisites for self-diagnosis	7
4.3 Connecting fault reader V.A.G 1551 and selecting function	7
4.4 Connecting Vehicle Diagnosis, Testing and Information System VAS 5051 and selecting ABS control unit	10
4.5 List of selectable functions	10
4.6 Automatic test sequence	10
4.7 Interrogating fault memory	11
4.8 Fault table	12
4.9 Erasing fault memory, ending output	20
4.10 Reading measured value block	21
5 Electrical check of ABS/EDL Bosch 5.0	24
5.1 Electrical check of ABS/EDL Bosch 5.0	24
5.2 Test prerequisites	25
5.3 Multi-pin connector with contact assignment	25
5.4 Test table	27
5.5 Adjusting brake light switch	32
6 Self-diagnosis of anti-lock brake system with electronic differential lock ABS/EDL Bosch 5.3	33
6.1 Self-diagnosis of anti-lock brake system with electronic differential lock ABS/EDL Bosch 5.3	33
6.2 Function	33
6.3 Layout of ABS/EDL Bosch 5.3	34
6.4 Self-diagnosis technical data	35
6.5 Safety precautions and fundamental points regarding fault finding	35
6.6 Fault finding with fault reader V.A.G 1551 or tester VAS 5051 on ABS/EDL Bosch 5.3 (flow chart)	36
7 ABS/EDL Bosch 5.3 electrical/electronic components and fitting locations	37
7.1 ABS/EDL Bosch 5.3 electrical/electronic components and fitting locations	37
8 Faults displayed by warning lamps K47 and K7	41
8.1 Faults displayed by warning lamps K47 and K7	41
9 Performing self diagnosis	42
9.1 Performing self diagnosis	42
9.2 Test prerequisites for self-diagnosis	42
9.3 Connecting fault reader V.A.G 1551 and selecting function	42
9.4 Connecting Vehicle Diagnosis, Testing and Information System VAS 5051 and selecting engine electronics control unit	45
9.5 List of selectable functions	45
9.6 Interrogating fault memory	46
9.7 Fault table	46
9.8 Erasing fault memory, ending output	52



9.9	Read measured value block	53
9.10	Final control diagnosis	56
10	ABS/EDL Bosch 5.3 electrical tests	63
10.1	ABS/EDL Bosch 5.3 electrical tests	63
10.2	Test prerequisites	64
10.3	Multi-pin connector with contact assignment	64
10.4	Test table	66
11	Function of self-diagnosis for ABS/EDL/TCS/ESP Bosch 5.3	70
11.1	Function of self-diagnosis for ABS/EDL/TCS/ESP Bosch 5.3	70
11.2	Function	71
11.3	Allocation of ABS/EDL/TCS (ASR) and ESP Bosch 5.3	71
11.4	Self-diagnosis technical data	72
11.5	Safety precautions and fundamental points regarding fault finding	72
11.6	Fault finding with fault reader V.A.G 1551 or tester VAS 5051 on ABS/EDL/TCS/ESP Bosch 5.3 (flow chart)	73
12	Electrical/electronic components and fitting locations, ABS/EDL/TCS/ESP Bosch 5.3	74
12.1	Electrical/electronic components and fitting locations, ABS/EDL/TCS/ESP Bosch 5.3	74
13	Faults displayed by warning lamps K 32, K47, K118 and K155	81
13.1	Faults displayed by warning lamps K 32, K47, K118 and K155	81
14	Performing self diagnosis	83
14.1	Performing self diagnosis	83
14.2	Test prerequisites for self-diagnosis	83
14.3	Connecting fault reader V.A.G 1551 and selecting function	84
14.4	Connecting Vehicle Diagnosis, Testing and Information System VAS 5051 and selecting ABS control unit	86
14.5	List of selectable functions	87
14.6	Interrogating fault memory	87
14.7	Fault table (fault code 00257 - 00532)	88
14.8	Fault table (fault code 00597 - 01424)	96
14.9	Fault table (fault code 01425 - 65535)	103
14.10	Erasing fault memory, ending output	109
14.11	Running gear and brake allocation using PR numbers (PR No.)	110
14.12	Coding control unit	112
14.13	Read measured value block	124
14.14	Initiating basic setting	131
15	Electrical check of ABS/EDL/TCS/ESP Bosch 5.3	135
15.1	Electrical check of ABS/EDL/TCS/ESP Bosch 5.3	135
15.2	Test prerequisites	135
15.3	Multi-pin connector with contact assignment	136
15.4	Test table (test steps 1 - 16)	140
15.5	Test table (test steps 17 - 26)	147
16	Definitions	154
16.1	Definitions	154