



Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Tools	1
1.3 Connecting fault reader	2
2 Self-diagnosis of airbag system	3
2.1 Self-diagnosis of airbag system	3
2.2 Function	3
2.3 Interrogating fault memory	6
2.4 Erasing fault memory, ending output	7
2.5 Fault table	8
2.6 Coding airbag control unit using fault reader V.A.G 1551	9
2.7 Read measured value block	11
2.8 Blocking and activating front passenger's airbag unit (adapting)	15
2.9 Test box VAS 5056	22
3 Self-diagnosis for radio remote control for central locking from model year 2001	24
3.1 Self-diagnosis for radio remote control for central locking from model year 2001	24
3.2 Functional description	24
3.3 Initiating self-diagnosis for radio remote control for central locking	24
3.4 Overview of the selectable functions	25
3.5 Interrogating control unit version	25
3.6 Interrogating fault memory	26
3.7 Final control diagnosis	27
3.8 Erasing fault memory	27
3.9 Ending output	28
3.10 Fault table	28
3.11 Read measured value block	30
3.12 Display group overview	31