



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Brake master cylinder and brake servo	1
1.2 Front brake FS III	1
1.3 Front brake FN 3	2
1.4 Rear brakes CI 38	3
1.5 Rear brake CII 41	3
1.6 Rear brakes, Bosch BIR, Caddy 2011 ▶	4
<b>2 Allocation</b>	<b>5</b>
2.1 Front brakes	5
2.2 Front brakes Caddy 2011 ▶	5
2.3 Rear brakes	6
2.4 Rear brakes Caddy 2011 ▶	6
<b>3 Brake test</b>	<b>8</b>
3.1 General information	8
3.2 Test for vehicles with front and all-wheel drive	8
<b>45 - Anti-lock brake system</b>	<b>9</b>
<b>1 General information</b>	<b>9</b>
1.1 General notes on anti-lock brake system	9
1.2 Notes for repair work on anti-lock brake system	9
1.3 Fault display via warning lamps	11
<b>2 Vehicle diagnosis, testing and information system</b>	<b>14</b>
2.1 Connecting vehicle diagnostic tester and selecting functions	14
<b>3 Overview of fitting locations</b>	<b>15</b>
3.1 Electrical and electronic components and fitting locations - ABS Mark 70 (ABS/TCS)	15
3.2 Electrical and electronic components and fitting locations - ABS Mark 60 (ABS/EDL/TCS/ESP)	17
<b>4 Control unit and hydraulic unit</b>	<b>19</b>
4.1 Assembly overview - ABS Mark 70 (ABS/TCS)	19
4.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	21
4.3 Separating and assembling ABS control unit J104 and ABS hydraulic unit N55	24
4.4 Connecting brake lines to hydraulic unit	26
4.5 Assembly overview - ABS Mark 60 (ABS/EDL/TCS/ESP)	26
4.6 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	29
4.7 Separating and assembling ABS control unit J104 and ABS hydraulic unit N55	34
4.8 Connecting brake lines to hydraulic unit	35
<b>5 Sensors</b>	<b>37</b>
5.1 Assembly overview - speed sensor on front axle	37
5.2 Removing and installing speed sensor on front axle	38
5.3 Assembly overview - speed sensor on rear axle	38
5.4 Removing and installing speed sensor on rear axle	39
5.5 Removing and installing ESP sensor unit G419	39
5.6 Removing and installing steering angle sender G85	40
<b>46 - Brakes - mechanism</b>	<b>41</b>
<b>1 Front brakes</b>	<b>41</b>
1.1 Assembly overview - front brake caliper FS III	41
1.2 Removing and installing brake pads/linings	43
1.3 Removing and installing brake caliper	46
1.4 Assembly overview - front brake caliper FN 3	48
1.5 Removing and installing brake pads/linings	50



1.6	Removing and installing brake caliper	53
<b>2</b>	<b>Rear brakes</b>	<b>55</b>
2.1	Assembly overview - rear brake CI 38	55
2.2	Removing and installing brake caliper	57
2.3	Removing and installing brake pads/linings	59
2.4	Assembly overview - rear brake CII 41	61
2.5	Installation instructions for brake carrier CII 41	63
2.6	Removing and installing brake caliper	64
2.7	Removing and installing brake pads/linings	65
2.8	Assembly overview - rear brake CII 41 (all-wheel drive)	68
2.9	Assembly overview - rear brakes, Bosch BIR, Caddy 2011 ►	71
2.10	Removing and installing brake caliper	72
2.11	Removing and installing brake pads/linings	74
<b>3</b>	<b>Handbrake</b>	<b>77</b>
3.1	Assembly overview - handbrake lever	77
3.2	Removing and installing handbrake cable	77
3.3	Removing and installing handbrake cable, Caddy 2011 ►	79
3.4	Adjusting handbrake	81
3.5	Adjusting handbrake, Caddy 2011 ►	82
<b>4</b>	<b>Brake pedal</b>	<b>84</b>
4.1	Assembly overview - brake pedal	84
4.2	Separating brake pedal from brake servo	85
<b>47</b>	<b>Brakes - hydraulics</b>	<b>86</b>
<b>1</b>	<b>Front brake caliper</b>	<b>86</b>
1.1	Assembly overview - brake caliper FS III	86
1.2	Removing and installing brake caliper FS III	87
1.3	Assembly overview - brake caliper FN3	88
1.4	Removing and installing brake caliper piston FN 3	89
<b>2</b>	<b>Rear brake caliper</b>	<b>93</b>
2.1	Assembly overview - brake caliper CI 38	93
2.2	Assembly overview - brake caliper CII 41	94
2.3	Assembly overview - brake caliper Bosch BIR	95
2.4	Dismantling and assembling brake caliper	96
2.5	Pre-bleeding brake caliper	98
<b>3</b>	<b>Hydraulic system</b>	<b>99</b>
3.1	General notes on brake fluid	99
3.2	Pre-bleeding hydraulic system	99
3.3	Bleeding hydraulic system following standard procedure	100
3.4	Subsequent bleeding of hydraulic system	101
3.5	Testing for leaks	102
<b>4</b>	<b>Brake servo and brake master cylinder</b>	<b>103</b>
4.1	Assembly overview - brake servo/brake master cylinder	103
4.2	Removing and installing brake master cylinder	105
4.3	Removing and installing brake servo	107
4.4	Removing and installing brake light switch F and brake pedal switch F47 to model year 2007	109
4.5	Removing and installing brake light switch F from model year 2007	110
4.6	Removing and installing brake light switch F , right-hand drive	111
<b>5</b>	<b>Vacuum system</b>	<b>114</b>
5.1	Vacuum pump for brake servo (vehicles with diesel engine)	114
5.2	Checking non-return valve	114
<b>6</b>	<b>Brake lines/brake hoses</b>	<b>115</b>
6.1	Removing and installing front brake hoses	115
6.2	Removing and installing rear brake hoses	116



---

6.3	Repairing brake lines .....	117
6.4	Assembly overview - flanging tool .....	118
6.5	Work instructions .....	119