



Contents

00 - Technical data	1
1 Safety instructions	1
2 Moulded foam elements	2
3 Galvanized body parts	3
4 Laser welding	4
5 Strengthened steel body panels	5
6 Key vehicle data	8
6.1 Vehicle identification number	8
6.2 Identification plate	11
6.3 Vehicle data sticker	11
7 Gaps/shut lines	13
7.1 Body - front	13
7.2 Body - rear	15
8 Gap dimensions, model year 2011 ▶	20
8.1 Body - front	20
8.2 Body - rear	22
9 Body dimensions	27
9.1 Body - front	27
9.2 Body - centre	33
9.3 Body - rear	38
9.4 Floor group - front	41
9.5 Floor group - centre	45
9.6 Floor group - rear	46
10 Alignment jig	48
10.1 Alignment jig Caddy	48
10.2 Alignment jig Caddy »Maxi«	49
10.3 Portal gauges overview, 2-door vehicles	50
10.4 Portal gauges overview, 4-door vehicles	51
50 - Body - front	53
1 Renewing suspension strut turret	53
1.1 Tools	53
1.2 Removing	54
1.3 Installing	54
2 Renewing right bracket	57
2.1 Tools	57
2.2 Removing	58
2.3 Installing	59
3 Renewing left console	61
3.1 Tools	62
3.2 Removing	62
3.3 Installing	64
4 Renewing retaining bracket for subframe	67
4.1 Tools	67
4.2 Removing	68
4.3 Installing	69
5 Renewing lateral cover plate for upper longitudinal member	71
5.1 Tools	71
5.2 Removing	71
5.3 Installing	72



6	Renewing lateral cover plate for upper longitudinal member, model year 2011 ►	73
6.1	Tools	73
6.2	Removing	74
6.3	Installing	75
7	Renewing upper wheel housing longitudinal member	79
7.1	Tools	79
7.2	Removing	79
7.3	Installing	80
8	Renewing upper longitudinal member for wheel housing - part section	81
8.1	Tools	81
8.2	Removing	82
8.3	Installing	83
9	Renewing upper longitudinal member for wheel housing - part section - model year 2011 ►	84
9.1	Tools	85
9.2	Removing	86
9.3	Installing	87
10	Renewing front wheel housing - part section	89
10.1	Tools	90
10.2	Removing	90
10.3	Installing	90
11	Repairing threads for securing subframe	92
11.1	Contents of thread repair kit	94
11.2	Repairing threads	94
12	Renewing front longitudinal member	98
12.1	Tools	99
12.2	Removing	99
12.3	Installing	101
13	Renewing front longitudinal member - part section	107
13.1	Tools	107
13.2	Removing	108
13.3	Installing	110
14	Renewing end plate for front longitudinal member	112
14.1	Tools	112
14.2	Removing	113
14.3	Installing	113
51 - Body - centre		115
1	Renewing roof	115
1.1	Tools	115
1.2	Removing	117
1.3	Installing	119
2	Renewing roof »vehicles with ladder flap«	127
2.1	Tools	127
2.2	Removing	129
2.3	Installing	131
3	Renewing roof »Caddy Maxi«	139
3.1	Tools	139
3.2	Removing	141
3.3	Installing	143
4	Renewing front roof cross member	149
4.1	Tools	149
4.2	Removing	149
4.3	Installing	150



5	Renewing roof reinforcement	152
5.1	Tools	152
5.2	Removing	152
5.3	Installing	153
6	Renewing rear roof cross member	155
6.1	Tools	155
6.2	Removing	155
6.3	Installing	157
7	Renewing rear roof cross member (vehicles with ladder flap)	160
7.1	Tools	160
7.2	Removing	161
7.3	Installing	161
8	Renewing side panel	163
8.1	Tools	164
8.2	Removing	164
8.3	Installing	167
9	Renewing side panel - part section	171
9.1	Tools	172
9.2	Removing	172
9.3	Installing	173
10	Renewing side panel beneath guide rail	176
10.1	Tools	177
10.2	Removing	177
10.3	Installing	178
11	Renewing side panel - part section »Caddy Maxi«	183
11.1	Tools	184
11.2	Removing	184
11.3	Installing	186
12	Renewing side panel beneath guide rail »Caddy Maxi«	191
12.1	Tools	192
12.2	Removing	192
12.3	Installing	194
13	Renewing hinge pillar (A-pillar) - part section	199
13.1	Tools	199
13.2	Removing	199
13.3	Installing	203
14	Renewing inner hinge pillar (A-pillar)	207
14.1	Tools	208
14.2	Removing	208
14.3	Installing	208
15	Renewing upper hinge pillar reinforcement	210
15.1	Tools	211
15.2	Removing	211
15.3	Installing	212
16	Renewing lower hinge pillar reinforcement - part section	214
16.1	Tools	214
16.2	Removing	214
16.3	Installing	216
17	Renewing middle pillar	220
17.1	Tools	221
17.2	Removing	221
17.3	Installing	222
18	Renewing reinforcing for middle pillar	226



18.1	Tools	226
18.2	Removing	226
18.3	Installing	229
19	Renewing side member (sliding door side)	231
19.1	Overview of parting cuts »Caddy«	232
19.2	Overview of parting cuts »Caddy Maxi«	233
19.3	Tools	234
19.4	Removing	234
19.5	Installing	235
20	Renewing side member reinforcement	238
20.1	Tools	239
20.2	Removing	239
20.3	Installing	240
21	Renewing inner side member reinforcement - part section	244
21.1	Tools	244
21.2	Removing	244
21.3	Installing	245
22	Renewing connecting piece for floor panel - part section	247
22.1	Tools	247
22.2	Removing	247
22.3	Installing	248
53 - Body - rear		251
1	Renewing rear cross panel	251
1.1	Tools	251
1.2	Removing	251
1.3	Installing	253
2	Renewing lock carrier	255
2.1	Tools	256
2.2	Removing	256
2.3	Installing	257
3	Renewing tail light mounting	259
3.1	Tools	259
3.2	Removing	259
3.3	Installing	261
4	Renewing cross panel member	263
4.1	Tools	263
4.2	Removing	264
4.3	Installing	265
5	Renewing wheel housing liner	266
5.1	Tools	267
5.2	Removing	267
5.3	Installing	268
6	Renewing rear longitudinal member	271
6.1	Tools	272
6.2	Removing	272
6.3	Installing	274
7	Renewing cross member	277
7.1	Tools	278
7.2	Removing	278
7.3	Installing	278
8	Renewing luggage compartment floor - part section	280
8.1	Tools	281
8.2	Removing	281



8.3	Installing	282
-----	------------------	-----