



Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 General information	5
2.1 Notes on clutch	5
3 Safety information	6
3.1 General safety provisions	6
3.2 Safety measures when working on vehicles with a start/stop system	6
3.3 Notes on tow-starting/towing	7
3.4 Safety precautions when using testers and measuring instruments during a road test	7
4 Repair notes	8
4.1 General repair instructions	8
4.2 Gaskets and seals	9
4.3 Nuts and bolts	9
4.4 Oil filter change – »yes or no?«	9
4.5 Electrical components	10
5 Technical data	11
5.1 Capacities	11
5.2 Allocation gearbox - engine	11
30 - Clutch	15
1 Clutch	15
1.1 Assembly overview - dual clutch	15
1.2 Removing and installing clutch end cover	17
1.3 Removing dual clutch	23
1.4 Installing and adjusting the dual clutch	25
34 - Controls, housing	31
1 Mechatronic unit	31
1.1 Electrical and electronic components for the dual clutch gearbox and their locations	31
1.2 Removing and installing mechatronic unit	32
1.3 Removing and installing gearbox input speed sender G182 and oil temperature sender in multi-plate clutch G509	52
2 Selector mechanism	54
2.1 Assembly overview - selector mechanism	54
2.2 Removing and installing gear selector cable	57
2.3 Removing and installing selector mechanism	60
2.4 Checking and adjusting selector lever cable	63
2.5 Emergency release from position P	65
2.6 Removing and installing selector lever handle	66
2.7 Moving push-button in the handle to installation position	69
2.8 Checking selector mechanism	70
2.9 Renewing selector shaft seal	71
3 Removing and installing gearbox	74
3.1 Removing gearbox	74
3.2 Installing gearbox	110
3.3 Specified torques for gearbox	125
4 Transporting gearbox	127
5 Securing to engine and gearbox support	129
6 Bevel box	131
6.1 Removing bevel box	131
6.2 Installing bevel box	135



7	Gear oil circuit	138
7.1	Removing and installing gear oil cooler	138
7.2	Removing and installing gear oil pump	141
7.3	Removing and installing gear oil filter	144
8	Gear oil	146
8.1	Checking gear oil level	146
8.2	Draining and filling gear oil	149
9	Dismantling and assembling gearbox	154
9.1	Assembly overview - gearbox	154
9.2	Assembly overview – flange shaft	156
35 - Gears, shafts		158
1	Currently, no repairs can be made to gears and shafts	158
39 - Final drive - differential		159
1	Oil seals	159
1.1	Overview of fitting locations - seals	159
1.2	Renewing left seal	160
1.3	Renewing right oil seal	162
2	Bevel box	169
2.1	Assembly overview - bevel box	169
2.2	Renewing bevel box seals	170
2.3	Renewing output flange and redetermining thickness of shim	181
2.4	Removing and installing right flange shaft	181
2.5	Renewing needle bearing (polygon bearing) for right flange shaft, and seal on right flange shaft	184
3	Gear oil	187
3.1	Checking gear oil level	187
3.2	Draining and filling gear oil	188