



## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b>   | <b>1</b>  |
| <b>1 Safety information</b>  | <b>1</b>  |
| 1.1 Safety precautions when working on vehicles with a gas system                      | 1         |
| 1.2 Safety regulations for working on fuel supply                                      | 3         |
| 1.3 Safety measures when working on vehicles with a start/stop system                  | 3         |
| 1.4 Safety precautions when using testers and measuring instruments during a road test | 4         |
| 1.5 Safety precautions when working on exhaust system                                  | 4         |
| <b>2 Identification</b>  | <b>5</b>  |
| 2.1 Engine number/engine data  | 5         |
| <b>3 Repair instructions</b>   | <b>6</b>  |
| 3.1 General information  | 6         |
| <b>10 - Removing and installing engine</b>   | <b>8</b>  |
| <b>1 Removing and installing engine</b>  | <b>8</b>  |
| 1.1 Removing engine  | 8         |
| 1.2 Securing engine on engine and gearbox support                                      | 12        |
| 1.3 Installing engine  | 14        |
| <b>2 Assembly mountings</b>  | <b>17</b> |
| 2.1 Assembly overview - assembly mountings   | 17        |
| <b>13 - Crankshaft group</b>   | <b>18</b> |
| <b>1 Cylinder block (pulley end)</b>   | <b>18</b> |
| 1.1 Assembly overview - poly V-belt drive  | 18        |
| 1.2 Assembly overview - cylinder block (pulley end)                                    | 20        |
| 1.3 Removing and installing poly-V belt  | 21        |
| 1.4 Renewing crankshaft oil seal - belt pulley end                                     | 22        |
| 1.5 Removing and installing sealing flange on pulley end                               | 25        |
| <b>2 Cylinder block, gearbox end</b>   | <b>29</b> |
| 2.1 Assembly overview - cylinder block, gearbox end                                    | 29        |
| 2.2 Removing and installing sealing flange on gearbox side                             | 30        |
| <b>3 Crankshaft</b>  | <b>32</b> |
| 3.1 Assembly overview - crankshaft   | 32        |
| 3.2 Allocation of main bearing shells  | 33        |
| 3.3 Removing and installing sender wheel   | 34        |
| 3.4 Crankshaft dimensions  | 34        |
| <b>4 Pistons and conrods</b>   | <b>35</b> |
| 4.1 Assembly overview - pistons and conrods  | 35        |
| 4.2 Checking pistons and cylinder bores  | 36        |
| <b>15 - Cylinder head, valve gear</b>  | <b>39</b> |
| <b>1 Cylinder head</b>   | <b>39</b> |
| 1.1 Assembly overview - cylinder head  | 39        |
| 1.2 Removing and installing cylinder head  | 41        |
| 1.3 Checking compression   | 46        |
| <b>2 Toothed belt drive</b>  | <b>49</b> |
| 2.1 Assembly overview - toothed belt   | 49        |
| 2.2 Removing and installing toothed belt   | 51        |
| <b>3 Valve gear</b>  | <b>57</b> |
| 3.1 Assembly overview - valve gear   | 57        |
| 3.2 Measuring axial play of camshaft   | 59        |
| 3.3 Removing and installing camshaft oil seal  | 59        |
| 3.4 Removing and installing camshaft   | 61        |



|           |  |            |
|-----------|--|------------|
| 3.5       | Removing and installing valve stem seals                                     | 64         |
| <b>4</b>  | <b>Inlet and exhaust valves</b>  | <b>67</b>  |
| 4.1       | Reworking valve seats  | 67         |
| 4.2       | Checking valve guides  | 69         |
| 4.3       | Valve dimensions   | 70         |
| <b>17</b> | <b>- Lubrication</b>   | <b>71</b>  |
| <b>1</b>  | <b>Sump, oil pump</b>  | <b>71</b>  |
| 1.1       | Assembly overview - sump/oil pump  | 71         |
| 1.2       | Removing and installing oil sump   | 73         |
| 1.3       | Removing and installing oil pump   | 75         |
| 1.4       | Engine oil:  | 76         |
| <b>2</b>  | <b>Oil filter, oil pressure switch</b>                                       | <b>77</b>  |
| 2.1       | Assembly overview - oil filter/oil pressure switch                           | 77         |
| 2.2       | Checking oil pressure and oil pressure switch                                | 78         |
| <b>19</b> | <b>- Cooling</b>   | <b>80</b>  |
| <b>1</b>  | <b>Cooling system/coolant</b>  | <b>80</b>  |
| 1.1       | Connection diagram - coolant hoses   | 80         |
| 1.2       | Checking cooling system for leaks  | 80         |
| 1.3       | Draining and adding coolant  | 82         |
| <b>2</b>  | <b>Coolant pump, regulation of cooling system</b>                            | <b>91</b>  |
| 2.1       | Assembly overview - coolant pump, thermostat                                 | 91         |
| 2.2       | Removing and installing coolant pump   | 92         |
| 2.3       | Removing and installing thermostat   | 94         |
| <b>3</b>  | <b>Radiator, radiator fan</b>  | <b>96</b>  |
| 3.1       | Assembly overview - radiator/radiator fan                                    | 96         |
| 3.2       | Removing and installing radiator   | 97         |
| 3.3       | Removing and installing radiator fan   | 98         |
| <b>24</b> | <b>- Mixture preparation - injection</b>                                     | <b>101</b> |
| <b>1</b>  | <b>Injection system</b>  | <b>101</b> |
| 1.1       | Filling/bleeding fuel system   | 101        |
| <b>2</b>  | <b>Injectors</b>   | <b>104</b> |
| 2.1       | Assembly overview - fuel rail with injectors                                 | 104        |
| 2.2       | Removing and installing injectors  | 105        |
| 2.3       | Checking injectors   | 106        |
| <b>3</b>  | <b>Checking natural gas supply system for leaks</b>                          | <b>110</b> |
| 3.1       | Distinguishing between pressure sections of natural gas supply system        | 110        |
| 3.2       | Determining pressure of natural gas system                                   | 112        |
| 3.3       | Determining operating mode of natural gas vehicles                           | 113        |
| 3.4       | Activating and deactivating natural gas mode                                 | 113        |
| 3.5       | Checking gas system for leaks  | 114        |
| <b>4</b>  | <b>Gas injectors</b>   | <b>119</b> |
| 4.1       | Assembly overview - gas rail with gas injectors                              | 119        |
| 4.2       | Removing and installing gas rail with gas injector N366 / N367 / N368 / N369 | 120        |
| <b>5</b>  | <b>Gas pressure regulator</b>  | <b>122</b> |
| 5.1       | Assembly overview - gas pressure regulator                                   | 122        |
| 5.2       | Removing and installing gas pressure regulator                               | 124        |
| <b>6</b>  | <b>Air filter</b>  | <b>131</b> |
| 6.1       | Assembly overview - air filter housing                                       | 131        |
| <b>7</b>  | <b>Intake manifold</b>   | <b>132</b> |
| 7.1       | Assembly overview - intake manifold  | 132        |
| 7.2       | Assembly overview - lower part of intake manifold with fuel rail             | 133        |



|           |  |            |
|-----------|--|------------|
| 7.3       | Removing and installing intake manifold upper part                               | 133        |
| <b>8</b>  | <b>Engine (motor) control unit</b>   | <b>136</b> |
| 8.1       | Removing and installing engine (motor) control unit J623                         | 136        |
| 8.2       | Removing and installing engine (motor) control unit J623 with protective housing | 137        |
| <b>26</b> | <b>Exhaust system</b>  | <b>139</b> |
| <b>1</b>  | <b>Exhaust pipes and silencers</b>   | <b>139</b> |
| 1.1       | Assembly overview - silencers  | 139        |
| 1.2       | Aligning exhaust system free of stress   | 140        |
| 1.3       | Check exhaust system for leaks   | 141        |
| 1.4       | Installation position of clamp   | 141        |
| <b>2</b>  | <b>Exhaust gas cleaning</b>  | <b>142</b> |
| 2.1       | Assembly overview - emission control   | 142        |
| 2.2       | Removing and installing catalytic converter                                      | 145        |
| <b>28</b> | <b>Ignition system</b>   | <b>149</b> |
| <b>1</b>  | <b>Ignition system</b>   | <b>149</b> |
| 1.1       | Assembly overview - ignition system  | 149        |
| 1.2       | Test data, spark plugs   | 150        |