



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on exhaust system	2
2 Identification	3
2.1 Engine number/engine data	3
3 General information	7
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system ..	7
4 Repair notes	8
4.1 Routing and attachment of lines	8
4.2 General repair instructions	8
4.3 General information	8
20 - Fuel supply system	11
1 Procedure should vehicle be misfueled	11
1.1 Procedure should vehicle be misfueled	11
2 Fuel	16
2.1 Assembly overview - fuel tank	16
2.2 Emptying fuel tank	22
2.3 Removing and installing fuel tank	33
3 Fuel delivery unit, fuel gauge sender	40
3.1 Removing and installing fuel delivery unit, fuel gauge sender	40
3.2 Removing and installing fuel gauge sender G	46
4 Plug-in connectors	51
4.1 Separating plug-in connectors	51
5 Fuel cooler	55
5.1 Removing and installing fuel cooler	55
6 Fuel filter	56
6.1 Assembly overview - fuel filter	56
6.2 Removing and installing fuel filter	57
6.3 Removing and installing upper part of fuel filter	59
6.4 Checking fuel filter	61
7 Accelerator pedal	64
7.1 Assembly overview - accelerator module	64
7.2 Removing and installing accelerator module with accelerator position sender G79 / G185	64
8 Fuel pump	67
8.1 Checking fuel system pressurisation pump G6	67
9 Supplementary fuel pump V393	77
9.1 Assembly overview - supplementary fuel pump	77
9.2 Checking supplementary fuel pump V393	78
9.3 Removing and installing supplementary fuel pump V393	79