



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on vehicles with a gas system	1
1.2 Safety regulations for working on fuel supply	3
1.3 Safety measures when working on vehicles with start/stop system	4
1.4 Safety precautions when using testers and measuring instruments during a road test	4
1.5 Safety precautions when working on exhaust system	5
<b>2 Identification</b>	<b>6</b>
2.1 Engine number/engine data	6
<b>3 General information</b>	<b>7</b>
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	7
<b>4 Repair notes</b>	<b>8</b>
4.1 Rules for cleanliness	8
4.2 General information	8
4.3 General repair instructions	9
4.4 Foreign objects in engine	10
4.5 Contact corrosion	10
4.6 Routing and attachment of lines	10
4.7 Fitting radiator and condensers	10
4.8 Checking vacuum system	10
<b>5 Checking gas system</b>	<b>12</b>
5.1 Checking gas system for leaks	12
<b>20 - Fuel supply system</b>	<b>19</b>
<b>1 Fuel system</b>	<b>19</b>
1.1 Overview of fitting locations - fuel system	19
<b>2 Fuel</b>	<b>23</b>
2.1 Assembly overview - fuel tank	23
2.2 Assembly overview - protective covers	30
2.3 Assembly overview - fuel tank shut-off valve	32
2.4 Emptying fuel tank	35
2.5 Removing and installing fuel tank	50
2.6 Removing and installing fuel tank shut-off valve	66
2.7 Releasing high pressure in fuel system	78
2.8 Removing and installing filling connection	79
2.9 Determining residual pressure in natural gas fuel tank	82
<b>3 Fuel delivery unit, fuel gauge sender</b>	<b>104</b>
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	104
3.2 Removing and installing fuel delivery unit, fuel gauge sender	105
3.3 Removing and installing fuel gauge sender G	107
<b>4 Plug-in connectors</b>	<b>108</b>
4.1 Separating plug-in connectors	108
<b>5 Fuel filter</b>	<b>113</b>
5.1 Assembly overview - fuel filter	113
5.2 Removing and installing fuel filter	113
<b>6 Activated charcoal filter system</b>	<b>116</b>
6.1 Assembly overview - activated charcoal filter system	116
6.2 Checking fuel tank breather	116
<b>7 Accelerator pedal</b>	<b>118</b>
7.1 Assembly overview - accelerator module	118



7.2	Removing and installing accelerator module with accelerator position sender G79 / G185	118
<b>8</b>	<b>Fuel pump</b>	<b>121</b>
8.1	Checking fuel system pressurisation pump G6	121