



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Location on gearbox .....	1
1.2 Codes and production dates of gearbox .....	1
1.3 Identification code, assembly allocation, ratios, capacities .....	1
<b>2 Identifying rear final drive</b> .....	<b>5</b>
2.1 Location on rear final drive .....	5
2.2 Codes and production dates of gearbox .....	5
2.3 Identification code, assembly allocation, ratios, capacities .....	5
<b>3 Overview - power transmission</b> .....	<b>8</b>
<b>4 Calculation of gear ratios</b> .....	<b>10</b>
4.1 Notes on performance test .....	10
<b>5 General repair notes</b> .....	<b>11</b>
<b>30 - Clutch</b> .....	<b>14</b>
<b>1 Repairing clutch mechanism</b> .....	<b>14</b>
1.1 Assembly overview - pedal cluster .....	15
1.2 Distinguishing between clutch pedal switches F36 .....	16
1.3 Removing and installing clutch pedal switch F36 with rectangular housing .....	16
1.4 Removing and installing clutch pedal switch F36 with round housing .....	17
1.5 Removing and installing over-centre spring .....	17
1.6 Removing and installing clutch pedal .....	19
1.7 Assembly overview - hydraulic system .....	20
1.8 Removing and installing master cylinder .....	22
1.9 Bleeding clutch system .....	25
<b>2 Repairing clutch release mechanism</b> .....	<b>26</b>
2.1 Assembly overview clutch release mechanism .....	26
<b>3 Repairing clutch</b> .....	<b>28</b>
3.1 Assembly overview .....	28
<b>34 - Controls, housing</b> .....	<b>31</b>
<b>1 Connecting VAS 5051 and selecting functions</b> .....	<b>31</b>
<b>2 Electrical and electronic components and their locations</b> .....	<b>33</b>
2.1 Overview of electrical and electronic components and their locations .....	33
2.2 Removing and installing all-wheel drive control unit J492 .....	35
2.3 Removing and installing Haldex coupling pump V181 .....	36
<b>3 Electrical check of Haldex coupling</b> .....	<b>38</b>
<b>4 Repairing selector mechanism</b> .....	<b>43</b>
4.1 Installation position of selector mechanism .....	43
4.2 Removing and installing gear knob and cover .....	45
4.3 Repairing gear lever and selector housing .....	46
4.4 Assembly overview - removing and installing selector cables .....	48
4.5 Removing and installing selector mechanism .....	49
4.6 Adjusting selector mechanism .....	53
<b>5 Removing and installing gearbox</b> .....	<b>57</b>
5.1 Removing .....	57
5.2 Transporting gearbox .....	64
5.3 Installing .....	64
5.4 Specified torques .....	71
<b>6 Removing and installing bevel box</b> .....	<b>72</b>
<b>7 Checking gear oil in manual gearbox with bevel box</b> .....	<b>75</b>



<b>8</b>	<b>Dismantling and assembling gearbox</b>	<b>76</b>
8.1	Overview - gearbox	76
8.2	Assembly overview	78
8.3	Removing and installing cover for gearbox housing and 5th gear	79
8.4	Removing and installing gearbox housing and selector mechanism	80
8.5	Removing and installing input shaft, output shaft, differential and selector forks	81
8.6	Procedure for removing and installing gearbox housing cover, gearbox housing, selector mechanism, input shaft, output shaft, differential and selector forks	82
<b>9</b>	<b>Assembly overview - Repairing gearbox housing and clutch housing</b>	<b>93</b>
<b>10</b>	<b>Dismantling and assembling selector mechanism on gearbox side</b>	<b>99</b>
10.1	Assembly overview - selector shaft	99
<b>11</b>	<b>Dismantling and assembling selector forks</b>	<b>103</b>
<b>35 - Gears, shafts</b>		<b>108</b>
<b>1</b>	<b>Dismantling and assembling input shaft</b>	<b>108</b>
1.1	Assembly overview - input shaft	108
1.2	Modification in springs for 5th gear synchronisation from gearbox date 05 11 1.	115
<b>2</b>	<b>Adjusting input shaft</b>	<b>116</b>
2.1	Adjusting input shaft	116
2.2	Table of shims	117
2.3	Carrying out check measurement	119
<b>3</b>	<b>Adjusting output shaft</b>	<b>120</b>
<b>4</b>	<b>Dismantling and assembling output shaft</b>	<b>123</b>
4.1	Assembly overview - output shaft	123
4.2	1st gear synchronisation changed from gearbox date 04 09 0	136
<b>5</b>	<b>Dismantling and assembling reverse shaft</b>	<b>138</b>
<b>39 - Final drive - rear differential</b>		<b>141</b>
<b>1</b>	<b>Propshaft</b>	<b>141</b>
1.1	Assembly overview - repairing propshaft	141
1.2	Removing and installing propshaft	146
1.3	Removing and installing front flexible coupling	151
1.4	Removing and installing rear flexible coupling	153
<b>2</b>	<b>Haldex coupling</b>	<b>158</b>
2.1	Checking function of Haldex coupling	158
2.2	Checking oil level or changing oil in Haldex coupling	158
2.3	Changing oil filter for Haldex coupling	161
<b>3</b>	<b>Modifying gearbox support VW 353</b>	<b>162</b>
<b>4</b>	<b>Checking gear oil in rear final drive and topping up</b>	<b>163</b>
<b>5</b>	<b>Removing and installing rear final drive</b>	<b>164</b>
<b>6</b>	<b>Renewing propshaft flange oil seal on rear final drive (final drive removed)</b>	<b>168</b>
<b>7</b>	<b>Renewing flange shaft oil seals (final drive installed)</b>	<b>171</b>
<b>8</b>	<b>Renewing O-ring between Haldex coupling and pinion housing (final drive removed)</b>	<b>173</b>
<b>9</b>	<b>Renewing O-rings for rear final drive housing cover (final drive installed)</b>	<b>176</b>
<b>10</b>	<b>Dismantling and assembling rear final drive</b>	<b>177</b>
10.1	Assembly overviews - rear final drive	177
10.2	Removing and installing cover for Haldex coupling and plates	178
10.3	Removing and installing pinion housing	179
10.4	Removing and installing differential and bevel gear with stub shaft	181
10.5	Removing and installing cover for Haldex coupling from plate housing	183
10.6	Assembly overview - Removing and installing Haldex coupling cover with plate housing, set of plates, pinion housing with shaft bevel gear, bevel gear with stub shaft and differential	186



<b>11</b>	<b>Dismantling and assembling differential</b>	<b>198</b>
11.1	Assembly overview - differential	198
<b>12</b>	<b>Repair shaft bevel gear mounting</b>	<b>207</b>
12.1	Assembly overview - bevel gear mounting	207
12.2	Assembly sequence - bevel gear mounting	208
<b>13</b>	<b>Repairing bearings for bevel gear with stub shaft</b>	<b>216</b>
13.1	Assembly overview - bearings for bevel gear with stub shaft	216
13.2	Assembly sequence - bearings for bevel gear with stub shaft	218
<b>14</b>	<b>Adjusting shaft bevel gear and bevel gear with stub shaft (final drive gear set)</b>	<b>224</b>
14.1	General notes	224
14.2	Adjustment and marking of final drive gear sets	224
14.3	Position of shims	225
14.4	Adjustment overview - rear final drive	225
14.5	Recommended sequence for new adjustment of final drive gear set	226
14.6	Adjusting shaft bevel gear	226
14.7	Adjusting bevel gear (with stub shaft)	231
<b>39</b>	<b>Final drive - front differential</b>	<b>236</b>
<b>1</b>	<b>Renewing oil seals for flange shafts or right-hand drive flange (gearbox installed)</b>	<b>236</b>
1.1	Renewing oil seal for left flange shaft	236
1.2	Renewing oil seal for flange shaft or right drive flange	237
<b>2</b>	<b>Renewing bevel box output flange oil seal (bevel box removed)</b>	<b>240</b>
<b>3</b>	<b>Dismantling and assembling differential</b>	<b>242</b>
3.1	Assembly overview - differential	242
3.2	Assembly sequence - differential	243
<b>4</b>	<b>Adjustment overview</b>	<b>247</b>
<b>5</b>	<b>Adjusting differential</b>	<b>248</b>
<b>6</b>	<b>Dismantling and assembling bevel box</b>	<b>250</b>
6.1	Bevel box - assembly overview	250
6.2	Assembly sequence - bevel box	253
<b>7</b>	<b>Renewing needle bearing (polygon bearing) for right output shaft or for right flange shaft</b>	<b>265</b>
<b>8</b>	<b>Adjusting shaft bevel gear and bevel gear with stub shaft (final drive gear set)</b>	<b>269</b>
8.1	General notes	269
8.2	Adjustment and marking of final drive gear sets	269
8.3	Position of shims	270
8.4	Adjustment overview - bevel box	270
8.5	Recommended sequence for new adjustment of final drive gear set	271
8.6	Determining shim "S4" thickness when renewing output flange	271
8.7	Adjusting shaft bevel gear	272
8.8	Adjusting bevel gear (with stub shaft)	277