



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Suggestions and criticism of this workshop manual</b>	<b>1</b>
<b>2 Further information on "automatic gearbox 01M"</b>	<b>3</b>
2.1 Self-Study Programme on CD ROM	3
2.2 Design and function of gearbox	3
2.3 Historical development of this gearbox	3
<b>3 Gearbox identification</b>	<b>6</b>
<b>4 Identification codes, engine allocation, ratios, equipment</b>	<b>7</b>
<b>5 Capacities</b>	<b>22</b>
5.1 Planetary gearbox	22
5.2 Final drive	22
<b>6 Repair instructions</b>	<b>23</b>
6.1 Tools	23
6.2 Volkswagen testers	23
6.3 Gearbox	24
6.4 ATF	25
6.5 Changing ATF	26
6.6 Seals and sealing rings	26
6.7 Nuts and bolts	27
6.8 Locking devices	27
6.9 Bearings	27
6.10 Piston rings	27
6.11 Inner plates	28
6.12 Shims	28
6.13 Clutches	28
6.14 Valve body	28
6.15 Electrical components	28
6.16 Guided fault finding, vehicle self-diagnosis and testing	29
<b>7 Repair with an exchange component</b>	<b>30</b>
7.1 General information	30
7.2 Adjustments	30
7.3 Contents of an exchange component	30
7.4 Components of -B1-	32
7.5 Components of -B2-	32
7.6 Clutches	34
7.7 Valve body with ATF strainer	36
<b>8 Fault finding for the automatic 4-speed gearbox</b>	<b>37</b>
8.1 Vehicle cannot drive forwards or backwards	37
8.2 Vehicle will not drive forwards	38
8.3 Vehicle will not reverse	38
8.4 Gearbox oily	38
8.5 Oil or ATF leaks around torque converter	38
8.6 Visible fouling of ATF and/or engine coolant	39
8.7 ATF level too low, final drive oil level too high (or vice versa) - no external leaks in gearbox	39
8.8 Gearbox oily only near breather - no other external leaks in gearbox	39
8.9 ATF escaping from breather (only for longitudinally installed gearbox 01N)	39
8.10 Selector mechanism does not move freely	39
8.11 Not all selector lever positions can be selected; selected drive ranges do not function	40
8.12 Parking lock does not engage	40
8.13 Parking lock disengages »with a jolt« (selector lever sometimes difficult to move from "P" to "R")	40



8.14	Final drive noisy	40
8.15	Performance - jolting in neutral or during certain engine and gearbox movements	41
8.16	Engine speed drops when driving range is selected	41
8.17	Vehicle does not start at all or also starts in "R-D-3-2-1"	41
8.18	Vehicle does not start or engine stalls after a short time	42
8.19	Selector lever can be moved from "N" or "P" without brake being operated	42
8.20	Selector lever cannot be moved from "N" or "P" although brake is operated	42
8.21	Shifts occur sporadically or not at all	42
8.22	All shifts are »hard or jolting«	43
8.23	One particular shift is »hard or jolting«	44
8.24	Shift from 3rd to 4th gear takes »too long« in vehicles through 12.92 having economy/sport switch	44
8.25	Shifts take »too long«	44
8.26	Hard shifts immediately after repair	45
8.27	Gearbox downshifts at constant vehicle speed without apparent reason	45
8.28	Gearbox does not downshift for kickdown	45
8.29	Gearbox does not shift until it warms up	46
8.30	Gearbox switches to emergency running	46
8.31	Selector lever position "1", gearbox does not shift to 1st gear (no power transfer in 1st gear)	46
8.32	Selector lever position "D", "3" or "2", gearbox does not shift to 1st gear	47
8.33	Selector lever position "D", "3" or "2", automatic gearbox does not shift to 2nd gear (no power transfer)	47
8.34	Selector lever position "D" or "3" does not shift to 3rd gear, hydraulic (3H)	47
8.35	Selector lever position "D" or "3" does not shift to 3rd gear, mechanical (3M)	48
8.36	Selector lever position "D" or "3" does not shift to 3rd gear (not gearbox 001)	48
8.37	Selector lever position "D" does not shift to 4th gear	48
8.38	Selector lever position "D" does not shift to 4th gear, mechanical (4M)	49
8.39	Selector lever position "R", automatic gearbox does not shift to reverse gear	49
<b>32</b>	<b>- Torque converter</b>	<b>50</b>
<b>1</b>	<b>Torque converter</b>	<b>50</b>
1.1	Proper handling and installation of torque converter	50
1.2	Identification of torque converter and important differences	51
1.3	Removing sleeve bearing from turbine shaft	53
1.4	Removing and installing torque converter oil seal	54
1.5	Draining torque converter	55
<b>37</b>	<b>- Controls, housing</b>	<b>56</b>
<b>1</b>	<b>Connecting Volkswagen tester and selecting functions</b>	<b>56</b>
<b>2</b>	<b>Carry out basic setting</b>	<b>58</b>
<b>3</b>	<b>Electrical and electronic components and their locations</b>	<b>59</b>
<b>4</b>	<b>Repairing selector mechanism</b>	<b>68</b>
4.1	Checking selector mechanism	68
4.2	Checking operation of the ignition key withdrawal lock	69
4.3	Removing and installing selector lever cable	70
4.4	Checking and adjusting selector lever cable	71
4.5	Dismantling and assembling selector mechanism	72
4.6	Removing and installing selector lever handle	75
4.7	Removing and installing selector lever	77
4.8	Removing and installing selector lever lock solenoid N110 and wiring for selector lever illumination	79
4.9	Removing, installing and adjusting locking cable for ignition key withdrawal lock	81
<b>5</b>	<b>Measuring main pressure</b>	<b>86</b>
<b>6</b>	<b>Removing and installing gearbox - required tools</b>	<b>90</b>
6.1	Modifying support rails VW 457	91



6.2	Removing and installing gearbox	91
6.3	Transporting automatic gearbox	98
6.4	Specified torques	98
6.5	Checking ATF level and topping up	100
6.6	Removing and installing starter bush	104
6.7	Gearbox with selector elements	105
6.8	Securing gearbox to assembly stand	106
<b>7</b>	<b>Dismantling and assembling gearbox</b>	<b>109</b>
7.1	Removing and installing ATF cooler and ATF filler tube	109
7.2	Overview - dismantling and assembling planetary gearbox	110
7.3	I - Removing and installing ATF pump to support tube	110
7.4	II - Removing and installing reverse clutch -K2- to large sun gear	112
7.5	III - Removing and installing freewheel and reverse gear brake -B1-	113
7.6	IV - Planet carrier and gearbox housing with input gear and cover	114
7.7	Dismantling planetary gearbox	116
7.8	Assembling planetary gearbox	122
7.9	Installing exchange component	131
7.10	Overview - all planetary gearbox adjustments	142
7.11	Adjusting planet carrier	145
7.12	Adjusting reverse gear brake -B1-	149
7.13	Adjusting clutch play between -K1- and -K2-	153
7.14	Adjusting 2nd and 4th gear brake -B2-	157
<b>38</b>	<b>Gears, control</b>	<b>166</b>
1	Dismantling and assembling ATF pump	166
2	Dismantling and assembling freewheel with -B1- piston	169
3	Dismantling and assembling 1st to 3rd gear clutch -K1-	171
4	Dismantling and assembling reverse gear clutch -K2-	174
5	Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft	177
6	Removing and installing oil pan	180
7	Removing and installing ATF strainer	182
8	Removing and installing gearbox oil temperature sender G93	183
9	Removing and installing valve body	185
9.1	Overview - valve chest	185
9.2	Procedure for removing and installing valve body	188
10	Dismantling and assembling parking lock	194
<b>39</b>	<b>Final drive - differential</b>	<b>199</b>
1	Checking gear oil in final drive	199
1.1	Vehicles without inspection plug in final drive	199
1.2	Vehicles with inspection plug in final drive	199
2	Removing and installing final drive oil seals	201
2.1	Right side	202
2.2	Left side	203
3	Dismantling and assembling final drive	209
3.1	Overview - final drive repair	209
3.2	Removing and installing input gear	210
3.3	Removing and installing pinion shaft	213
3.4	Removing and installing differential	220
3.5	Dismantling and assembling differential	225
4	Adjusting final drive	235
4.1	Overview of adjustments	235
4.2	Adjustments to be completed after renewing individual components	235



4.3	Adjusting pinion shaft .....	236
4.4	Adjusting input gear .....	239
4.5	Adjusting differential .....	240