



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Repair instructions</b>	<b>1</b>
1.1 Repair instructions	1
<b>2 Gearbox identification</b>	<b>5</b>
2.1 Location on gearbox	5
<b>3 Identification codes, engine allocation, ratios, equipment</b>	<b>6</b>
<b>4 Capacities of planetary gearbox and final drive</b>	<b>7</b>
<b>5 Notes specific to 5-speed automatic gearbox 09A</b>	<b>8</b>
5.1 Gearbox repair	8
<b>32 - Torque converter</b>	<b>10</b>
<b>1 Torque converter</b>	<b>10</b>
1.1 Identification of torque converter	10
1.2 Draining torque converter	10
1.3 Removing and installing torque converter oil seal	11
1.4 Installing torque converter	12
<b>37 - Controls, housing</b>	<b>13</b>
<b>1 Connecting Volkswagen tester and selecting functions</b>	<b>13</b>
<b>2 Electrical and electronic components and their locations</b>	<b>15</b>
2.1 Tiptronic switch F189	18
<b>3 Repairing selector mechanism</b>	<b>19</b>
3.1 Checking selector mechanism	19
3.2 Checking and adjusting selector lever cable	20
3.3 Checking operation of the ignition key withdrawal lock	21
3.4 Removing and installing selector mechanism	22
3.5 Dismantling and assembling shift mechanism	25
3.6 Removing and installing selector lever lock solenoid N110	28
3.7 Removing and installing selector lever cable	30
3.8 Removing and installing locking cable	33
3.9 Adjusting locking cable	35
<b>4 Checking gearbox</b>	<b>37</b>
<b>5 Removing and installing gearbox</b>	<b>38</b>
5.1 Removing gearbox	40
5.2 Transportation of automatic gearbox, securing gearbox to repair stand	45
5.3 Installing gearbox	47
5.4 Torque settings	48
<b>6 Checking ATF level and topping up</b>	<b>50</b>
6.1 Checking ATF level	50
6.2 Topping up ATF	53
6.3 Renewing ATF	53
<b>7 Gearbox repair</b>	<b>55</b>
<b>8 Position of selector elements</b>	<b>57</b>
<b>9 Dismantling and assembling gearbox</b>	<b>58</b>
9.1 Dismantling gearbox	58
<b>10 Assembling gearbox</b>	<b>61</b>
<b>11 Removing and installing ATF cooler</b>	<b>78</b>
11.1 Dismantling and assembling procedure	79
<b>38 - Gears, control</b>	<b>81</b>



<b>1</b>	<b>Housing cover for planetary gearbox</b>	<b>81</b>
1.1	Assembly overview	81
1.2	Pressure accumulator for brake "B4"	83
<b>2</b>	<b>1st through 3rd gear clutch "K1"</b>	<b>85</b>
2.1	Overview - "K1" components	85
2.2	Dismantling and assembling "K1" clutch housing	85
<b>3</b>	<b>Reverse gear clutch "K2" and 3rd through 5th gear clutch "K3"</b>	<b>87</b>
3.1	Overview - "K2" plates	87
3.2	Overview - "K3" plates	88
3.3	Overview - "K2/K3" clutch housing	89
<b>4</b>	<b>5th gear clutch "K4"</b>	<b>91</b>
4.1	Overview - "K4" components "from above"	91
4.2	Overview - "K4" components "from below"	92
<b>5</b>	<b>Valve body</b>	<b>94</b>
5.1	Removing and installing valve body	95
<b>6</b>	<b>Removing and installing sender in gearbox</b>	<b>103</b>
6.1	Removing and installing gearbox input speed sender G182	103
6.2	Removing and installing vehicle speed sender G68 and speed sender for intermediate shaft G265	103
6.3	Removing and installing gearbox oil temperature sender G93 with wiring harness	104
<b>7</b>	<b>Renewing oil seal for selector shaft</b>	<b>106</b>
<b>8</b>	<b>Removing, installing and adjusting multifunction switch F125</b>	<b>107</b>
8.1	Removing multifunction switch F125	107
8.2	Installing and adjusting multifunction switch F125	108
<b>39 - Final drive - differential</b>		<b>110</b>
<b>1</b>	<b>Renewing oil seals for flange shafts</b>	<b>110</b>
1.1	Assembly overview	110
1.2	Renewing oil seal for left flange shaft	111
1.3	Renewing seal for right flange shaft	113