



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Notes on removing	3
1.2 Securing engine to assembly stand	7
1.3 Notes on installing	8
1.4 Assembly mounting	10
1.5 Additional information and removal instructions for vehicles with air conditioner	11
13 - Crankshaft group	13
1 Dismantling and assembling engine	13
1.1 Assembly overview	13
1.2 Removing and installing poly V-belt	17
2 Removing and installing sealing flanges and flywheel or drive plate	20
2.1 Renewing crankshaft oil seal - pulley end	21
2.2 Removing and installing front sealing flange	23
2.3 Removing and installing drive plate	26
3 Dismantling and assembling pistons and conrods	28
3.1 Assembly overview - Pistons and conrods	28
3.2 Checking pistons, piston rings and cylinder bores	31
3.3 Piston and cylinder dimensions	33
4 Removing and installing crankshaft	34
4.1 Colour identification	35
4.2 Crankshaft dimensions	35
15 - Cylinder head, valve gear	37
1 Removing and installing cylinder head	37
1.1 Removing, installing and tensioning toothed belt	38
1.2 Checking semi-automatic toothed belt tensioning roller	43
1.3 Removing and installing cylinder head	44
1.4 Checking compression	48
2 Repairing valve gear	51
2.1 Reworking valve seats	53
2.2 Renewing camshaft oil seal	55
2.3 Removing and installing camshaft	58
2.4 Checking hydraulic bucket tappets	60
2.5 Checking valve guides	61
2.6 Renewing valve guides	62
2.7 Renewing valve stem seals	63
17 - Lubrication	66
1 Removing and installing parts of lubrication system	66
1.1 Engine oil	66
1.2 Assembly overview - Parts of lubrication system	67
1.3 Assembly overview - Oil filter bracket	69
1.4 Removing and installing sump	70
1.5 Checking oil pressure and oil pressure switch	72
19 - Cooling	75



1	Removing and installing parts of cooling system	75
1.1	Parts of cooling system - body side	75
1.2	Parts of cooling system - engine side	77
1.3	Coolant hose schematic diagram	78
1.4	Draining and filling coolant	81
1.5	Removing and installing radiator	83
1.6	Removing and installing coolant pump	85
1.7	Removing and installing thermostat	86
20	Fuel supply system	89
1	Removing and installing parts of fuel supply system	89
1.1	Removing and installing fuel tank with attachments and fuel filter	89
1.2	Removing, installing and checking suction jet pump: vehicles with four-wheel drive	94
1.3	Safety precautions when working on fuel supply system	97
1.4	Rules for cleanliness	98
1.5	Removing and installing fuel delivery unit	98
1.6	Removing and installing fuel gauge sender G	101
1.7	Removing and installing fuel tank	101
1.8	Crash fuel shut-off	103
1.9	Checking fuel pump G23	103
2	Activated charcoal filter system	110
2.1	Function	110
2.2	Repairing parts of activated charcoal filter system	110
2.3	Checking solenoid valve 1 for activated charcoal filter system	111
2.4	Checking fuel tank venting	114
3	Checking electronic power control (EPC)	116
3.1	Function of EPC system	116
3.2	Checking accelerator pedal position sender	117
4	Accelerator mechanism	121
4.1	Repairing accelerator mechanism	121
4.2	Adjusting throttle cable	121
26	Exhaust system	123
1	Removing and installing parts of exhaust system	123
1.1	Vehicles with front-wheel drive	123
1.2	Vehicles with four-wheel drive	126
1.3	Checking catalytic converter	129
2	Secondary air system	132
2.1	Function	132
2.2	Removing and installing parts of secondary air system	132
2.3	Checking combination valve	134
2.4	Checking secondary air pump motor	135
2.5	Checking secondary air inlet valve N112	136