

001 - Basic equipment	1-21
1. Basic equipment	1
2. Battery, ignition/starter switch, X-contact relief relay	2
3. Dash panel insert	3
4. Dash panel insert, immobilizer, rev. counter, odometer display	4
5. Dash panel insert, trailer operation warning lamp	5
6. Dash panel insert, handbrake warning, brake fluid level warning contact, turn signal indicator lamp, main beam warning lamp, fog light warning lamp, digital clock	6
7. Turn signal switch, headlight dipper/flasher switch, parking light switch, front left headlight, front left turn signal	7
8. Hazard warning light switch, turn signal relay, front right headlight, front right turn signal	8
9. Left tail light, left brake light, rear left turn signal, left reversing light, reversing light switch, rear fog light	9
10. Right tail light, right brake light, rear right turn signal, right reversing light, brake light switch	10
11. Self-diagnosis connection, radio connection, cigarette lighter	11
12. Light switch, rear fog light switch	12
13. Glove compartment light, number plate light	13
14. Dual-tone horn, fuel tank flap remote release, horn plate	14
15. Headlight range control regulator, headlight range control motor, switch and instrument illumination regulator	15
16. Heated rear window switch, heated rear window, luggage compartment light	16
17. Fresh air blower switch, fresh air/air recirculation flap switch, fresh air blower, fresh air and air recirculation flap control motor	17
18. Rear window wiper motor, windscreen and rear window washer pump	18
19. Intermittent wiper switch, wiper motor, automatic intermittent wash and wipe relay	19
20. Front interior light, rear left reading light, left door warning lamp	20
21. Rear right reading light, right door warning lamp, vanity mirror illumination	21
002 - 1.6 l/74 kW - Simos, engine code AEH	22-32
1. 1.6 l/74 kW - Simos, engine code AEH	22
2. Alternator, starter	23
3. Simos control unit, ignition system	24
4. Simos control unit, crankcase breather heater element, coolant temperature sender, Hall sender	25
5. Simos control unit, throttle valve module, engine speed sender, power assisted steering pressure switch	26
6. Simos control unit, knock sensor, injectors	27
7. Simos control unit, Lambda probe, air mass meter, activated charcoal filter system solenoid valve, variable intake manifold changeover valve	28
8. Fuel pump, fuel gauge sender, coolant shortage indicator sender	29
9. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, coolant temperature/coolant shortage indicator	30
10. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, self-diagnosis connection, alternator warning lamp	31
11. Dash panel insert, multifunction display, ambient temperature indicator	32
003 - 1.4 l/55 kW - 4AV, engine code AHW	33-43
1. 1.4 l/55 kW - 4AV, engine code AHW	33
2. Alternator, starter	34
3. 4AV injection system control unit, ignition system	35
4. 4CV injection system control unit, crankcase breather heater element, coolant temperature sender, Hall sender	36
5. 4CV injection system control unit, throttle valve module, engine speed sender	37
6. 4AV injection system control unit, intake manifold pressure sender, intake manifold temperature sender, knock sensor, injectors	38
7. 4AV injection system control unit, Lambda probe, activated charcoal filter system solenoid valve, exhaust gas recirculation valve	39
8. Fuel pump, fuel gauge sender, coolant shortage indicator sender	40
9. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, coolant temperature/coolant shortage indicator	41
10. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, self-diagnosis connection	42
11. Dash panel insert, multifunction display, ambient temperature indicator	43
004 - 2.3 l/110 kW - Motronic, engine code AGZ	44-58
1. 2.3 l/110 kW - Motronic, engine code AGZ	44
2. Alternator, starter	45
3. Ignition system	46
4. Motronic control unit. ignition svstem	47

5. Motronic control unit, coolant temperature sender, variable intake manifold changeover valve, Hall sender, intake air temperature sender, crankcase breather heater element	48
6. Motronic control unit, throttle valve module, knock sensor 1, knock sensor 2	49
7. Motronic control unit, engine speed sender	50
8. Motronic control unit, injectors	51
9. Motronic control unit, cruise control system (CCS) switch, thermal switch for fan run-on, continued coolant circulation pump	52
10. Motronic control unit, secondary air pump motor, secondary air inlet valve, clutch pedal switch, cruise control system brake pedal switch, brake light switch	53
11. Motronic control unit, Lambda probe, air mass meter, activated charcoal filter system solenoid valve	54
12. Fuel pump, fuel gauge sender, coolant shortage indicator sender	55
13. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, coolant temperature/coolant shortage indicator	56
14. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, self-diagnosis connection, alternator warning lamp	57
15. Dash panel insert, multifunction display, ambient temperature indicator	58
005 - 1.9 l/66 kW - turbo diesel engine, engine code ALH	59-72
1. 1.9 l/66 kW - turbo diesel engine, engine code ALH	59
2. Alternator, starter	60
3. Diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs - engine	61
4. Diesel direct injection system control unit, glow plug relay, fuel temperature sender, metering adjuster, modulating piston movement sender	62
5. Diesel direct injection system control unit, kickdown switch, idling speed switch, accelerator position sender	63
6. Diesel direct injection system control unit, coolant temperature sender, air mass meter, intake manifold pressure sender, intake manifold temperature sender	64
7. Diesel direct injection system control unit, engine speed sender, needle lift sender	65
8. Diesel direct injection system control unit, variable intake manifold flap changeover valve, exhaust gas recirculation valve, charge pressure control solenoid valve, crankcase breather heater element	66
9. Diesel direct injection system control unit, cruise control system (CCS) switch, clutch pedal switch, commencement of injection valve, fuel shut-off valve	67
10. Diesel direct injection system control unit, coolant heater element, brake pedal switch for CCS/diesel direct injection system, brake light switch, high and low heat output relay(s)	68
11. Fuel gauge sender, coolant shortage indicator sender	69
12. Dash panel insert, oil pressure warning, speedometer sender	70
13. Dash panel insert, coolant temperature/coolant shortage sender, fuel gauge, rev. counter, speedometer, alternator warning lamp	71
14. Dash panel insert, multifunction display, ambient temperature indicator, self-diagnosis connection, cruise control system warning lamp, glow period warning lamp	72
006 - 1.9 l/50 kW - naturally aspirated diesel engine, engine code AGP	73-86
1. 1.9 l/50 kW - naturally aspirated diesel engine, engine code AGP	73
2. Alternator, starter	74
3. Diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs - engine	75
4. Diesel direct injection system control unit, glow plug relay, fuel temperature sender, metering adjuster, modulating piston movement sender	76
5. Diesel direct injection system control unit, kickdown switch, idling speed switch, accelerator position sender	77
6. Diesel direct injection system control unit, coolant temperature display sender, intake manifold pressure sender, commencement of injection valve, intake manifold flap motor	78
7. Diesel direct injection system control unit, engine speed sender, needle lift sender	79
8. Diesel direct injection system control unit, crankcase breather heater element, exhaust gas recirculation valve, fuel shut-off valve	80
9. Diesel direct injection system control unit, cruise control system (CCS) switch, clutch pedal switch	81
10. Diesel direct injection system control unit, coolant heater element, brake pedal switch for CCS/diesel direct injection system, brake light switch, high and low heat output relay(s)	82
11. Fuel gauge sender, coolant shortage indicator sender	83
12. Dash panel insert, oil pressure warning, speedometer sender	84
13. Dash panel insert, coolant temperature/coolant shortage sender, fuel gauge, rev. counter, speedometer, alternator warning lamp	85
14. Dash panel insert, multifunction display, ambient temperature indicator, self-diagnosis connection, cruise control system warning lamp, glow period warning lamp	86

007 - Anti-lock brake system (ABS), anti-lock brake system (ABS) with electronic differential lock (EDL)	87-90
1. Anti-lock brake system (ABS), anti-lock brake system (ABS) with electronic differential lock (EDL)	87
2. ABS control unit with EDL, brake light switch	88
3. ABS control unit with EDL, ABS warning lamp, ABS hydraulic pump	89
4. ABS control unit with EDL, speed sensor	90
008 - Climatronic	91-99
1. Climatronic	91-92
2. Climatronic control unit, temperature flap positioning motor	93
3. Climatronic control unit, central flap positioning motor, footwell/defrost flap positioning motor	94
4. Climatronic control unit, air flow flap positioning motor, vent temperature sender, fresh air intake duct temperature sensor	95
5. Climatronic control unit, ambient temperature sensor, fresh air blower, fresh air blower control unit, sunlight penetration photo sensor	96
6. Climatronic control unit, air conditioner pressure switch	97
7. Radiator fan control unit, radiator fan, air conditioner magnetic coupling, air conditioner cut-off thermo-switch	98
8. Radiator fan control unit, radiator fan thermo-switch	99
009 - Climatronic	100-107
1. Climatronic	100
2. Climatronic control unit, temperature flap control motor	101
3. Climatronic control unit, control motor for central flap, control motor for footwell/defroster flap	102
4. Climatronic control unit, air flow flap control motor, vent temperature sensor, fresh air duct temperature sensor	103
5. Climatronic control unit, ambient air temperature sensor, fresh air blower, fresh air blower control unit, sunlight penetration photosensor	104
6. Climatronic control unit	105
7. Radiator fan control unit, radiator fan, air conditioning system magnetic clutch	106
8. Radiator fan control unit, thermal switch for radiator fan, high-pressure sender	107
010 - Climatronic	108-115
1. Climatronic	108
2. Climatronic control unit, temperature flap control motor	109
3. Climatronic control unit, control motor for central flap, control motor for footwell/defroster flap	110
4. Climatronic control unit, air flow flap control motor, vent temperature sensor, fresh air duct temperature sensor	111
5. Climatronic control unit, ambient air temperature sensor, fresh air blower, fresh air blower control unit, sunlight penetration photosensor	112
6. Climatronic control unit, air conditioning system pressure switch	113
7. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling, air conditioning system thermal switch (switch-off)	114
8. Radiator fan control unit, radiator fan thermal switch, continued coolant circulation control unit, fan run-on thermal switch, continued coolant circulation pump	115
011 - Airbag systems	116-119
1. Airbag systems	116
2. Airbag control unit, airbag coil connector, front airbag igniter, side airbag crash sensors	117
3. Airbag control unit, side airbag igniter, belt tensioner igniter	118
4. Airbag control unit, airbag warning lamp	119
012 - Fog light and rear fog light	120-125
1. Fog light and rear fog light	120
2. Left fog light, left headlight, left side light, front left turn signal	121
3. Right fog light, fog light relay, right headlight, right side light, front right turn signal	122
4. Light switch, fog light switch, rear fog light switch	123
5. Rear fog light, left tail light, brake light, reversing light	124
6. Dash panel insert, turn signal warning lamps, main beam warning lamp, rear fog light warning lamp	125
013 - Front seat heating	126-128
1. Front seat heating	126
2. Heated driver seat control unit, temperature sensor, heated driver seat, driver seat cushion lateral support heater	127
3. Heated front passenger seat control unit, temperature sensor, heated front passenger seat cushion, heated front passenger seat backrest	128
014 - 1.9 l/66 kW - turbo diesel engine, engine code AGR	129-142
1. 1.9 l/66 kW - turbo diesel engine, engine code AGR	129
2. Alternator. starter	130

3. Diesel direct injection system control unit, terminal 30 voltage supply relay, glow plugs - engine	131
4. Diesel direct injection system control unit, glow plug relay, fuel temperature sender, metering adjuster, modulating piston movement sender	132
5. Diesel direct injection system control unit, kickdown switch, idling speed switch, accelerator position sender	133
6. Diesel direct injection system control unit, coolant temperature sender, air mass meter, intake manifold pressure sender, intake manifold temperature sender	134
7. Diesel direct injection system control unit, engine speed sender, needle lift sender	135
8. Diesel direct injection system control unit, variable intake manifold flap changeover valve, exhaust gas recirculation valve, charge pressure control solenoid valve, crankcase breather heater element	136
9. Diesel direct injection system control unit, cruise control system (CCS) switch, clutch pedal switch, commencement of injection valve, fuel shut-off valve	137
10. Diesel direct injection system control unit, coolant heater element, brake pedal switch for CCS/diesel direct injection system, brake light switch, high and low heat output relay(s)	138
11. Fuel gauge sender, coolant shortage indicator sender	139
12. Dash panel insert, oil pressure warning, speedometer sender	140
13. Dash panel insert, coolant temperature/coolant shortage sender, fuel gauge, rev. counter, speedometer, alternator warning lamp	141
14. Dash panel insert, multifunction display, ambient temperature indicator, self-diagnosis connection, cruise control system warning lamp, glow period warning lamp	142
015 - Airbag system, routing wiring on vehicles with wiring repaired using wiring harness repair set (only vehicles to model year 1999)	143-146
1. Airbag system, routing wiring on vehicles with wiring repaired using wiring harness repair set (only vehicles to model year 1999)	143
2. Airbag control unit, airbag coil connector, front airbag igniter, side airbag crash sensors	144
3. Airbag control unit, side airbag igniter, belt tensioner igniter	145
4. Airbag control unit, airbag warning lamp	146
016 - 4-speed automatic gearbox (AG4)	147-152
1. 4-speed automatic gearbox (AG4)	147
2. Starter inhibitor and reversing light relay	148
3. Automatic gearbox control unit, multifunction switch	149
4. Automatic gearbox control unit, solenoid valves, gearbox speed sender, gearbox oil temperature sender	150
5. Automatic gearbox control unit, vehicle speed sender	151
6. Automatic gearbox control unit, selector lever lock solenoid	152
017 - 4-speed automatic gearbox (AG4)	153-158
1. 4-speed automatic gearbox (AG4)	153
2. Starter inhibitor and reversing light relay	154
3. Automatic gearbox control unit, multifunction switch	155
4. Automatic gearbox control unit, solenoid valves, gearbox speed sender, kickdown switch, gearbox oil temperature sender	156
5. Automatic gearbox control unit, vehicle speed sender	157
6. Automatic gearbox control unit, selector lever lock solenoid	158
018 - 1.8 l/92 kW - Motronic, engine code AGN	159-171
1. 1.8 l/92 kW - Motronic, engine code AGN	159
2. Alternator, starter	160
3. Motronic control unit, ignition system	161
4. Motronic control unit, coolant temperature sender, Hall sender	162
5. Motronic control unit, throttle valve module, engine speed sender, power assisted steering pressure switch	163
6. Motronic control unit, knock sensor 1, knock sensor 2	164
7. Motronic control unit, crankcase breather heater element	165
8. Motronic control unit, injectors, air mass meter	166
9. Motronic control unit, Lambda probe, activated charcoal filter solenoid valve, variable intake manifold changeover valve, camshaft control valve	167
10. Fuel pump, fuel gauge sender, coolant shortage indicator sender	168
11. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, coolant temperature/coolant shortage indicator	169
12. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, self-diagnosis connection, alternator warning lamp	170
13. Dash panel insert, multifunction display, ambient temperature indicator	171
019 - Cruise control system (CCS)	172-175
1. Cruise control system (CCS)	172
2. Brake light switch. cruise control system brake pedal switch	173

3. Simos control unit, cruise control system (CCS) switch, clutch pedal switch	174
4. Simos control unit, throttle valve module	175
020 - Cruise control system (CCS)	176-180
1. Cruise control system (CCS)	176-177
2. Brake light switch, brake pedal switch for CCS	178
3. Motronic control unit, switch for cruise control system (CCS), clutch pedal switch	179
4. Motronic control unit, throttle valve control part	180
021 - Climatronic	181-188
1. Climatronic	181
2. Climatronic control unit, temperature flap positioning motor	182
3. Climatronic control unit, central flap positioning motor, footwell/defrost flap positioning motor	183
4. Climatronic control unit, air flow flap positioning motor, vent temperature sender, fresh air intake duct temperature sensor	184
5. Climatronic control unit, ambient temperature sensor, fresh air blower, fresh air blower control unit, sunlight penetration photo sensor	185
6. Climatronic control unit, air conditioner pressure switch	186
7. Radiator fan control unit, radiator fan, air conditioner magnetic coupling, air conditioner cut-off thermo-switch	187
8. Radiator fan control unit, radiator fan thermo switch, radiator fan relay	188
022 - Trailer towing	189-193
1. Trailer towing	189
2. Rear left turn signal, left reversing light, left tail light, brake light, rear fog light	190
3. Trailer towing socket, rear fog light cut-off	191
4. Rear right turn signal, right tail light, right brake light, Hi-level brake light, right reversing light	192
5. Dash panel insert, trailer towing warning lamp, rear fog light warning lamp, turn signal warning lamp	193
023 - Air conditioning system	194-198
1. Air conditioning system	194
2. Switch for fresh air blower, switch for fresh and recirculating air flap, fresh air blower, positioning motor for fresh and recirculating air flap	195
3. Radiator fan control unit, air conditioning system switch, air conditioning system pressure switch, air conditioning system shut-off thermo switch, ambient temperature switch	196
4. Radiator fan control unit, radiator fan, air conditioner system magnetic coupling	197
5. Radiator fan control unit, radiator fan thermo switch, radiator fan relay	198
024 - Air conditioning system	199-204
1. Air conditioning system	199-200
2. Fresh air blower switch, fresh air/ recirculating air flap switch, fresh air blower, fresh air/recirculating air flap positioning motor	201
3. Radiator fan control unit, air conditioning system switch, air conditioning system pressure switch, air conditioning system shut-off thermo switch, ambient temperature switch	202
4. Radiator fan control unit, radiator fan, air conditioner system magnetic coupling	203
5. Radiator fan control unit, radiator fan thermo switch, radiator fan relay	204
025 - Air conditioning system	205-209
1. Air conditioning system	205
2. Fresh air blower switch, fresh air/air recirculation flap switch, fresh air blower, fresh air/air recirculation flap positioning motor	206
3. Radiator fan control unit, air conditioning system switch, air conditioning system pressure switch, air conditioning system shut-off thermo switch, ambient temperature switch	207
4. Radiator fan control unit, radiator fan, air conditioner system magnetic coupling	208
5. Radiator fan control unit, radiator fan thermo switch, continued coolant circulation control unit, radiator fan run-on thermo switch, continued coolant circulation pump	209
026 - Air conditioning system	210-214
1. Air conditioning system	210
2. Fresh air blower switch, fresh air/air recirculation flap switch, fresh air blower, fresh air/air recirculation flap positioning motor	211
3. Radiator fan control unit, air conditioning system switch, ambient temperature switch	212
4. Radiator fan control unit, radiator fan, air conditioner system magnetic coupling	213
5. Radiator fan control unit, radiator fan, air conditioner system magnetic coupling	214
027 - Radiator fan, single speed	215-216
1. Radiator fan, single speed	215
2. Radiator fan, single speed	216
028 - Radiator fan, 2 speed	217-218
1. Radiator fan, 2 speed	217
2. Radiator fan, 2 speed	218
029 - Radiator fan. 2 speed. with fan run-on	219-221

1. Radiator fan, 2 speed, with fan run-on	219
2. Radiator fan control unit, radiator fan	220
3. Radiator fan control unit, radiator fan thermo switch, continued coolant circulation control unit, radiator fan run-on thermo switch, continued coolant circulation pump	221
030 - Radiator fan, 2 speed	222-223
1. Radiator fan, 2 speed	222
2. Radiator fan, 2 speed	223
031 - Telephone system	224-227
1. Telephone system	224
2. Radio, radio/telephone loudspeaker change-over relay, front loudspeakers	225
3. Radio, rear loudspeakers	226
4. Operating electronics control unit, aerial, microphone	227
032 - Convenience system	228-244
1. Convenience system	228
2. Driver door control unit, driver door window regulator, interior locking switch	229
3. Driver door control unit, driver side central locking lock unit, central locking warning lamp, left door warning lamp	230
4. Driver door control unit, electrically adjustable exterior mirror for driver door	231
5. Driver door control unit, mirror adjustment switch in models to April 1998, mirror adjustment changeover switch	232
6. Driver door control unit, mirror adjustment switch in models from May 1998, exterior mirror heater button, fold-in mirror switch	233
7. Front passenger door control unit, window regulator for front passenger door, front passenger side central locking lock unit	234
8. Front passenger door control unit, electrically adjustable exterior mirror for front passenger door, right door warning lamp	235
9. Rear left door control unit, rear left door window regulator, rear left central locking lock unit	236
10. Rear right door control unit, rear right door window regulator, rear right central locking lock unit	237
11. Front interior light, front and rear reading lights, illuminated vanity mirror (driver and front passenger sides)	238
12. Convenience system central control unit	239
13. Convenience system central control unit, sliding sunroof adjustment control unit, sliding sunroof adjustment regulator	240
14. Convenience system central control unit, rear lid central locking motor, rear lid remote release relay, rear lid release motor	241
15. Convenience system central control unit, rear lid release switch, luggage compartment light	242
16. Convenience system central control unit, rear lid handle release button, key operated switch to block release of rear lid remote, contact switch in lock cylinder	243
17. Convenience system central control unit	244
033 - Daytime running light	245-250
1. Daytime running light	245
2. Dash panel insert, turn signal switch, headlight dipper/flasher switch, parking light switch	246
3. Left headlight, left side light, front left turn signal, right headlight, right side light, front right turn signal	247
4. Light switch, rear fog light switch	248
5. Left brake light, rear fog light, left reversing light, left tail light, rear left turn signal	249
6. Right tail light, right brake light, rear right turn signal, right reversing light	250
034 - 1.8 l/110 kW - Motronic, engine code AGU	251-264
1. 1.8 l/110 kW - Motronic, engine code AGU	251
2. Alternator, starter	252
3. Ignition system	253
4. Motronic control unit, ignition system	254
5. Motronic control unit, coolant temperature sender, altitude sender, Hall sender	255
6. Motronic control unit, throttle valve module, engine speed sender, intake air temperature sender	256
7. Motronic control unit, knock sensor 1, knock sensor 2, power assisted steering pressure switch	257
8. Motronic control unit	258
9. Motronic control unit, injectors, air mass meter	259
10. Motronic control unit, activated charcoal filter system solenoid valve, clutch pedal switch, charge pressure control solenoid valve, Lambda probe	260
11. Crankcase breather heater element, fuel pump, fuel gauge sender, coolant shortage indicator sender	261
12. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, coolant temperature/coolant shortage indicator	262
13. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, self-diagnosis connection, alternator warning lamp	263

14. Dash panel insert, multifunction display, ambient temperature indicator	264
035 - Front seat heating, leather seat	265-268
1. Front seat heating, leather seat	265
2. Driver seat cushion lateral support heater, heated driver seat backrest	266
3. Heated driver seat control unit, temperature sensor, heated driver seat	267
4. Heated front passenger seat control unit, temperature sensor, heated front passenger seat cushion, front passenger seat cushion lateral support heater	268
036 - Central locking	269-279
1. Central locking	269
2. Mirror adjustment switch, electrically adjustable exterior mirror for driver's door	270
3. Central locking and anti-theft alarm control unit, electrically adjustable exterior mirror for front passenger door, central locking deadlock function warning lamp	271
4. Central locking and anti-theft alarm system control unit, driver side central locking lock unit, left door warning light	272
5. Central locking and anti-theft alarm system control unit, front passenger side central locking lock unit, right door warning light	273
6. Central locking and anti-theft alarm system control unit, rear left central locking lock unit	274
7. Central locking and anti-theft alarm system control unit, rear left central locking lock unit, rear lid central locking motor	275
8. Central locking and anti-theft alarm system control unit, sliding sunroof adjustment control unit, sliding sunroof adjustment regulator, luggage compartment light	276
9. Convenience system central control unit, front interior light, rear reading light, driver and front passenger side illuminated vanity mirrors	277
10. Central locking and anti-theft alarm system control unit, anti-theft alarm system	278
11. Central locking and anti-theft alarm system control unit	279
037 - Radio systems	280-283
1. Radio systems	280
2. Radio, CD changer, front loudspeakers	281
3. Radio, front loudspeakers, rear loudspeakers	282
4. Radio, aerial	283
038 - Heated washer jets	284-285
1. Heated washer jets	284
2. Heated washer jets	285
039 - Radio system "gamma" with CD changer and "Digital sound package"	286-291
1. Radio system "gamma" with CD changer and "Digital sound package"	286
2. Amplifier for 'Digital sound package', programme selection operating unit	287
3. Amplifier for 'Digital sound package', front loudspeakers	288
4. Amplifier for 'Digital sound package', rear loudspeakers	289
5. Radio, CD changer	290
6. Radio, aerial	291
040 - Radio-Navigation system (MFD) with colour display	292-295
1. Radio-Navigation system (MFD) with colour display	292
2. Control unit with display unit for navigation, dash panel insert	293
3. Control unit with display unit for radio and navigation, front loudspeakers	294
4. Control unit with display unit for radio and navigation, rear loudspeakers, aerial for radio/telephone, aerial for navigation (GPS)	295
041 - Automatic anti-dazzle interior mirror, rain sensor	296-299
1. Automatic anti-dazzle interior mirror, rain sensor	296
2. Automatic intermittent wash and wipe relay, automatic anti-dazzle interior mirror, rain sensor	297
3. Automatic intermittent wash/wipe relay, intermittent wiper switch, wiper motor	298
4. Rear window wiper motor, windscreen and rear window washer pump	299
042 - Headlight washer system	300-303
1. Headlight washer system	300
2. Headlight washer system	301
3. Automatic intermittent wash/wipe relay, intermittent wiper switch, wiper motor	302
4. Rear window wiper motor, windscreen and rear window washer pump	303
043 - Radio and navigation system with CD changer and "Digital Sound Package"	304-310
1. Radio and navigation system with CD changer and "Digital Sound Package"	304
2. Control unit with display for radio and navigation system, dash panel insert	305
3. Control unit with display for radio and navigation system, CD changer	306
4. Control unit with display for radio and navigation system, navigation aerial (GPS), radio/telephone aerial	307
5. 'Digital sound package' amplifier	308
6. 'Digital sound package' amplifier, front loudspeakers	309
7. 'Digital sound package' amplifier, rear loudspeakers	310
044 - Sliding/tilting sunroof (without convenience central locking system)	311-312

1. Sliding/tilting sunroof (without convenience central locking system)	311
2. Sliding sunroof adjustment control unit, sliding sunroof adjustment regulator	312
045 - Socket (12V)	313-314
1. Socket (12V)	313
2. 12 V socket	314
046 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stabilisation program (ESP)	315-322
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stabilisation program (ESP)	315
2. ABS/ABS control unit with EDL/TCS/ESP, TCS and ESP button	316
3. ABS/ABS control unit with EDL/TCS/ESP, steering angle sender	317
4. ABS/ABS control unit with EDL/TCS/ESP, speed sensor	318
5. ABS/ABS control unit with EDL/TCS/ESP, lateral acceleration sender, brake pressure sender, yaw rate sender, ABS hydraulic pump	319
6. ABS control unit with EDL/TCS/ESP, longitudinal acceleration sender, brake pressure solenoid valve, brake pressure solenoid trip switch	320
7. ABS control unit with EDL/TCS/ESP, handbrake warning switch, brake fluid level warning contact, brake light suppression relay	321
8. Control unit with display in dash panel insert, handbrake warning switch, brake system warning lamp, ABS warning lamp, TCS and ESP warning lamp	322
047 - Telephone system, (not for vehicles with radio-navigation system)	323-326
1. Telephone system, (not for vehicles with radio-navigation system)	323
2. Radio, front loudspeaker	324
3. Radio, rear loudspeakers	325
4. Operatig electrions control unit, aerial, microphone	326
048 - Radio systems	327-330
1. Radio systems	327
2. Radio, CD changer, front loudspeakers	328
3. Radio, front loudspeakers, rear loudspeakers	329
4. Radio, aerial	330
049 - Radio system "gamma" with CD changer and "Digital Sound Package"	331-336
1. Radio system "gamma" with CD changer and "Digital Sound Package"	331
2. 'Digital sound package' amplifier, program selection operating unit	332
3. 'Digital sound package' amplifier, front loudspeakers	333
4. 'Digital sound package' amplifier, rear loudspeakers	334
5. Radio, CD changer	335
6. Radio, aerial	336
050 - All-wheel drive (4Motion), models with a petrol engine	337-340
1. All-wheel drive (4Motion), models with a petrol engine	337
2. All-wheel drive control unit	338
3. All-wheel drive control unit, hydraulics temperature sender, oil pressure control motor, fuel pump, fuel gauge sender, handbrake warning switch	339
4. Dash panel insert, handbrake warning lamp, fuel gauge, coolant temperature gauge	340
051 - All-wheel drive (4Motion) models with a diesel engine	341-344
1. All-wheel drive (4Motion) models with a diesel engine	341
2. All-wheel drive control unit	342
3. All-wheel drive control unit, hydraulics temperature sender, oil pressure control motor, fuel pump, fuel pump relay, fuel gauge sender, oil pressure switch	343
4. Dash panel insert, handbrake warning lamp, fuel gauge, coolant temperature gauge, handbrake warning switch	344
052 - Central locking	345-357
1. Central locking	345
2. Mirror adjustment switch, electrically adjustable exterior mirror for driver's door	346
3. Electrically adjustable exterior mirror for front passenger side door	347
4. Central locking and anti-theft alarm system control unit, driver side central locking lock unit, left door warning lamp, central locking deadlock function warning lamp	348
5. Central locking and anti-theft alarm system control unit, front passenger side central locking lock unit, right door warning lamp	349
6. Central locking and anti-theft alarm system control unit, rear left central locking lock unit	350
7. Central locking and anti-theft alarm system control unit, rear right central locking lock unit, rear lid remote release relay, rear lid release motor	351
8. Central locking and anti-theft alarm system control unit, rear lid release switch, luggage compartment light	352
9. Central locking and anti-theft alarm system control unit, rear lid handle release button, key operated switch to block remote release of rear lid, rear lid central locking motor	353
10. Convenience svstem central control unit. slidina sunroof adiustment control unit. slidina	354



sunroof adjustment regulator	
11. Central locking and anti-theft alarm system control unit, front interior light, front and rear reading lights, illuminated vanity mirror (driver and front passenger sides)	355
12. Central locking and anti-theft alarm system control unit, anti-theft alarm system horn, central locking and anti-theft alarm system aerial, anti-theft alarm (ATA) system contact switch	356
13. Convenience system central control unit	357
053 - Telephone system (only models with radio and navigation system)	358-359
1. Telephone system (only models with radio and navigation system)	358
2. Operating electronics control unit, aerial, microphone	359
054 - Telematics with radio/navigation system	360-364
1. Telematics with radio/navigation system	360
2. Control unit with display unit for radio/navigation	361
3. Control unit with display unit for radio and navigation, telematics control unit, telematics operating unit	362
4. Telematics control unit, telematics operating unit	363
5. Telematics control unit, operating electronics control unit, control unit with display unit in dash panel insert	364
055 - 2.0 l/85 kW - Motronic, engine code AQY	365-375
1. 2.0 l/85 kW - Motronic, engine code AQY	365
2. Alternator, starter	366
3. Motronic control unit, ignition system	367
4. Motronic control unit, coolant temperature sender, Hall sender	368
5. Motronic control unit, throttle valve module, knock sensor 1, knock sensor 2	369
6. Motronic control unit, engine speed sender, injectors	370
7. Motronic control unit, secondary air pump	371
8. Motronic control unit, air mass meter, Lambda probes, activated charcoal filter system solenoid valve, fuel pump relay	372
9. Fuel pump, fuel gauge sender, coolant shortage indicator sender, crankcase breather heater element	373
10. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, coolant temperature/coolant shortage indicator, alternator warning lamp	374
11. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, multifunction display, ambient temperature indicator	375
056 - Cruise control system (CCS)	376-378
1. Cruise control system (CCS)	376
2. Motronic control unit, clutch pedal switch, brake light switch, brake pedal switch for CCS	377
3. Motronic control unit, cruise control system (CCS) switch, throttle valve module	378
057 - Memory for driver's seat and exterior mirror	379-387
1. Memory for driver's seat and exterior mirror	379
2. Seat adjustment control unit with memory, height adjustment button, longitudinal adjustment button, backrest adjustment button for driver's seat, Emergency 'OFF' switch for memory function	380
3. Seat adjustment control unit with memory, longitudinal adjustment motor, front height adjustment motor, rear height adjustment motor	381
4. Seat adjustment control unit with memory, backrest adjustment motor	382
5. Seat adjustment control unit with memory, self-diagnosis connection	383
6. Driver door control unit, electrically adjustable exterior mirror for driver door	384
7. Driver door control unit, mirror adjustment switch, fold-in mirror switch	385
8. Driver door control unit, front passenger door control unit	386
9. Front passenger door control unit, electrically adjustable exterior mirror for front passenger door	387
058 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS)	388-392
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS)	388
2. ABS control unit with EDL, brake light switch	389
3. ABS control unit with EDL, ABS hydraulic pump	390
4. ABS control unit with EDL, speed sensor	391
5. ABS control unit with EDL, traction control system switch, ABS warning lamp, brake system warning lamp, TCS warning lamp	392
059 - 1.8 l/110 kW - Motronic, engine code AQA	393-406
1. 1.8 l/110 kW - Motronic, engine code AQA	393
2. Alternator, starter	394
3. Motronic control unit, ignition system	395
4. Motronic control unit, coolant temperature sender, Hall sender, charge air pressure sender	396
5. Motronic control unit, throttle valve module, intake air temperature sender, throttle valve module angle sender (electric throttle control), knock sensor 1	397

6. Motronic control unit, engine speed sender, knock sensor 2, power assisted steering pressure switch, crankcase breather heater element	398
7. Motronic control unit, injectors, air mass meter	399
8. Motronic control unit, activated charcoal filter system solenoid valve, accelerator position sender, Lambda probe	400
9. Motronic control unit, continued coolant circulation pump	401
10. Motronic control unit, charge pressure control solenoid valve, turbocharger air recirculation valve, fuel pump relay	402
11. Motronic control unit, cruise control system (CCS) switch, clutch pedal switch, brake light switch, brake pedal switch for CCS	403
12. Fuel pump, fuel gauge sender, coolant shortage indicator sender	404
13. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, coolant temperature/coolant shortage warning lamp, electric power control fault lamp	405
14. Dash panel insert, coolant temperature gauge, fuel gauge, multifunction display, ambient temperature indicator, speedometer, self-diagnosis connection	406
060 - Radio with CD player	407-411
1. Radio with CD player	407
2. Radio, CD player	408
3. Radio, CD changer, front left loudspeaker	409
4. Radio, front loudspeakers, radio loudspeakers	410
5. Radio, aerial	411
061 - Anti-theft alarm system, interior monitor	412-416
1. Anti-theft alarm system, interior monitor	412
2. Convenience system central control unit, anti-theft alarm system	413
3. Convenience system central control unit, interior monitor deactivation switch, alarm horn	414
4. Convenience system central control unit, interior monitor sensor and sender, rear reading lights	415
5. Convenience system central control unit	416
062 - Telematics with radio system	417-421
1. Telematics with radio system	417
2. Radio	418
3. Radio, telematics control unit, telematics operating unit	419
4. Telematics control unit, telematics operating unit	420
5. Telematics control unit, operating electronics control unit, control unit with display in dash panel insert	421
063 - 1.4 l/55 kW - 4AV, engine code AHW, AKQ	422-431
1. 1.4 l/55 kW - 4AV, engine code AHW, AKQ	422
2. Alternator, starter	423
3. 4AV injection system control unit, ignition system	424
4. 4CV injection system control unit, crankcase breather heater element, coolant temperature sender, Hall sender	425
5. 4CV injection system control unit, throttle valve module, engine speed sender	426
6. 4AV injection system control unit, intake manifold pressure sender, intake manifold temperature sender, knock sensor, injectors	427
7. 4AV injection system control unit, Lambda probe, activated charcoal filter system solenoid valve, exhaust gas recirculation valve, fuel pump relay	428
8. Fuel pump, fuel gauge sender, coolant shortage indicator sender	429
9. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, coolant temperature/coolant shortage indicator, alternator warning lamp	430
10. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, self-diagnosis connection, multifunction display, ambient temperature indicator	431
064 - Climatronic	432-439
1. Climatronic	432
2. Climatronic control unit, temperature flap control motor	433
3. Climatronic control unit, control motor for central flap, control motor for footwell/defroster flap	434
4. Climatronic control unit, air flow flap control motor, vent temperature sensor, fresh air duct temperature sensor	435
5. Climatronic control unit, ambient air temperature sensor, fresh air blower, fresh air blower control unit, sunlight penetration photosensor	436
6. Climatronic control unit	437
7. Radiator fan control unit, radiator fan, air conditioning system magnetic clutch	438
8. Radiator fan control unit, thermal switch for radiator fan, high-pressure sender	439
065 - 1.6 l/74 kW - Simos, engine codes AEH, AKL	440-449
1. 1.6 l/74 kW - Simos, engine codes AEH, AKL	440
2. Alternator, starter	441
3. Simos control unit, ignition system	442

4. Simos control unit, crankcase breather heater element, coolant temperature sender, Hall sender	443
5. Simos control unit, throttle valve module, engine speed sender, power assisted steering pressure switch	444
6. Simos control unit, knock sensor, injectors	445
7. Simos control unit, Lambda probe, air mass meter, activated charcoal filter system solenoid valve, variable intake manifold changeover valve, fuel pump relay	446
8. Fuel pump, fuel gauge sender, coolant shortage indicator sender	447
9. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, coolant temperature/coolant shortage indicator, alternator warning lamp	448
10. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, multifunction display, ambient temperature indicator	449
066 - 1.8 l/92 kW - Motronic, engine code AGN	450-461
1. 1.8 l/92 kW - Motronic, engine code AGN	450
2. Alternator, starter	451
3. Motronic control unit, ignition system	452
4. Motronic control unit, coolant temperature sender, Hall sender	453
5. Motronic control unit, throttle valve module, engine speed sender, power assisted steering pressure switch	454
6. Motronic control unit, knock sensor 1, knock sensor 2	455
7. Motronic control unit, crankcase breather heater element	456
8. Motronic control unit, injectors, air mass meter	457
9. Motronic control unit, Lambda probe, activated charcoal filter solenoid valve, variable intake manifold changeover valve, camshaft control valve, fuel pump relay	458
10. Fuel pump, fuel gauge sender, coolant shortage indicator sender	459
11. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, coolant temperature/coolant shortage indicator, alternator warning lamp	460
12. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, multifunction display, ambient temperature indicator	461
067 - 1.8 l/110 kW - Motronic, engine code AGU	462-474
1. 1.8 l/110 kW - Motronic, engine code AGU	462
2. Alternator, starter	463
3. Ignition system	464
4. Motronic control unit, ignition system	465
5. Motronic control unit, coolant temperature sender, altitude sender, Hall sender	466
6. Motronic control unit, throttle valve module, engine speed sender, intake air temperature sender	467
7. Motronic control unit, knock sensor 1, knock sensor 2, power assisted steering pressure switch	468
8. Motronic control unit	469
9. Motronic control unit, injectors, air mass meter	470
10. Motronic control unit, activated charcoal filter system solenoid valve, clutch pedal switch, charge pressure control solenoid valve, Lambda probe, fuel pump relay	471
11. Crankcase breather heater element, fuel pump, fuel gauge sender, coolant shortage indicator sender	472
12. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, coolant temperature/coolant shortage indicator, alternator warning lamp	473
13. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, multifunction display, ambient temperature indicator	474
068 - 2.3 l/110 kW - Motronic, engine code AGZ	475-488
1. 2.3 l/110 kW - Motronic, engine code AGZ	475
2. Alternator, starter	476
3. Ignition system	477
4. Motronic control unit, ignition system	478
5. Motronic control unit, coolant temperature sender, variable intake manifold changeover valve, Hall sender, intake air temperature sender, crankcase breather heater element	479
6. Motronic control unit, throttle valve module, knock sensor 1, knock sensor 2	480
7. Motronic control unit, engine speed sender	481
8. Motronic control unit, injectors	482
9. Motronic control unit, cruise control system (CCS) switch, continued coolant circulation pump	483
10. Motronic control unit, secondary air pump motor, secondary air inlet valve, clutch pedal switch, cruise control system brake pedal switch, brake light switch	484
11. Motronic control unit, Lambda probe, air mass meter, activated charcoal filter system solenoid valve, fuel pump relay	485
12. Fuel pump, fuel gauge sender, coolant shortage indicator sender	486
13. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, coolant temperature/coolant shortage indicator, alternator warning lamp	487
14. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, multifunction display, ambient temperature indicator	488

201 - -Fitting locations: Position of relays and fuses - 3	489-496
1. Position of relays and fuses	489-496
1.1 Position of relays and fuses	489-496
1.1.1 Relay positions on relay plate:	489
1.1.2 Fuse locations on relay plate:	489
1.1.4 Fuse locations on 13 position additional relay carrier, left-handdrive vehicles:	490
1.1.6 Fuse on 13 position additional relay carrier, right-handdrive vehicles:	491-492
1.1.8 Fuses in fuse holder:	493
1.1.9 Fuses in fuse holder:	494
1.1.10 Fuses in fuse holder:	495-496
202 - -Fitting locations:Wiring harness coupling stations	497-499
1. Wiring harness coupling stations	497
2. Coupling station in protective housing in plenum chamber	498
3. Coupling stations on left and right-hand A-pillars	499
203 - -Fitting locations:Control units and relays	500-506
1. Control units and relays	500
2. Control unit for ABS/ABS with EDL	501
3. Central control unit for convenience system, Control unit for sliding roof adjustment	502
4. Control unit for Climatronic	503
5. Door control unit driver's and front passenger's sides	504
6. Door control unit rear left and rear right	505
7. Control unit for radiator fan, 2 speed with fan run-on	506
204 - -Fitting locations:Multi-pin connectors	507-515
1. Multi-pin connectors	507
2. On engine, On body	508
3. On engine	509
4. On the body	510
5. On the body	511
6. On the body	512
7. On the body	513
8. On the body	514
9. On the body	515
401 - -Fault finding programme:Battery discharges (Voltage leakage suspected)	516
1. Test prerequisites	516
402 - -Fault finding programme:Starter does not turn	517
1. Starter does not turn	517
403 - -Fault finding programme:Starter motor turns too slowly and does not crank engine	518
1. Test prerequisites	518
404 - -Fault finding programme:Alternator warning lamp does not go out as speed increases	519
1. Alternator warning lamp does not go out as speed increases	519
405 - -Fault finding programme:Alternator warning lamp does not light up when ignition is switched on	520
1. Test prerequisites	520
406 - -Fault finding programme:Checking alternator and voltage regulator	521-522
1. Contents, Checking function of freewheel coupling in ribbed belt pulley (for Diesel engines only)	521
2. Test prerequisites	522
407 - -Fault finding programme:Checking dual tone horn system	523-524
1. Test prerequisites	523
2. -Fault finding programme:Checking dual tone horn system	524
408 - -Fault finding programme:Checking fog lights	525-526
1. Test prerequisites	525
2. -Fault finding programme:Checking fog lights	526
409 - -Fault finding programme:Checking turn signals and hazard warning lights system	527-533
1. Test prerequisites	527
2. -Fault finding programme:Checking turn signals and hazard warning lights system	528
3. -Fault finding programme:Checking turn signals and hazard warning lights system	529
4. -Fault finding programme:Checking turn signals and hazard warning lights system	530
5. -Fault finding programme:Checking turn signals and hazard warning lights system	531
6. -Fault finding programme:Checking turn signals and hazard warning lights system	532
7. -Fault finding programme:Checking turn signals and hazard warning lights system	533
410 - -Fault finding programme:Checking additional heating heater elements (for vehicles with manual gearbox and engines codes AGP, ALH, AGR and AHF)	534-540
1. Function, Test prerequisites	534
2. -Fault finding programme:Checking additional heating heater elements (for vehicles with manual gearbox and engines codes AGP, ALH, AGR and AHF)	535
3. -Fault findina proaramme:Checkina additional heating heater elements (for vehicles with manual	536

gearbox and engines codes AGP, ALH, AGR and AHF)	
4. -Fault finding programme:Checking additional heating heater elements (for vehicles with manual gearbox and engines codes AGP, ALH, AGR and AHF)	537
5. -Fault finding programme:Checking additional heating heater elements (for vehicles with manual gearbox and engines codes AGP, ALH, AGR and AHF)	538
6. -Fault finding programme:Checking additional heating heater elements (for vehicles with manual gearbox and engines codes AGP, ALH, AGR and AHF)	539
7. -Fault finding programme:Checking additional heating heater elements (for vehicles with manual gearbox and engines codes AGP, ALH, AGR and AHF)	540
411 - - Fault finding programme: Checking front heated seat - 3	541-548
1. Checking front seat heating	541-548
1.1 Prerequisites and preparatory measures	541
1.2 Checking driver's heated seat:	541-543
1.3 Checking seat heating for front passenger seat	544-548
412 - -Fault finding programme:Checking windscreen wash/wipe system	549-553
1. Contents, Prerequisites	549
2. Checking windscreen wipe system	550
3. Checking windscreen washer system	551
4. -Fault finding programme:Checking windscreen wash/wipe system	552
5. -Fault finding programme:Checking windscreen wash/wipe system	553
413 - -Fault finding programme:Checking rear window wash/wipe system	554-557
1. Contents, Prerequisites	554
2. Checking rear window wipe system	555
3. Checking rear window washer system	556
4. -Fault finding programme:Checking rear window wash/wipe system	557
414 - -Fault finding programme:Checking headlight washer system	558-559
1. Prerequisites	558
2. -Fault finding programme:Checking headlight washer system	559
415 - -Fault finding programme:Checking heated front seats with leather covers	560-568
1. Contents, Test prerequisites	560
2. Checking left seat heating	561
3. -Fault finding programme:Checking heated front seats with leather covers	562
4. -Fault finding programme:Checking heated front seats with leather covers	563
5. -Fault finding programme:Checking heated front seats with leather covers	564
6. Checking right seat heating	565
7. -Fault finding programme:Checking heated front seats with leather covers	566
8. -Fault finding programme:Checking heated front seats with leather covers	567
9. -Fault finding programme:Checking heated front seats with leather covers	568
416 - -Fault finding programme:Checking rain sensor for windscreen wiper system	569-573
1. test prerequisites	569
2. Checking windscreen wiper system rain sensor	570
3. -Fault finding programme:Checking rain sensor for windscreen wiper system	571
4. -Fault finding programme:Checking rain sensor for windscreen wiper system	572
5. -Fault finding programme:Checking rain sensor for windscreen wiper system	573
417 - -Fault finding programme:Checking radio system	574-580
1. Contents	574
2. Radio not functioning, FM (UKW) reception distorted, poor or intermittent	575
3. One more loudspeakers not functioning	576
4. GALA (Speed dependant volume adaptation) not functioning, LED for anti-theft coding not flashing when radio is switched off	577
5. Checking roof aerial	578
6. Cassette reproduction dull or distorted	579
7. Auto-reverse continually switches back and forth or switches too early	580
418 - -Fault finding programme:Checking preparation for telephone	581-585
1. Test prerequisites	581
2. -Fault finding programme:Checking preparation for telephone	582
3. -Fault finding programme:Checking preparation for telephone	583
4. -Fault finding programme:Checking preparation for telephone	584
5. -Fault finding programme:Checking preparation for telephone	585
419 - -Fault finding programme:Checking cruise control system (CCS)	586-587
1. Contents	586
2. Activating or deactivating cruise control system	587
420 - -Fault finding programme:Checking fuel pump in four-wheel drive vehicles fitted with Diesel engine	588-589
1. Test prerequisites	588
2. -Fault finding programme:Checking fuel pump in four-wheel drive vehicles fitted with Diesel	589

engine	
421 - -Fault finding programme:Checking telephone system	590-599
1. Checking telephone system	590
2. -Fault finding programme:Checking telephone system	591
3. -Fault finding programme:Checking telephone system	592
4. -Fault finding programme:Checking telephone system	593
5. -Fault finding programme:Checking telephone system	594
6. -Fault finding programme:Checking telephone system	595
7. -Fault finding programme:Checking telephone system	596
8. -Fault finding programme:Checking telephone system	597
9. -Fault finding programme:Checking telephone system	598
10. -Fault finding programme:Checking telephone system	599
422 - -Fault finding programme:Checking telephone system	600-607
1. Checking telephone system	600
2. -Fault finding programme:Checking telephone system	601
3. -Fault finding programme:Checking telephone system	602
4. -Fault finding programme:Checking telephone system	603
5. -Fault finding programme:Checking telephone system	604
6. -Fault finding programme:Checking telephone system	605
7. -Fault finding programme:Checking telephone system	606
8. -Fault finding programme:Checking telephone system	607