



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 General information</b> .....	<b>1</b>
1.1 Starting conditions for auxiliary/supplementary heater .....	1
1.2 Notes for vehicles with a start/stop system .....	2
1.3 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system ..	2
1.4 Type plates .....	3
<b>2 Safety information</b> .....	<b>4</b>
2.1 Safety precautions when working on vehicles with auxiliary/supplementary heater .....	4
2.2 Safety measures when working on vehicles with a start/stop system .....	4
2.3 Safety precautions during work on fuel system .....	4
<b>3 Repair instructions</b> .....	<b>6</b>
3.1 Notes on general repairs on vehicles with auxiliary heater .....	6
<b>82 - Supplementary heating</b> .....	<b>7</b>
<b>1 Overview of fitting locations - auxiliary/supplementary heater</b> .....	<b>7</b>
1.1 Fittings location overview - auxiliary/supplementary heater components .....	7
<b>2 Auxiliary/supplementary heater</b> .....	<b>9</b>
2.1 Overview of fitting locations - auxiliary/supplementary heater .....	9
2.2 Assembly overview - auxiliary/supplementary heater attachments .....	11
2.3 Assembly overview - auxiliary/supplementary heater, internal .....	12
2.4 Removing and installing auxiliary/supplementary heater .....	13
2.5 Dismantling and assembling auxiliary/supplementary heater .....	17
2.6 Removing and installing air intake silencer .....	19
2.7 Removing and installing circulation pump V55 .....	19
2.8 Removing and installing exhaust system .....	22
2.9 Removing and installing auxiliary/supplementary heater bracket .....	22
2.10 Removing and installing covers for auxiliary heater control unit J364 .....	23
2.11 Removing and installing glow plug with flame monitor Q8 .....	24
2.12 Removing and installing temperature sensor G18 and overheating sensor G189 ..	24
2.13 Connector pin assignment for auxiliary/supplementary heater .....	25
2.14 Dismantling and assembling burner unit .....	25
2.15 Removing and installing auxiliary heater control unit J364 with combustion air blower V6 .....	26
<b>3 Coolant circuit with auxiliary/supplementary heater</b> .....	<b>28</b>
3.1 Connection diagram - coolant hoses .....	28
3.2 Bleeding coolant circuit of auxiliary/supplementary heater .....	29
3.3 Removing and installing coolant pipes for auxiliary/supplementary heater .....	30
<b>4 Fuel supply system</b> .....	<b>33</b>
4.1 Overview of fitting locations - fuel supply system .....	33
4.2 Checking fuel delivery rate .....	34
4.3 Removing and installing metering pump V54 .....	35
<b>5 Regulation of auxiliary/supplementary heater</b> .....	<b>39</b>
5.1 Functional description .....	39
5.2 Supplementary heater mode .....	40
5.3 Auxiliary heater mode .....	40
5.4 Switching off auxiliary/supplementary heater .....	40
<b>6 Other controlling and regulating components</b> .....	<b>41</b>
6.1 Removing and installing ambient temperature sensor G17 .....	41
6.2 Removing and installing remote control receiver for auxiliary coolant heater R149 .....	41
6.3 Functional description of remote control for auxiliary/supplementary heater .....	43