



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
98 - Assist systems	3
1 Safety information and repair notes	3
1.1 Safety information	3
1.2 Repair instructions	3
2 Fitting locations	4
2.1 Overview of fitting locations – senders, sensors and control units, Golf	4
2.2 Overview of fitting locations – senders, sensors and control units, Golf Estate	7
3 Senders/sensors/control units	10
3.1 Removing and installing front parking aid senders [G252]/[G253]/[G254]/[G255]	10
3.2 Removing and installing rear parking aid senders [G203]/[G204]/[G205]/[G206]	11
3.3 Removing and installing front park assist steering senders [G568]/[G569]	13
3.4 Removing and installing rear park assist steering senders [G716]/[G717]	14
3.5 Removing and installing adaptive cruise control unit [J428]	15
3.6 Removing and installing parking aid control unit [J446]	16
3.7 Removing and installing lane change assist control unit [J769]/[J770]	18
3.8 Removing and installing lane change assist warning lamp in exterior mirror	19
3.9 Removing and installing reversing camera [R189]	19
3.10 Removing and installing front camera for driver assist systems [R242]	20
3.11 Removing and installing windscreen heater for front sensors [Z113]	20
4 Adaptive cruise control	22
4.1 Necessity of calibration	22
4.2 Adjusting/calibrating adaptive cruise control unit	23
5 Reversing camera system	27
5.1 Calibrating reversing camera R189	27
6 Front camera for driver assist systems	32
6.1 Calibrating front camera for driver assist systems [R242]	32