



Contents

00 - Technical data	1
1 Basic instructions	1
1.1 Original joint	1
1.2 Used joining techniques	1
2 Vehicle identification data	3
2.1 Vehicle identification number	3
2.2 Type plate	4
2.3 Vehicle data sticker	5
3 Safety information	6
4 Gas vehicles	7
5 Moulded foam inserts	8
6 Galvanized body parts, high- and higher-strength and hot-formed body panels	10
7 Laser welding	13
8 Spot welding	14
9 Gaps	15
9.1 Body, front	15
9.2 Body, centre	16
9.3 Body, rear	18
10 Body dimensions	20
10.1 Body, front	20
10.2 Body, centre	21
10.3 Body, rear	26
10.4 Floor panel, front	27
10.5 Floor panel, centre	28
10.6 Floor panel, rear	29
11 Straightening bracket set	31
11.1 Overview	31
12 Portal gauge	32
12.1 Setup overview of complete body	32
50 - Body - front	34
1 Overview of parts	34
2 Renewing right bracket	35
2.1 Tools	36
2.2 Removing	36
2.3 Installing	37
3 Repairing threads for securing subframe	40
3.1 Contents of thread repair kit	41
3.2 Repairing threads	42
4 Renewing mounting bracket for subframe	46
4.1 Tools	47
4.2 Removing	47
4.3 Installing	48
5 Renewing front longitudinal member end plate	51
5.1 Tools	52
5.2 Removing	52
5.3 Installing	53
6 Renewing upper wheel housing longitudinal member	56
6.1 Tools	57
6.2 Removing	57



6.3	Installing	58
7	Renewing upper wheel housing longitudinal member - part section	62
7.1	Tools	63
7.2	Removing	63
7.3	Installing	64
8	Renewing upper inner wheel housing longitudinal member	67
8.1	Tools	68
8.2	Removing	68
8.3	Installing	70
9	Renewing front wheel housing	74
9.1	Tools	75
9.2	Removing	75
9.3	Installing	77
10	Renewing front left longitudinal member	82
10.1	Tools	83
10.2	Removing	83
10.3	Installing	85
11	Renewing front right longitudinal member	92
11.1	Tools	93
11.2	Removing	93
11.3	Installing	95
12	Renewing front left longitudinal member (part section)	102
12.1	Tools	103
12.2	Removing	103
12.3	Installing	105
13	Renewing front right longitudinal member (part section)	110
13.1	Tools	111
13.2	Removing	111
13.3	Installing	113
14	Renewing studs	117
51 - Body - centre		118
1	Overview of parts	118
2	Renewing roof - vehicles with no panorama tilting sunroof	119
2.1	Tools	120
2.2	Removing	120
2.3	Installing	124
3	Renewing roof - vehicles with panorama tilting sunroof	135
3.1	Tools	136
3.2	Removing	136
3.3	Installing	140
4	Renewing A-pillar	150
4.1	Tools	152
4.2	Removing	152
4.3	Installing	154
5	Renewing end plate for wing	159
5.1	Tools	160
5.2	Removing	160
5.3	Installing	161
6	Renewing upper A-pillar reinforcement (part section)	164
6.1	Tools	165
6.2	Removing	165
6.3	Installing	168



7	Renewing A-pillar reinforcement (part section)	176
7.1	Tools	177
7.2	Removing	177
7.3	Installing	179
8	Renewing B-pillar	183
8.1	Tools	185
8.2	Type plate	185
8.3	Removing	186
8.4	Installing	188
9	Renewing B-pillar reinforcement	192
9.1	Tools	193
9.2	Type plate	193
9.3	Removing	194
9.4	Installing	196
10	Renewing inner B-pillar	201
10.1	Tools	202
10.2	Removing	202
10.3	Installing	203
11	Renewing outer side member	207
11.1	Tools	208
11.2	Type plate	208
11.3	Removing	209
11.4	Installing	210
12	Renewing side member reinforcement	216
12.1	Tools	217
12.2	Removing	217
12.3	Installing	219
13	Renewing side member cover plate	223
13.1	Tools	224
13.2	Removing	224
13.3	Installing	225
53 - Body - rear		229
1	Overview of parts	229
2	Renewing rear cross panel	230
2.1	Tools	231
2.2	Removing	231
2.3	Installing	233
3	Renewing rear cross member	238
3.1	Tools	239
3.2	Removing	239
3.3	Installing	240
4	Renewing sealing channel support	244
4.1	Tools	245
4.2	Removing	245
4.3	Installing	246
5	Renewing sealing channel reinforcement	250
5.1	Tools	251
5.2	Removing	251
5.3	Installing	253
6	Renewing tail light mounting	256
6.1	Tools	257
6.2	Removing	257
6.3	Installing	258



7	Renewing luggage compartment floor	262
7.1	Tools	263
7.2	Removing	263
7.3	Installing	265
8	Renewing C-pillar reinforcement (part section)	269
8.1	Tools	270
8.2	Removing	271
8.3	Installing	272
9	Renewing rear longitudinal member (part section)	275
9.1	Tools	276
9.2	Removing	276
9.3	Installing	278
10	Renewing rear longitudinal member (part section - second part section of torsion beam axle)	281
10.1	Tools	282
10.2	Moulded foam inserts	282
10.3	Removing	282
10.4	Installing	286
11	Renewing rear longitudinal member (part section - second part section of multi-link suspension)	298
11.1	Tools	299
11.2	Moulded foam inserts	299
11.3	Removing	299
11.4	Installing	303
12	Renewing side panel (part section)	315
12.1	Tools	317
12.2	Removing	317
12.3	Installing	320
13	Renewing outer wheel housing liner	326
13.1	Tools	327
13.2	Removing	327
13.3	Installing	330